frontline
Debug Communications Faster™

User Manual

Revision Date: 11/20/2015

Copyright © 2000-2015 Frontline Test Equipment, Inc.

FTS, Frontline, Frontline Test System, ComProbe Protocol Analysis System and ComProbe are registered trademarks of Frontline Test Equipment, Inc.

The following are trademarks of Frontline Test Equipment, Inc.

- FTS4BT

The Bluetooth SIG, Inc. owns the Bluetooth® word mark and logos, and any use of such marks by Frontline is under license. All other trademarks and registered trademarks are property of their respective owners.

Contents

Chapter 1 ComProbe Hardware & Software **1**
1.1 What is in this manual 2
1.2 Computer Minimum System Requirements 2
1.3 Software Installation 2
1.3.1 From CD: 2
1.3.2 From Download: 3
Chapter 2 Getting Started **4**
2.1 FTS4BT 4
2.2 Data Capture Methods 4
2.2.1 Opening ComProbe Data Capture Method 4
2.2.2 ComProbe® FTS4BT Data Capture Methods [top] 6
2.3 Control Window 7
2.3.1 Control Window Toolbar 8
2.3.2 Configuration Information on the Control Window 9
2.3.3 Status Information on the Control Window 9
2.3.4 Frame Information on the Control Window 9
2.3.5 Control Window Menus 10
2.3.6 Minimizing Windows 13
Chapter 3 Configuration Settings **14**
3.1 FTS4BT Configuration 14
3.1.1 FTS4BT Hardware Settings 14
3.1.1.1 Determining Hardware Settings 14
3.1.1.2 FTS4BT-USB Datasource 15
3.1.1.3 Sniffing the Microsoft Keyboard and Mouse 15
3.1.2 FTS4BT I/O Datasource Settings 16
3.1.2.1 Air Data Source Dialog 16
3.1.2.2 BluetoothI/O Settings 17
3.1.2.2.1 Selecting a Synchronization Mode 18
3.1.2.2.2 Specifying the Synchronization Device 19
3.1.2.2.3 Encryption 19

3.1.2.2.4 Capture Filtering 21
3.1.2.2.5 Advanced I/O Settings 21
3.1.3 Using more than one additional ComProbe FTS4BT for sniffing Scatternets 22
3.2 Decoder Parameters 23
3.2.1 Decoder Parameter Templates 25
3.2.1.1 Select and Apply a Decoder Template 25
3.2.1.2 Adding a New or Saving an Existing Template 26
3.2.1.3 Deleting a Template 26
3.2.2 Selecting A2DP Decoder Parameters 27
3.2.3 AVDTP Decoder Parameters 27
3.2.3.1 About AVDTP Decoder Parameters 27
3.2.3.2 AVDTP Missing Decode Information 29
3.2.3.3 AVDTP Override Decode Information 30
3.2.4 L2CAP Decoder Parameters 32
3.2.4.1 About L2CAP Decoder Parameters 32
3.2.4.2 L2CAP Override Decode Information 33
3.2.5 RFCOMM Decoder Parameters 34
3.2.5.1 About RFCOMM Decoder Parameters 34
3.2.5.2 RFCOMM Missing Decode Information 35
3.2.5.3 RFCOMM Override Decode Information 36
Chapter 4 Capturing and Analyzing Data 38
4.1 Capture Data 38
4.1.1 Air Sniffing: Positioning Devices 38
4.1.2 Capturing Data to Disk - General Procedure 40
4.1.3 Capturing Data with BPA 500 Devices 42
4.1.4 Extended Inquiry Response 44
4.2 Protocol Stacks 45
4.2.1 Protocol Stack Wizard 46
4.2.2 Creating and Removing a Custom Stack 47
4.2.3 Reframing 48
4.2.4 Unframing 48

4.2.5 How the Analyzer Auto-traverses the Protocol Stack 49
4.2.6 Providing Context For Decoding When Frame Information Is Missing 49
4.3 Analyzing Byte Level Data 50
4.3.1 Event Display 50
4.3.2 The Event Display Toolbar 51
4.3.3 Opening Multiple Event Display Windows 53
4.3.4 Calculating CRCs or FCSs 53
4.3.5 Calculating Delta Times and Data Rates 53
4.3.6 Switching Between Live Update and Review Mode 54
4.3.7 Data Formats and Symbols 54
4.3.7.1 Switching Between Viewing All Events and Viewing Data Events 54
4.3.7.2 Switching Between Hex, Decimal, Octal or Binary 55
4.3.7.3 Switching Between ASCII, EBCDIC, and Baudot 56
4.3.7.4 Selecting Mixed Channel/Sides 56
4.3.7.5 List of all Event Symbols 57
4.3.7.6 Font Size 58
4.4 Analyzing Protocol Decodes 59
4.4.1 Frame Display Window 59
4.4.1.1 Frame Display Toolbar 62
4.4.1.2 Frame Display Status Bar 65
4.4.1.3 Hiding and Revealing Protocol Layers in the Frame Display 65
4.4.1.4 Physical vs. Logical Byte Display 66
4.4.1.5 Sorting Frames 66
4.4.1.6 Frame Display - Find 66
4.4.1.7 Synchronizing the Event and Frame Displays 68
4.4.1.8 Working with Multiple Frame Displays 69
4.4.1.9 Working with Panes on Frame Display 69
4.4.1.10 Frame Display - Byte Export 69
4.4.1.11 Panes in the Frame Display 71
4.4.1.11.1 Summary Pane 71
4.4.1.11.2 Customizing Fields in the Summary Pane 73

4.4.1.11.3 Frame Symbols in the Summary Pane 74
4.4.1.11.4 Decode Pane 74
4.4.1.11.5 Radix or Hexadecimal Pane 75
4.4.1.11.6 Character Pane 75
4.4.1.11.7 Binary Pane 76
4.4.1.11.8 Event Pane 76
4.4.1.11.9 Change Text Highlight Color 77
4.4.1.12 Protocol Layer Colors 77
4.4.1.12.1 Data Byte Color Notation 77
4.4.1.12.2 Changing Protocol Layer Colors 77
4.4.1.13 Filtering 78
4.4.1.13.1 Display Filters 78
4.4.1.13.1.5 Defining Node and Conversation Filters
4.4.1.13.1.6 The Difference Between Deleting and Hiding Display Filters
4.4.1.13.1.7 Editing Filters
4.4.1.13.2 Connection Filtering 87
4.4.1.13.2.1 Creating a Connection Filter
4.4.1.13.2.2 Connection Filter Display
4.4.1.13.3 Protocol Filtering from the Frame Display 92
4.4.1.13.3.1 Quick Filtering on a Protocol Layer
4.4.1.13.3.2 Easy Protocol Filtering
4.4.2 Bluetooth Timeline 93
4.4.2.1 Bluetooth Timeline Packet Depiction 94
4.4.2.2 Bluetooth Timeline Packet Navigation and Selection 98
4.4.2.3 Bluetooth Timeline Toolbar 98
4.4.2.4 Bluetooth Timeline Menu Bar 99
4.4.2.5 Bluetooth Timeline Visual Elements 101
4.4.2.6 Bluetooth Timeline Zooming 103
4.4.2.7 Bluetooth Timeline Throughput Displays 103
4.4.2.7.1 Bluetooth Timeline Average Payload Throughput 104
4.4.2.7.2 Bluetooth Timeline 1 Second Throughput Indicators 104

4.4.2.7.3 Average Payload Throughput (bits/s) (Selected) 104
4.4.2.7.4 Bluetooth Payload Throughput Over Time Graph 105
4.4.2.8 Export Payload Throughput Over Time 106
4.4.2.9 Object Throughput Stats File 106
4.4.2.10 Bluetooth Timeline Discontinuities 107
4.4.2.11 Legend 108
4.4.2.12 Bluetooth Timeline: Packets Missing Bluetooth Clock 108
4.4.3 About The Message Sequence Chart (MSC) 109
4.4.3.1 Message Sequence Chart - Search 114
4.4.3.2 Message Sequence Chart - Go To Frame 115
4.4.3.3 Message Sequence Chart - First Error Frame 115
4.4.3.4 Message Sequence Chart - Printing 116
4.5 Packet Error Rate Statistics 118
4.5.1 Packet Error Rate - Channels 119
4.5.2 Packet Error Rate - Pie Chart and Expanded Chart 121
4.5.3 Packet Error Rate - Legend 122
4.5.4 Packet Error Rate - Additional Statistics 123
4.5.5 Packet Error Rate - Sync Selected Packets With Other Windows 123
4.5.6 Packet Error Rate - Export 123
4.5.7 Packet Error Rate - Scroll Bar 124
4.5.8 Packet Error Rate - Excluded Packets 126
4.6 Data/Audio Extraction 127
Chapter 5 Navigating and Searching the Data 131
5.1 Find 131
5.1.1 Searching within Decodes 132
5.1.2 Searching by Pattern 134
5.1.3 Searching by Time 136
5.1.4 Using Go To 138
5.1.5 Searching for Special Events 139
5.1.6 Searching by Signal 140
5.1.7 Searching for Data Errors 144

5.1.8 Find - Bookmarks 146
5.1.9 Changing Where the Search Lands 147
5.1.10 Subtleties of Timestamp Searching 148
5.2 Bookmarks 148
5.2.1 Adding, Modifying or Deleting a Bookmark 148
5.2.2 Displaying All and Moving Between Bookmarks 149
Chapter 6 Saving and Importing Data 151
6.1 Saving Your Data 151
6.1.1 Saving the Entire Capture File 151
6.1.2 Saving the Entire Capture File with Save Selection 152
6.1.3 Saving a Portion of a Capture File 153
6.2 Adding Comments to a Capture File 153
6.3 Confirm Capture File (CFA) Changes 154
6.4 Loading and Importing a Capture File 154
6.4.1 Loading a Capture File 154
6.4.2 Importing Capture Files 155
6.5 Printing 155
6.5.1 Printing from the Frame Display/HTML Export 155
6.5.2 Printing from the Event Display 157
6.6 Exporting 158
6.6.1 Frame Display Export 158
6.6.2 Exporting a File with Event Display Export 159
6.6.2.1 Export Filter Out 161
6.6.2.2 Exporting Baudot 161
Chapter 7 General Information 162
7.1 System Settings and Progam Options 162
7.1.1 System Settings 162
7.1.1.1 System Settings - Disabled/Enabled Options 164
7.1.1.2 Advanced System Options 164
7.1.1.3 Selecting Start Up Options 165
7.1.2 Changing Default File Locations 166

7.1.3 Side Names 168
7.1.4 Timestamping 169
7.1.4.1 Timestamping Options 169
7.1.4.2 Enabling/Disabling Timestamp 170
7.1.4.3 Changing the Timestamp Resolution 170
7.1.4.4 Switching Between Relative and Absolute Time 171
7.1.4.5 Displaying Fractions of a Second 172
7.2 Technical Information 172
7.2.1 Performance Notes 172
7.2.2 BTSnoop File Format 173
7.2.3 Progress Bars 175
7.2.4 Event Numbering 176
7.2.5 Useful Character Tables 176
7.2.5.1 ASCII Codes 176
7.2.5.2 Baudot Codes 177
7.2.5.3 EBCDIC Codes 177
7.2.5.4 Communication Control Characters 177
7.2.6 The Frontline Serial Driver 179
7.2.7 DecoderScript Overview 179
7.2.8 Bluetooth low energy ATT Decoder Handle Mapping 180
7.3 Contacting Technical Support 181
Appendicies 182
Appendix A: Application Notes 184
A.1 Bluetooth Virtual Sniffing 186
A.1.1 Introduction 186
A.1.2 Why HCI Sniffing and Virtual Sniffing are Useful 186
A.1.3 Bluetooth Sniffing History 187
A.1.4 Virtual Sniffing—What is it? 187
A.1.5 The Convenience and Reliability of Virtual Sniffing 188
A.1.6 How Virtual Sniffing Works 188
A.1.7 Virtual Sniffing and Bluetooth Stack Vendors 188

A.1.8 Case Studies: Virtual Sniffing and Bluetooth Mobile Phone Makers 189
A.1.9 Virtual Sniffing and You 189

List of Figures

Figure 2.1 - Desktop Folder Link 5
Figure 2.2 - ComProbe Analyzer Control Window 7
Figure 3.1 - Select Set Initial Decoder Parameters... from Control window 24
Figure 3.2 - Tabs for each decoder requiring parameters. 24
Figure 3.3 - Set Subsequent Decoder Parameters... from Control window 25
Figure 3.4 - Example: Set Subsequent Decode for Frame #52, RFCOMM 25
Figure 3.5 - A2DP Decoder Settings 27
Figure 3.6 - AVDTP parameters tab 28
Figure 3.7 - Parameters Added to Decoder 28
Figure 3.8 - Look in Decoder pane for profile hints 29
Figure 3.9 - AVDTP Override of Frame Information, Item to Carry 31
Figure 3.10 - AVDTP Override of Frame Information, Media Codec Selection 31
Figure 3.11 - L2CAP Decoder parameters tab 32
Figure 3.12 - Parameters Added to Decoder 33
Figure 3.13 - RFCOMM parameters tab 34
Figure 3.14 - Parameters Added to Decoder 35
Figure 3.15 - Set Subsequent Decoder Parameters selection list 37
Figure 4.1 - Devices Equally Spaced in the Same Horizontal Plane 39
Figure 4.2 - Example: Poor Capture Environment 40
Figure 4.3 - Packet Transfer Dialog 42
Figure 4.4 - BPA 500 Datasource Dialog 42
Figure 4.5 - Frame Display Extended Inquire Response 45
Figure 4.6 - Format Menu 55
Figure 4.7 - Header labels, right click 55
Figure 4.8 - Data display right click menu 56
Figure 4.9 - Event Display Options menu 59

Figure 4.10 - Event Display Font Size Selection 59
Figure 4.11 - Frame Display with all panes active 60
Figure 4.12 - Frame Display Find text entry field 66
Figure 4.13 - Search/Find Dialog 67
Figure 4.14 - Frame Display File menu, Byte Export 70
Figure 4.15 - Byte Export dialog 70
Figure 4.16 - Save As dialog 71
Figure 4.17 - Sample Exported Frames Text File 71
Figure 4.18 - Example Protocol Tags 72
Figure 4.19 - Summary pane (right) with Tooltip on Column 5 (Tran ID) 73
Figure 4.20 - Frame Display Protocol Layer Color Selector 78
Figure 4.21 - Example: Set Conditions Self Configuring Based on Protocol Selection 80
Figure 4.22 - Example: Set Conditions Self Configuring Based on Frame Range 80
Figure 4.23 - Two Filter Conditions Added with an AND Operator 82
Figure 4.24 - Save Named Filter Condition Dialog 82
Figure 4.25 - Using Named Filters Section of Quick Filters to Show/Hide Filters 85
Figure 4.26 - Set Condition Dialog in Advanced View 86
Figure 4.27 - Rename Filters Dialog 87
Figure 4.28 - Connection Filter from the Frame Display Menu 88
Figure 4.29 - Connection Filter from the Frame Display Toolbar right-click 88
Figure 4.30 - Connection Filter from the Frame Display Pane right-click 89
Figure 4.31 - Connection Filter from frame selection right-click 90
Figure 4.32 - Front Display: Filtered on Access Address 0x8e89bed6 91
Figure 4.33 - Unfiltered: Capture File with Classic, low energy, and 802.11 92
Figure 4.34 - Connection Filter selecting All 802.11 frames, front 92
Figure 4.35 - Frame Display Quick Filtering and Hiding Protocols Dialog 93
Figure 4.36 - Bluetooth Timeline window 94
Figure 4.37 - Bluetooth Timeline Packet Depiction with Packet Information Shown 94
Figure 4.38 - Missing packets message in timeline pane. 109
Figure 4.39 - Message Sequence Chart Window 109
Figure 4.40 - Classic and LE tabs 110

Figure 4.41 - Frame# and Time Display, inside red box. 111
Figure 4.42 - MSC Synchronization with Frame Display 112
Figure 4.43 - Control and Signaling Frames Summay 112
Figure 4.44 - Packet Layers Shown in Different Colors 113
Figure 4.45 - Right-Click in Ctrl Summary to Display Show in MSC 113
Figure 4.46 - MSC View of Selected Packet from Ctrl Summary 113
Figure 4.47 - Return to Text View Using Right-Click Menu 114
Figure 4.48 - Highlighted First Search Result 115
Figure 4.49 - Message Sequence Chart Print Preview 117
Figure 4.50 - Print Preview Toolbar 117
Figure 4.51 - Classic Bluetooth PER Stats Window 119
Figure 4.52 - Classic Bluetooth Packet Error Rate Channels 120
Figure 4.53 - Save As dialog in PER Stats Export 124
Figure 4.54 - PER Stats Scroll Bar 125
Figure 4.55 - Example: Excluded Packets Message in Scroll Bar (Classic Bluetooth) 127
Figure 5.1 - Find Dialog 131
Figure 5.2 - Find Decode Tab Search for String 132
Figure 5.3 - Find Decode Tab Side Restriction 133
Figure 5.4 - Find Pattern Tab 135
Figure 5.5 - Find Pattern Tab Side Restrictions 135
Figure 5.6 - Find by Time tab 136
Figure 5.7 - Find Go To tab 138
Figure 5.8 - Find Special Events tab 140
Figure 5.9 - Find Signal tab. 141
Figure 5.10 - Find Signal Tab 142
Figure 5.11 - Find Error tab. 144
Figure 5.12 - Find Bookmark tab. 147
Figure 5.13 - Bookmarked Frame (3) in the Frame Display 148
Figure 5.14 - Find Window Bookmark tab Used to Move Around With Bookmarks 150
Figure 6.1 - Windows Save dialog 152
Figure 6.2 - Frame Display Print Dialog 156

Figure 6.3 - Frame Display Print Preview Dialog 157
Figure 6.4 - Event Display Print Dialog 158
Figure 6.5 - Event Display Export Example: .csv file. 159
Figure 6.6 - Example: .csv Event Display Export, Excel spreadsheet 161
Figure 7.1 - System Settings Single File Mode 163
Figure 7.2 - Advanced System Options dialog 165
Figure 7.3 - Start Up Options dialog 166
Figure 7.4 - File Locations dialog 167
Figure 7.5 - File Locations Browse dialog 167
Figure 7.6 - Example: Side Names Where "Slave" and "Master" are current 169

Chapter 1 ComProbe Hardware & Software

Frontline Test Equipment ComProbe family of protocol analyzers work with the following technologies.

- Classic Bluetooth®
- *Bluetooth* low energy
- Dual Mode *Bluetooth* (simultaneous Classic and low energy)
- *Bluetooth* Coexistence with 802.11
- *Bluetooth* HCI (USB, SD, High Speed UART)
- NFC
- 802.11 (Wi-Fi)
- SD
- USB
- HSU (High Speed UART)

The ComProbe hardware interfaces with your computer that is running our robust software engine called the ComProbe Protocol Analysis System or ComProbe software. Whether you are sniffing the air or connecting directly to the chip Frontline analyzers use the same powerful ComProbe software to help you test, troubleshoot, and debug communications faster.

ComProbe software is an easy to use and powerful protocol analysis platform. Simply use the appropriate ComProbe hardware or write your own proprietary code to pump communication streams directly into the ComProbe software where they are decoded, decrypted, and analyzed. Within the ComProbe software you see packets, frames, events, coexistence, binary, hex, radix, statistics, errors, and much more.

This manual is a user guide that takes you from connecting and setting up the hardware through all of the ComProbe software functions for your ComProbe hardware. Should you have any questions contact the Frontline Technical Support Team.

1.1 What is in this manual

The ComProbe User Manual comprises the following seven chapters. The chapters are organized in the sequence you would normally follow to capture and analyze data: set up, configure, capture, analyze, save. You can read them from beginning to end to gain a complete understanding of how to use the ComProbe hardware and software or you can skip around if you only need a refresher on a particular topic. Use the Contents, Index, and Glossary to find the location of particular topics.

- **Chapter 1 ComProbe Hardware and Software**. This chapter will describe the minimum computer requirements and how to install the software.
- **Chapter 2 Getting Started**. Here we describe how to set up and connect the hardware, and how to apply power. This chapter also describes how to start the ComProbe software in Data Capture Methods. You will be introduced to the Control window that is the primary operating dialog in the ComProbe software.
- **Chapter 3 Configuration Settings**. The software and hardware is configured to capture data. Configuration settings may vary for a particular ComProbe analyzer depending on the technology and network being sniffed. There are topics on configuring protocol decoders used to disassemble packets into frames and events.
- **Chapter 4 Capturing and Analyzing Data**. This Chapter describes how to start a capture session and how to observe the captured packets, frames, layers and events.
- **Chapter 5 Navigating and Searching the Data**. Here you will find how to move through the data and how to isolate the data to specific events, often used for troubleshooting device design problems.
- **Chapter 6 Saving and Importing Data**. When a live capture is completed you may want to save the captured data for future analysis, or you may want to import a captured data set from another developer or for use in interoperability testing. This chapter will explain how to do this for various data file formats.
- **Chapter 7 General Information**. This chapter provides advanced system set up and configuration information, timestamping information, and general reference information such as ASCII, baudot, and EBCDIC codes. This chapter also provides information on how to contact Frontline's Technical Support team should you need assistance.

1.2 Computer Minimum System Requirements

Frontline supports the following computer systems configurations:

- Operating System: Windows 7 and 8
- USB Port: USB 2.0 or USB 3.0 High-Speed

The ComProbe software must operate on a computer with the following minimum characteristics.

- Processor: Core i5 processor at 2.7 GHz
- RAM: 4 GB
- Free Hard Disk Space: 20 GB

1.3 Software Installation

1.3.1 From CD:

Insert the ComProbe installer disc into your DVD drive. Click on the **Install CPAS** shortcut and follow the directions.

1.3.2 From Download:

Download the latest **CPAS installer** from FTE.com. Once downloaded, double-click the installer and follow the directions.

Chapter 2 Getting Started

In this chapter we introduce you to the ComProbe hardware and show how to start the ComProbe analyzer software and explain the basic software controls and features for conducting the protocol analysis.

2.1 FTS4BT

1. Connect the primary ComProbe FTS4BT hardware to the 3 ft. USB cable supplied with the ComProbe.

   You should always attach the FTS4BT hardware to the USB cable rather than plugging the hardware directly into the PC. Using the FTS4BT hardware with the USB cable allows you to position it between the devices, making synchronization more reliable.

   There is a secondary ComProbe hardware included with the software (marked with a sticker that reads “SEC”). This secondary hardware is used with Interlaced Page Scan, which will be explained in the Tips and Tricks section toward the end of this document.

2. Connect the other end of the USB cable into the PC.

3. Position the FTSBT hardware between the devices that you are going to test.

   Placing the hardware between the devices makes synchronization and capturing data more consistent. If the devices under test are too close to each other, Bluetooth will turn the radio power down, making it more difficult for the ComProbe to listen in on the connection.

   Also, make sure that the FTS4BT hardware is not located directly next to the computer. If the hardware is too close to the PC, there could be interference.

2.2 Data Capture Methods

This section describes how to load Frontline Test Equipment, Inc ComProbe Protocol Analysis System software, and how to select the data capture method for your specific application.

2.2.1 Opening ComProbe Data Capture Method

On product installation, the installer creates a folder on the windows desktop labeled "Frontline ComProbe Protocol Analysis System <version#>".

1. Double-click the "Frontline ComProbe Protocol Analysis System" desktop folder

This opens a standard Windows file folder window.

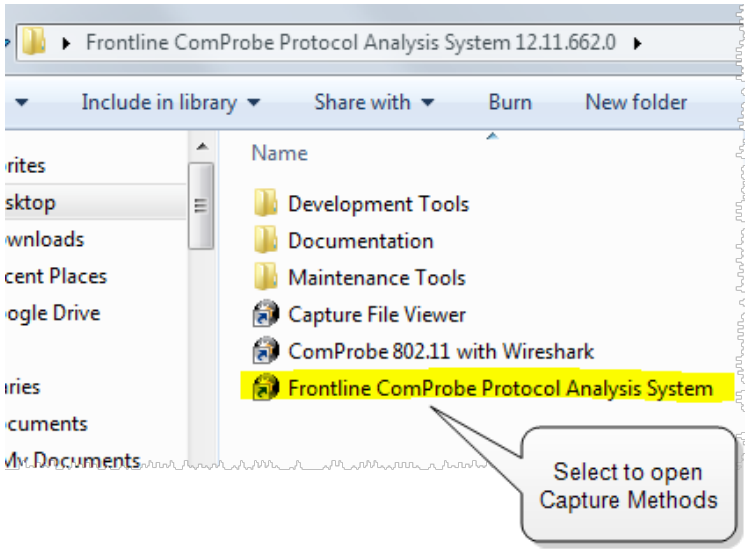

Figure 2.1 - Desktop Folder Link

2. Double-click on **Frontline ComProbe Protocol Analysis System** and the system displays the Select Data Capture Method dialog.

Note: You can also access this dialog by selecting Start > All Programs > Frontline ComProbe Protocol Analysis System (Version #) > Frontline ComProbe Protocol Analysis System

Three buttons appear at the bottom of the dialog; **Run**, **Cancel**, and **Help**. When the dialog first opens, Cancel and Help are active, and the Run button is inactive (grayed out).

Run starts the selected protocol stack.

Cancel closes the dialog and exits the user back to the desktop.

Help takes the user to this help file as does pressing the F1 key.

3. Expand the folder and select the data capture method that matches your configuration.
4. Click on the Run button and the ComProbe Control Window will open configured to the selected capture method.

Note: If you don't need to identify a capture method, then click the Run button to start the analyzer.

Creating a Shortcut

A checkbox labeled Create Shortcut When Run is located near the bottom of the dialog. This box is un-checked by default. Select this checkbox, and the system creates a shortcut for the selected method, and places it in the

"Frontline ComProbe Protocol Analysis System <version#>" desktop folder and in the start menu when you click the Run button. This function allows you the option to create a shortcut icon that can be placed on the desktop. In the future, simply double-click the shortcut to start the analyzer in the associated protocol.

Supporting Documentation

The Frontline ComProbe Protocol Analysis System directory contains supporting documentation for development (Automation, DecoderScript, application notes), user documentation (Quick Start Guides and User Manual), and maintenance tools.

2.2.2 ComProbe® FTS4BT Data Capture Methods [top]

ComProbe® Protocol Analysis System has different data capture methods to accommodate various applications.

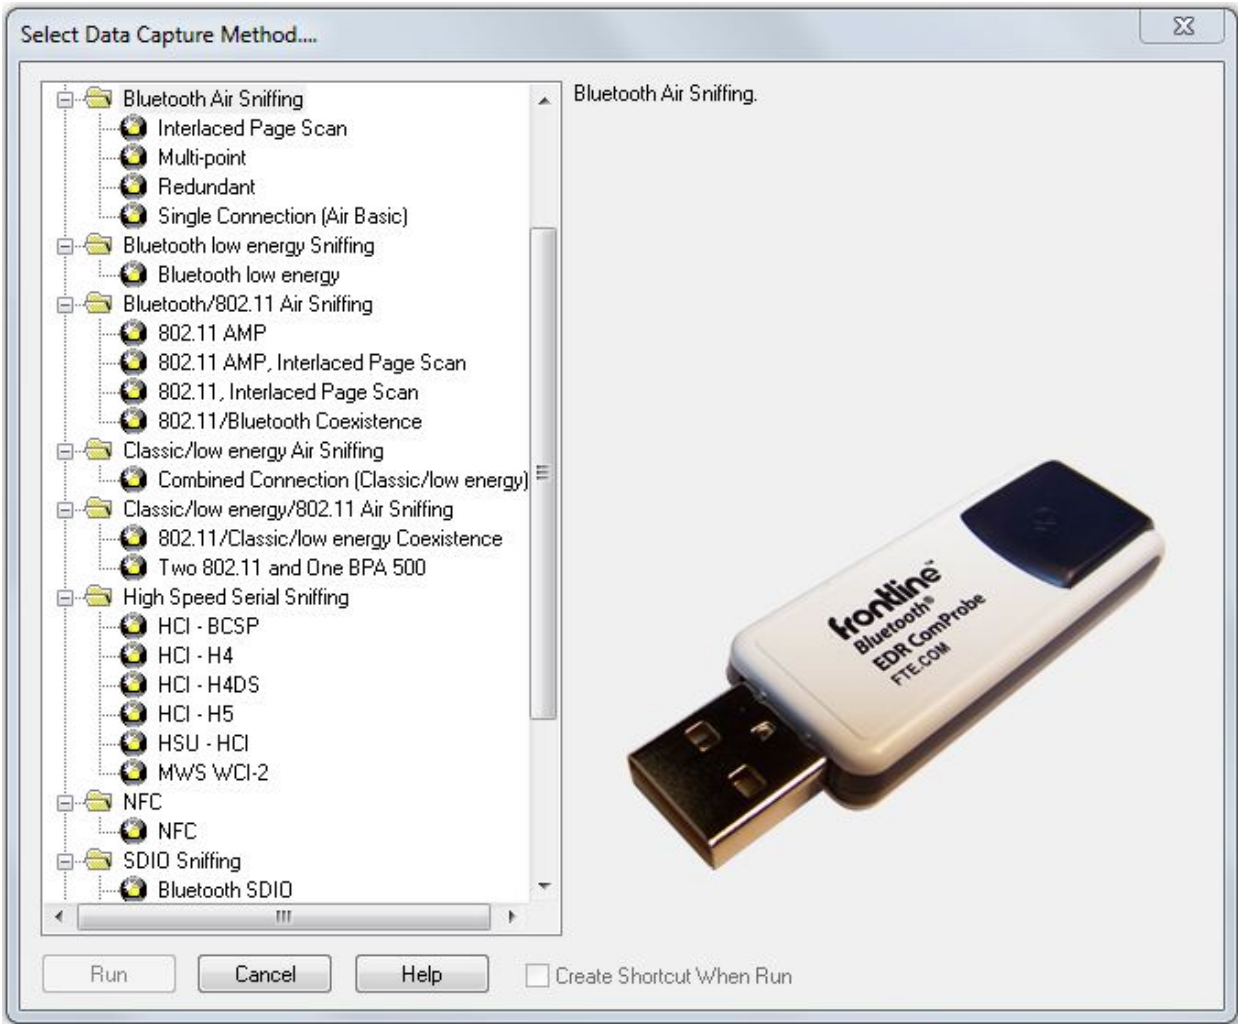

- **Single Connection (Air Basic)**
  - This method requires one ComProbe FTS4BT used for typical applications to capture data between a single master and single slave.

- **Redundant**
  - This method requires two ComProbe FTS4BT.
  - Used to ensure that ComProbe Protocol Analysis System captures all packets.
  - Both datasources are configured identically.
- **Multi-point**
  - This method requires a ComProbe FTS4BT for each master or a ComProbe FTS4BT for each encrypted link that is to be sniffed.
  - Use this mode to sniff scatternets or links where a single master is making encrypted links to multiple slaves.
  - Each datasource is configured for a different master/slave pair.
- Interlaced Page Scan
  - This method requires two ComProbe FTS4BT.
  - Used to sniff a single connection between two devices where the slave device is employing interlaced page scan. Try this mode is ComProbe Protocol Analysis System is having trouble syncing with your slave in single connection mode.
  - The datasources are set up with the same master and slave and the same pairing method.

2.3 Control Window

The analyzer displays information in multiple windows, with each window presenting a different type of information. The Control window opens when the **Run** button is clicked in the **Select Data Capture Method** window. The Control window provides access to each ComProbe analyzer functions and settings as well as a brief overview of the data in the capture file. Each icon on the toolbar represents a different data analysis function.

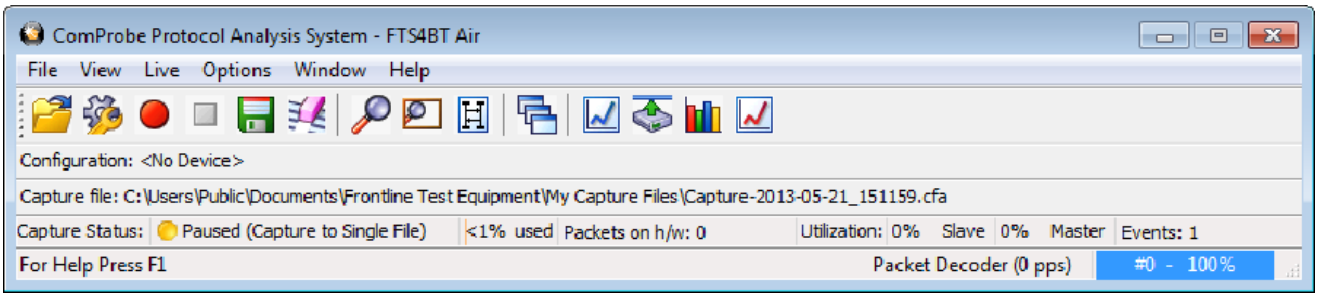
ComProbe Protocol Analysis System - FTS4BT Air
File View Live Options Window Help
Configuration: <No Device>
Capture file: C:\Users\Public\Documents\Frontline Test Equipment\My Capture Files\Capture-2013-05-21_151159.cfa
Capture Status: Paused (Capture to Single File) <1% used Packets on h/w: 0 Utilization: 0% Slave 0% Master Events: 1
For Help Press F1
Packet Decoder (0 pps)
#0 - 100%

Figure 2.2 - ComProbe Analyzer Control Window

Because the **Control** window can get lost behind other windows, every window has a **Home** icon that brings the Control window back to the front. Just click on the Home icon to restore the **Control** window.

When running the Capture File Viewer, the Control window toolbar and menus contain only those selections needed to open a capture file and display the About box. Once a capture file is opened, the analyzer limits Control window functions to those that are useful for analyzing data contained in the current file. Because you cannot capture data while using Capture File Viewer, data capture functions are unavailable. For example, when viewing Ethernet data, the Signal Display is not available. The title bar of the Control window displays the name of the

currently open file. The status line (below the toolbar) shows the configuration settings that were in use when the capture file was created.

2.3.1 Control Window Toolbar

Toolbar icon displays vary according to operating mode and/or data displayed. Available icons appear in color, while unavailable icons are not visible. Grayed-out icons are available for the ComProbe hardware and software configuration in use but are not active until certain operating conditions occur. All toolbar icons have corresponding menu bar items or options.

Table 2.1 - Control Window Toolbar Icon List

Icon	Description
	Open File - Opens a capture file.
	I/O Settings - Opens settings
	Start Capture - Begins data capture to disk
	Stop Capture - Available after data capture has started. Click to stop data capture. Data can be reviewed and saved, but no new data can be captured.
	Save - Saves the capture file.
	Clear - Clears or saves the capture file.
	Event Display - (framed data only) Opens a Event Display, with the currently selected bytes highlighted.
	Frame Display - (framed data only) Opens a Frame Display, with the frame of the currently selected bytes highlighted.
	Notes - Opens the Notes dialog.
	Statistics Window - Opens up the Statistics window.
	Cascade - Arranges windows in a cascaded display.
	Bluetooth Packet Timeline - Opens the Packet Timeline dialog.
	Coexistence View - Opens the Coexistence View dialog.
	Extract Data/Audio - Opens the Extract Data/Audio dialog.
	MSC Chart - Opens the Message Sequence Chart

2.3.2 Configuration Information on the Control Window

The Configuration bar (just below the toolbar) displays the hardware configuration and may include I/O settings. It also provides such things as name of the network card, address information, ports in use, etc.

2.3.3 Status Information on the Control Window

The Status bar located just below the Configuration bar on the **Control** window provides a quick look at current activity in the analyzer.

- Capture Status, or Status for Sodera, displays Not Active, Paused or Running and refers to the state of data capture
    - Not Active means that the analyzer is not currently capturing data.
    - Paused means that data capture has been suspended.
    - Running means that the analyzer is actively capturing data.
- % Used

    The next item shows how much of the buffer or capture file has been filled. For example, if you are capturing to disk and have specified a 200 Kb capture file, the bar graph tells you how much of the capture file has been used. When the graph reaches 100%, capture either stops or the file begins to overwrite the oldest data, depending on the choices you made in the System Settings.
- Utilization/Events

    The second half of the status bar gives the current utilization and total number of events seen on the network. This is the total number of events monitored, not the total number of events captured. The analyzer is always monitoring the circuit, even when data is not actively being captured. These graphs allow you to keep an eye on what is happening on the circuit, without requiring you to capture data.

2.3.4 Frame Information on the Control Window

Frame Decoder information is located just below the Status bar on the Control window. It displays two pieces of information.



- Frame Decoder (233 fps) displays the number of frames per second being decoded. You can toggle this display on/off with Ctrl-D, but it is available only during a live capture.
- #132911 displays the total frames decoded.

- 100% displays the percentage of buffer space used.

2.3.5 Control Window Menus

The menus appearing on the **Control** window vary depending on whether the data is being captured live or whether you are looking at a .cfa file. The following tables describe each menu.

Table 2.2 - Control Window **File** Menu Selections

Mode	Selection	Hot Key	Description
Live	**Close**		Closes Live mode.
Capture File	**Go Live**		Returns to Live mode
	Reframe		If you need to change the protocol stack used to interpret a capture file and the framing is different in the new stack, you need to reframe in order for the protocol decode to be correct. See Reframing on page 48
	Unframe		Removes start-of-frame and end-of-frame markers from your data. SeeUnframing on page 48
	Recreate Companion File		This option is available when you are working with decoders. If you change a decoder while working with data, you can recreate the ".frm file", the companion file to the ".cfa file". Recreating the ".frm file" helps ensure that the decoders will work properly.
	Reload Decoders		The plug-ins are reset and received frames are decoded again.
Live & Capture File	**Open Capture File**	Ctrl--O	Opens a Windows Open file dialog. at the default location "...\Public Documents\Frontline Test Equipment\My Capture Files\". Capture files have a .cfa extension.
	Save	Ctrl-S	Saves the current capture or capture file. Opens a Windows Save As dialog at the default location "...\Public Documents\Frontline Test Equipment\My Capture Files\".
	Exit ComProbe Protocol Analysis System		Shuts down the ComProbe Protocol Analysis System and all open system windows.
	Recent capture files		A list of recently opened capture files will appear.

The **View** menu selections will vary depending on the ComProbe analyzer in use.

Table 2.3 - Control Window **View** Menu Selections

Mode	Selection	Hot key	Description
Live & Capture File	**Event Display**	Ctrl-Shift-E	Opens the Event Display window for analyzing byte level data.
	Frame Display	Ctrl-Shift-M	Opens the Frame Display window for analyzing protocol level data
	Statistics	Ctrl-Shift-S	Opens the Statistics Window that shows information about packet throughput.
	Bluetooth Timeline		Opens the Bluetooth Timeline window for analyzing protocol level data in a packet chronological format and in packet throughput graph.
	Coexistence View		Opens the Coexistence View window that can simultaneously display Classic *Bluetooth*, *Bluetooth* low energy, and 802.11 packets and thourghput.
	Extract Data Audio...		Opens the Data/Audio Extraction dialog for pulling data from decoded *Bluetooth* protocols.

Table 2.4 - Control Window **Edit** Menu Selections

Mode	Selection	Hot-key	Description
Capture File	**Notes**	Ctrl-Shift-O	Opens the Notes window that allows the user to add comments to a capture file.

Control Window **Live** Menu Selections

Mode	Selection	Hot-Key	Description
Live	**Start Capture**	Shift-F5	Begins data capture from the configured wireless devices.
	Stop Capture	F10	Stops data capture from the configured wireless devices.
	Clear	Shift-F10	Clears or saves the capture file.

Table 2.5 - Control Window **Options** Menu Selections

Mode	Selection	Hot-Key	Description
Live & Capture File	**Hardware Settings**		0 - Classic 1 - *Bluetooth* low energy
	I/O Settings		0 - Classic 1 - *Bluetooth* low energy
	System Settings	Alt-Enter	Opens the System Settings dialog for configuring capture files.
	Directories...		Opens the File Locations dialog where the user can change the default file locations.
	Check for New Releases at Startup		When this selection is enabled, the program automatically checks for the latest Frontline protocol analyzer software releases.
	Side Names...		Opens the Side Names dialog used to customize the names of the slave and master wireless devices.
	Protocol Stack...		Opens the Select a Stack dialog where the user defines the protocol stack they want the analyzer to use when decoding frames.
	Set Initial Decoder Parameters...		Opens the Set Initial Decoder Parameters window. Each entry in the window takes effect from the beginning of the capture onward or until redefined in the Set Subsequent Decoder Parameters dialog. This selection is not present if no decoder is loaded that supports this feature.
	Set Subsequent Decoder Parameters...		Opens the Set Subsequent Decoder Parameters dialog where the user can override an existing parameter at any frame in the capture. Each entry takes effect from the specified frame onward or until redefined in this dialog on a later frame. This selection is not present if no decoder is loaded that supports this feature.
	Automatically Request Missing Decoder Information		When checked, this selection opens a dialog that asking for missing frame information. When unchecked, the analyzer decodes each frame until it cannot go further and it stops decoding. This selection is not present if no decoder is loaded that supports this feature.
	Enable/Disable Audio Expert System		When enabled, the Audio Expert System is active, other wise it is not available. Only available when an Audio Expert System licensed device is connected.

The **Windows** menu selection applies only to the **Control** window and open analysis windows: **Frame Display**, **Event Display**, **Message Sequence Chart**, **Bluetooth Timeline**, **Bluetooth low energy Timeline**, and **Coexistence View**. All other windows, such as the datasource, are not affected by these selections.

Table 2.6 - Control Window **Windows** Menu Selections

Mode	Selection	Hot-Key	Description
Live & Capture File	**Cascade**	Ctrl-W	Arranges open analysis windows in a cascaded view with window captions visible.
	Close All Views		Closes Open analysis windows.
	Minimize Control Minimizes All		When checked, minimizing the Control window also minimizes all open analysis windows.
	Frame Display and **Event Display**		When these windows are open the menu will display these selections. Clicking on the selection will bring that window to the front.

Control Window **Help** Menu Selections

Mode	Selection	Hot-Key	Description
Live & Capture File	**Help Topics**		Opens the ComProbe Help window.
	About ComProbe Protocol Analysis System		Provides a pop-up showing the version and release information, Frontline contact information, and copyright information.
	Support on the Web		Opens a browser to fte.com technical support page.

2.3.6 Minimizing Windows

Windows can be minimized individually or as a group when the **Control** window is minimized. To minimize windows as a group:

1. Go to the **Window** menu on the **Control** window.
2. Select **Minimize Control Minimizes All**. The analyzer puts a check next to the menu item, indicating that when the **Control** window is minimized, all windows are minimized.
3. Select the menu item again to deactivate this feature.
4. The windows minimize to the top of the operating system Task Bar.

Chapter 3 Configuration Settings

In this section the ComProbe software is used to configure an analyzer for capturing data .

3.1 FTS4BT Configuration

3.1.1 FTS4BT Hardware Settings

3.1.1.1 Determining Hardware Settings

From the Hardware Settings dialog you choose a Bluetooth® ComProbe device.

1. Select the Refresh ComProbe Device List to obtain the current list of available devices.
2. Select a device from the list.

   If you only have one Bluetooth ComProbe device connected to your PC, that device is used automatically and you don't need to select it.

Figure 3.1 FTS4BT Hardware Settings - Selecting a ComProbe Device

   The dialog also lists information on the current device connection, the Bluetooth Device Address (BD_ADDR) of the Bluetooth ComProbe, the hardware type, and the firmware version.

3. Select OK to choose the device and close the dialog.

Click here to see how to use the Advanced settings.

3.1.1.2 FTS4BT-USB Datasource

The **USB Datasource Dialog** allows the user to select a USB sniffer device, and to initiate/terminate the sniffing process. The dialog has a list control containing the USB Devices connected to your system. If you connected or disconnected a device:

1. Click the **Refresh List** button to update the list
2. Choose a USB ComProbe device to use from the drop down list. If you only have one ComProbe connected to your PC, that device is used automatically and you don't need to select it.
3. Click the **Start** button to start the sniffing process
4. Click on the **Start Capture** button on the Control window to capture data.

USB HCI (H2) - USB ComProbe

Settings

The Bluetooth® Core Specification defines USB endpoint numbers for each of the four HCI packet types.

Normally you would never need to change these assignments. However, if you need to change these assignments, then click the **Settings** button and change them as needed.

Note: HCI commands always go out from the host and in to the USB device.

USB HCI (H2) + raw USB packets - USB ComProbe

FTS4BT software filters out a number of packet types by default.

If you would like to see these packet types:

1. Click the **Capture Filters** button.
2. Un-check the box next to the type of packet you wish to include in your results. Some of these packet types can be so numerous that they may make it more difficult to locate data packets in the Frame Display window.

3.1.1.3 Sniffing the Microsoft Keyboard and Mouse

To sniff the Microsoft® Keyboard and Mouse, start the USB HCI packet sniffer, select the **Wireless Transceiver** and select the **Start Sniffing** button.

On some versions of Windows® the Windows USB driver cannot reset when it is in use. In this case you get an error saying "Invalid Selection – device may be in use". To get around this problem use the following steps to sniff the Keyboard and Mouse.

1. The first thing you need to do is to break the connections from the keyboard and mouse to the **Wireless Transceiver**. There is a button on the bottom of the keyboard. Press this button and hold for a bit to make sure it took effect. There is a similar button at the bottom of the mouse. Press and hold it too. We need to break all connections to the **Wireless Transceiver** or we are not able to restart.
2. Start the USB HCI packet sniffer. On the data source find the **Microsoft Wireless Transceiver** and click the **Start Sniffing** button, and click the **Start Capturing** button.

3. Go to the **Start** menu and find the **Microsoft Keyboard** program and use it to reconnect the keyboard.
4. Go to the **Start** menu and find the **Microsoft Mouse** program and use it to reconnect the mouse.
5. All traffic should now be sniffed.

3.1.2 FTS4BT I/O Datasource Settings

3.1.2.1 Air Data Source Dialog

The **Data Source Control** window provides access to and displays the status of the FTS4BT anlyser . As data is being captured, the **Status** message at the top of the window indicates the synchronization status of the analyzer . Also, the color of the icon in the system tray changes depending on the synchronization state.

There are five states:

Table 3.2 - FTS4BT Capture States

Color	Capture State
	Blue = running and in sync with the piconet.
	Green = running and waiting for piconet to form or reform
	Yellow = attempts to resynchronize in 5 seconds.
	Red = initializing
	White = stopped.

The Functions of the Buttons

- **Resync Now** - When you start sniffing, the buttons cycle through Green, Yellow, Red every thirty seconds. When it is red it is resyncing. Selecting the Resync Now button causes it to be red immediately instead of having to wait for the full thirty seconds.
- **Force AHS(79)** – Forces the analyzer to sniff all 79 channels
- **Hardware Settings** - opens a dialog box where you can change which FTS4BT device to use and get information on the Device Address (BD_ADDR).
- **I/O Settings** - opens a dialog box where you can change synchronization mode, device to sync to, and other parameters related to encryption and packet capture.
- **Start Sniffing** - sets up the analyzer using the settings from the I/O Settings window and synchronizes to the piconet. This button changes its name to **Stop Sniffing** when it is in sniffing mode. If no ComProbe device is plugged in, **Start Sniffing** button will be grayed out and the message "There is no Bluetooth ComProbe plugged in. Please plug in a Bluetooth ComProbe" will be displayed in the status window. All settings are saved automatically when you start sniffing.

- **Stop Sniffing** - stops monitoring data.
- **Channel Map** Click this button to toggle the display of the Channel Map.

This display is used to determine which channels are available with Adaptive Frequency Hopping.

- Green - Channel is currently available for use.
- Red - When Adaptive Frequency Hopping is in use; red indicates that the channel has been marked unavailable.
- Blue - Indicates that a packet was captured on the channel.

The **Clear** button resets each indicator back to the green state. The indicators are also reset whenever a new **Channel Map** goes into effect.

3.1.2.2 *Bluetooth*I/O Settings

The **I/O Settings** window has all the setup information the analyzer needs in order to synchronize with the link and capture data.

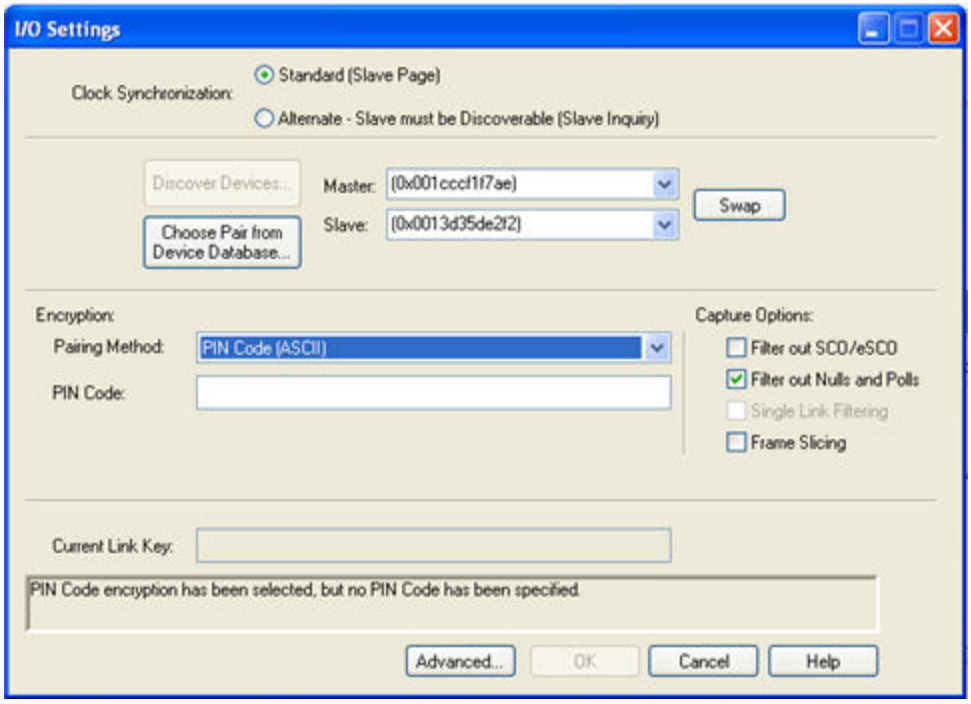

Figure 3.3 FTS4BT I/O Settings Dialog

The analyzer requires information on the clock synchronization method and the device address of the device to initially sync to. You may optionally specify an inquiry access code to limit the device addresses the analyzer looks at, choose whether or not to capture certain packet types and specify any encryption information needed to correctly decode data.

3.1.2.2.1 Selecting a Synchronization Mode

The FTS4BT analyzer needs to know how to synchronize with the link. The analyzer supports two Synchronization Modes.

Figure 3.4 FTS4BT I/O Settings - Clock Synchronization

Standard (Slave Page)

This is the preferred synchronization mode to use.

The analyzer pages the slave device to obtain an estimate of its *Bluetooth* clock; however, the paging process does not get completed so the slave device times out and returns to page scanning. The analyzer then enters continuous page scan mode, using the slave's estimated *Bluetooth* clock and the slave's address to calculate the page scan frequencies. When the master pages the slave, the analyzer switches to the master's *Bluetooth* clock and then follows the master's frequency hopping sequence. This synchronization mode requires that the slave is page scanning prior to being paged by the master. This synchronization mode is considered to be passive because the *Bluetooth* host is never made aware of the page made by the analyzer since the paging process does not get completed.

Note: Since no slave address will have not been specified, clicking on Start Sniffing will generate the message "Cannot start sniffing: the synchronization method that you have selected requires that you select a Slave Device to synchronize with. Please select a Slave Device" in the status window.

Alternate - Slave must be Discoverable (Slave Inquiry)

The analyzer performs an inquiry of the slave device to obtain its *Bluetooth* clock. The analyzer then enters continuous page scan mode, using the slave's *Bluetooth* clock and address to calculate the correct page scan frequencies. When the master pages the slave, the analyzer switches to the master's *Bluetooth* clock and then follows the master's frequency hopping sequence. This synchronization mode requires that the slave has inquiry scan enabled and is page scanning prior to being paged by the master. Interlaced Page Scan is an example of a mode that will only work with Slave Inquiry synchronization.

Interlaced Page Scan

For Interlaced Page Scan, there is no choice. The Slave must be discoverable.

Figure 3.5 FTS4BT I/O Settings - Interlaced Page Scan Clock Synchronization, Information Only

Interlaced Page Scan allows you to sync to a link when the slave being paged uses interlaced page scanning. This results in two *Bluetooth* Air data source instances and requires two FTS4BT devices,one a primary device and either a secondary device or another primary device. Interlaced Page Scan will only work with Slave Inquiry as the synchronization method for both data sources on the I/O Settings dialog.

When you launch the Interlaced Page Scan shortcut, you will see two datasource windows. The I/O Settings for both data sources should be set identically. This includes the same Master, Slave, Pairing Method, and PIN (if

applicable). The two ComProbes will be listening at slightly different times, which will significantly increase the consistency of synching to the link.

3.1.2.2.2 Specifying the Synchronization Device

The analyzer needs to know the Bluetooth® **Device Address** (BD_ADDR) of the synchronizing device. If you have selected **Slave Inquiry Mode** or **Slave Page Mode**, you must specify a **Slave** address. You may optionally specify a **Master** device if you want to be certain of sniffing a specific link. If you have selected **Master Inquiry Mode,** you must specify a **Master** address, and may optionally specify a **Slave** address.

Note: You do not have to identify a Master address if you are using Firmware Version 62 or newer.

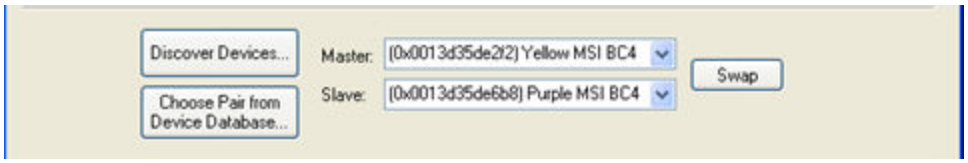

Figure 3.6 FTS4BT I/O Settings - Synchronization Device Selection

You can specify the *Bluetooth* **Device Address** in multiple ways.

1. Select the **Device Address** (BD_ADDR) from a list of available devices.

   The list of available devices is stored in the Device Database. To add to the list, press the Discover Devices button. A device inquiry is performed and all discoverable devices (subject to matching up with the Inquiry Access Code) is then available from the drop-down list. If you want to limit the list of devices by access code, select an access code from the **Device Discovery** combo box located on the **Advanced I/O Settings** dialog.

   Note: Note: If you click Discover Devices before you start capturing data, Frontline will still discover the Bluetooth devices, but the device descriptions will not contain any Extended Inquiry Response (EIR) data. To capture EIR data you have to actually start a data capture first, then select Discover Devices.

2. Type in the number as a 12 digit hex number.

   The "0x" is automatically typed in by the control. Any devices entered this way is added to the Device Database.

3. Press the **Choose Pair** button.

   This button takes you to the Device Database Dialog, which allows you select a pair of devices and a Link Key from a list.

Note: Clicking the Swap button switches the Slave and Master addresses.

3.1.2.2.3 Encryption

Bluetooth® devices can have their data encrypted when they communicate. Bluetooth devices on an encrypted link share a common link key in order to exchange encrypted data. How that link key is created depends upon the pairing method used.

There are four encryption options in the I/O Settings dialog.

a. None

b. PIN Code (ASCII)

c. PIN Code (Hex)

d. Link Key

You are able to switch between these methods in the **I/O Settings** window. When you select a method, a note appears at the bottom of the dialog reminding you what you need to do to successfully complete the dialog.

- First, you can choose **None** as the encryption method when neither of the devices has encryption enabled.
- The second and third ways are to use a **PIN Code** to generate the **Link Key**. The devices generate link keys during the pairing process based on a **PIN Code**. The **Link Key** generated from this process is also based on a random number so the security cannot be compromised. If the analyzer is given the **PIN Code** it can determine the **Link Key** using the same algorithm. Since the analyzer also needs the random number, the analyzer must catch the entire pairing process or else it cannot generate the **Link Key** and decode the data.

  Example:

  If the ASCII character PIN Code is ABC and you choose to enter the ASCII characters, then select PIN Code (ASCII) from the Encryption drop down list and enter ABC in the field below.

  If you choose to enter the Hex equivalent of the ASCII character PIN Code ABC, then select PIN Code (Hex) from the Encryption drop down list and enter 0x414243 in the field. Where 41 is the Hex equivalent of the letter A, 42 is the Hex equivalent of the letter B, and 43 is the Hex equivalent of the letter C.

Note: When PIN Code (Hex) is selected from the Encryption drop down list, the 0x prefix is entered automatically.

- Fourth, if you know the **Link Key** in advance you may enter it directly. Select **Link Key** in the **Encryption** list and then enter the Link Key in the edit box. If the link key is already in the database, the Link Key is automatically entered in the edit box after the Master and Slave have been selected. You can also pick **Choose Pair from Device Database** to select a Master, Slave and Link Key from the Device Database.

Note: If you use Copy/Paste to insert the Link Key or Private Key, Frontline will auto correct (remove invalid white spaces) to correctly format the keys.

- The analyzer filters out a number of packet types by default. If you would like to see these packet types, un-check the box next to the type of packet. Some of these packet types can be so numerous that they may make it more difficult to locate data packets in the **Frame Display** window.
- Select the Frame Slicing checkbox if you wish to limit the size of frames sent to the analyzer from the datasource. When analyzing large frames, often only the first few bytes of a frame are of interest. **Frame Slicing** allows the user to choose not to process a portion of large frames.

Note: Current Link Key is a display only field. This field displays the last known link key, if one exists.

3.1.2.2.4 Capture Filtering

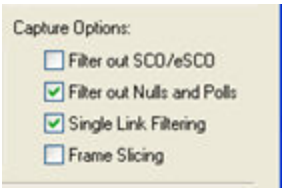

Some packet types can be so numerous that they may make it more difficult to locate data packets in the **Frame Display** window. Capture Filtering gives you the option to exclude certain types of packets.

The analyzer filters out a number of packet types by default.

- **Nulls and Polls** are filtered by default
- **Single Link Filtering** is on by default

You must deselect the checkboxes to deactivate these filters.

- **SCO /eSCO** filtering is not on by default.

You must select the checkbox to activate this filter.

- Selecting the **Frame Slicing** checkbox indicates that you want to set some parameters for the frame size of the captured data.

You actually set these **Frame Slicing** parameters on the Bluetooth Advanced I/O Settings dialog.

3.1.2.2.5 Advanced I/O Settings

The **Advanced I/O Settings** window contains additional options for synchronizing the analyzer with the link to capture data.

1. Automatically initiate Clock Synchronization Options
   - If you would like to have the analyzer resynchronize when a Link Manager Detach (LMP_Detach) packet is received after a specific period of time or when the Bluetooth® ComProbe has not been locked to the Master Clock, you must select the options here.
   - You can adjust the amount of time until re-synchronization if synchronization is lost for more than a specified amount of time for both LMP_Detach and ComProbe/Master Clock. The time is set by default to 30 seconds for the ComProbe/Master Clock and six (6) seconds for the LMP-Detach.
2. Access Codes

   Access Codes controls which devices are placed into the selection list when Discover Devices is pushed on the I/O Settings screen. Device Discovery is used for selecting a device address to synchronize to.
3. FTS4BT analyzer Settings
   - **Sniffer Timeout** should not be changed unless you have contacted technical support first.
   - **Slave Inquiry Clock Offset** allows you to skew the packet sniffer´s clock when using slave inquiry to sync to a link. This can improve syncing with some devices. However, this should only be used after consultation with technical support.
   - **Use Hard Resets** is similar to removing and reinserting a device. This option should remain checked unless advised differently by technical support
   - **Drift Compensation** does two inquires on the slave clock and compares the difference between the two clock inquires with our own reference clock. A linear interpolation of the drift is done and applied to the slave's clock.

- **Prioritized Decryption** can be selected if you are having trouble establishing the correct decryption. This option adjusts the data capture to give priority to establishing the proper decryption over receiving frames. If you select this option, some frames may be dropped, but establishing the decryption key will be more efficient.
- **Sniffer Diagnostics** - When this is checked, some diagnostic data from the analyzer is captured and stored in the .cfa file. This is useful when a .cfa file is sent to the analyzer for analysis and diagnosis. Technical support may ask you to check this option when you are experiencing issues with FTS4BT.

4. Frame Slicing Settings
   - Frame Slicing Settings allow you to enter the size of the largest frame allowed to pass the analyzer without having any bytes removed. The second field tells the analyzer the number of bytes you would like to capture if the frame is larger than the allowable value indicated in the first field.
5. Active Member Following
   - You can use this dialog to change which member the firmware follows. In previous versions, the firmware would decode the low-level information for all members of the link. To support AFH, the firmware must only decode this information for one member. All packets are sniffed and decoded at the higher levels but the low-level decoding is followed on the first member of the link it sees.
   - There are eight levels of decoding when using Air Sniffer.
   - The default is the First Active LT-ADDR (Same as First Active Member in previous versions).
   - You can also choose a number from one to seven that corresponds to an active member (Same as selecting Single Active Member and a number from the drop-down in previous versions).
6. AFH Following
   - You can choose to enable or disable this feature by selecting the respective checkbox.
7. Channel Map
   - **Clear on Resync** -used to clear the map each time a resynchronization occurs
   - **Send with data**- allows you to send a map each time data is sent instead of just sending a map when changes occur.

Note: Because of hardware filtering of packets; as selected on the I/O Settings dialog, some packets are not captured and therefore some active channels may not be indicated in the Channel Map Display.

3.1.3 Using more than one additional ComProbe FTS4BT for sniffing Scatternets

There will be instances when you will want to use one or more additional ComProbe FTS4BT when sniffing a Scatternet. The procedure for doing that appears below.

1. Locate the file 'CPAS FTS4BT air.personality', which will be in the "C:\Program Files (x86)\Frontline Test System II\Frontline ComProbe Protocol Analysis System [version#]\App Data\Decoders\CPAS" folder.
2. Open it in any text editor,Windows Notepad for example, and find the section titled [Personality`ComProbe Protocol Analysis System`Generic`Scatternet]

3. Locate the line: CmdLine="/mem=ComProbe Protocol Analysis System=generic" "/dspath=.\btcpds.exe" "/Mode=multiple connections" "/QueueSize=4000000"
4. On the end of that, add "/dsnum=*n*", where *n* is the number of packet sniffers you need to use.

   For example, if you wanted to use three packet sniffers, the line would read:

   CmdLine="/mem=ComProbe Protocol Analysis System=generic" "/dspath=.\btcpds.exe" "/Mode=multiple connections" "/QueueSize=4000000" "/dsnum=3"
5. Save the file.

Note: Note: Be sure to include the quotes.

3.2 Decoder Parameters

Some protocol decoders have user-defined parameters. These are protocols where some information cannot be discovered by looking at the data and must be entered by the user in order for the decoder to correctly decode the data. For example, such information might be a field where the length is either 3 or 4 bytes, and which length is being used is a system option.

There may be times when the context for decoding a frame is missing. For example, if the analyzer captures a response frame but does not capture the command frame, then the decode for the response may be incomplete. The **Set Initial Decoder Parameters** window allows you to supply the context for any frame. The dialog allows you to define any number of parameters and save them in a template for later use

The decoder template function provides the capacity to create multiple templates that contain different parameters. This capability allows you to maintain individual templates for each Bluetooth® network monitored. Applying a template containing only those parameters necessary to decode transmissions particular to an individual network, enhances the efficiency of the analyzer to decode data.

If you have decoders loaded which require decoder parameters, a window with one tab for every decoder that requires parameters appears the first time the decoder is loaded.

For help on setting the parameters, click the **Help** button on each tab to get help information specific to that decoder.

If you need to change the parameters later,

- Choose **Set Initial Decoder Parameters...** from the **Options** menu on the **Control** and **Frame Display** windows.

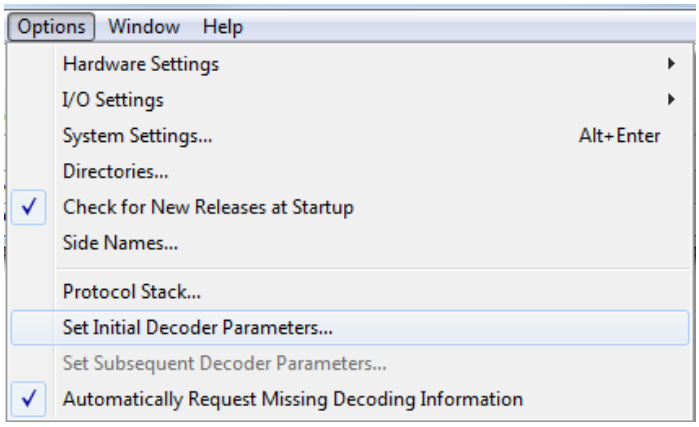

Figure 3.1 - Select **Set Initial Decoder Parameters...** from **Control** window

The **Set Initial Decoder Parameters** window opens with a tab for each decoder that requires parameters.

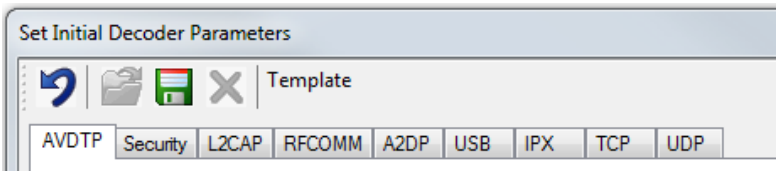

Figure 3.2 - Tabs for each decoder requiring parameters.

- Each entry in the **Set Initial Decoder Parameters** window takes effect from the beginning of the capture onward or until redefined in the **Set Subsequent Decoder Parameters** dialog.

Override Existing Parameters

The **Set Subsequent Decoder Parameters** dialog allows the user to override an existing parameter at any frame in the capture where the parameter is used.

If you have a parameter in effect and wish to change that parameter

- Select the frame where the change should take effect
  - Select **Set Subsequent Decoder Parameters...** from the **Options** menu, and make the needed changes. You can also right-click on the frame to select the same option.

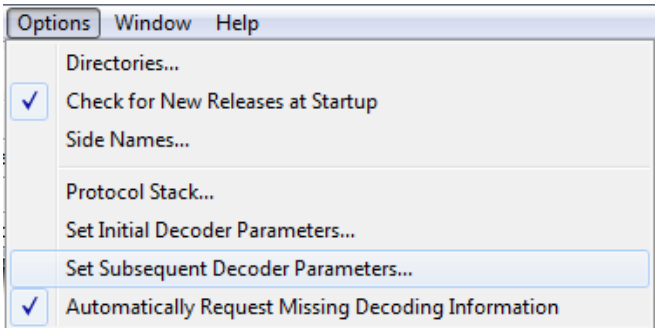

Figure 3.3 - **Set Subsequent Decoder Parameters...** from **Control** window

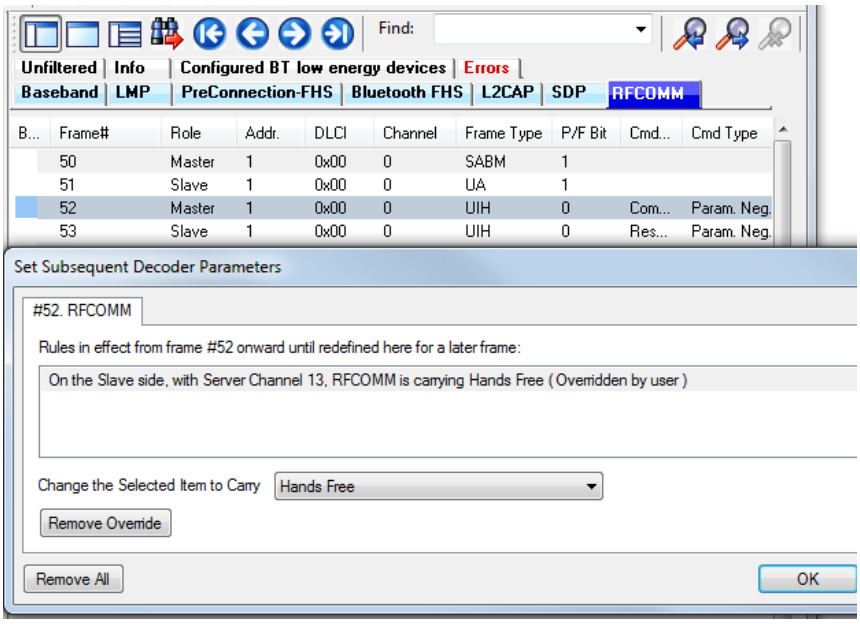

Figure 3.4 - Example: Set Subsequent Decode for Frame #52, RFCOMM

- Each entry in the **Set Subsequent Decoder Parameters** dialog takes effect from the specified frame onward or until redefined in this dialog on a later frame.
- The **Remove Override** button will remove the selected decode parameter override.
- The **Remove All** button will remove all decoder overrides.

If you do not have decoders loaded that require parameters, the menu item does not appear and you don't need to worry about this feature.

3.2.1 Decoder Parameter Templates

3.2.1.1 Select and Apply a Decoder Template

1. Select **Set Initial Decoder Parameters...** from the **Options** menu on the **Control** window or the **Frame Display**

window.

2. Click the **Open Template** icon in the toolbar and select the desired template from the pop up list. The system displays the content of the selected template in the Initial Connections list at the top of the dialog

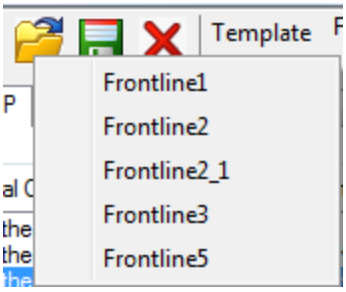

3. Click the OK button to apply the selected template and decoders' settings and exit the **Set Initial Decoder Parameters** dialog.

3.2.1.2 Adding a New or Saving an Existing Template

Add a Template

A template is a collection of parameters required to completely decode communications between multiple devices. This procedure adds a template to the system and saves it for later use:

1. Click the **Save** button at the top of the **Set Initial Decoder Parameters** dialog to display the **Template Manager** dialog.

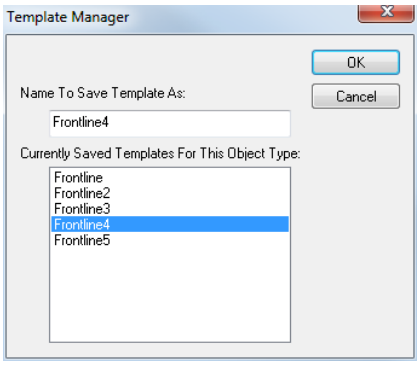

2. Enter a name for the new template and click **OK**.

   The system saves the template and closes the **Template Manager** dialog.

3. Click the **OK** button on the **Set Initial Decoder Parameters** window to apply the template and close the dialog.

Save Changes to a Template

This procedure saves changes to parameters in an existing template.

1. After making changes to parameter settings in a user defined template, click the **Save** button at the top of the **Set Initial Decoder Parameters** window to display the **Template Manager** dialog.
2. Ensure that the name of the template is listed in the **Name to Save Template As** text box and click **OK**.
3. The system displays a dialog asking for confirmation of the change to the existing template. Click the **Yes** button.

   The system saves the parameter changes to the template and closes the Save As dialog.

4. Click the **OK** button on the **Set Initial Decoder Parameters** window to apply the template and close the window.

3.2.1.3 Deleting a Template

1. After opening the **Set Initial Decoder Parameters** window click the **Delete** button in the toolbar.

   The system displays the **Template Manager** dialog with a list of saved templates.

2. Select (click on and highlight) the template marked for deletion and click the **Delete** button.

   The system removes the selected template from the list of saved templates.

3. Click the **OK** button to complete the deletion process and close the Delete dialog.

4. Click the **OK** button on the **Set Initial Decoder Parameters** window to apply the deletion and close the dialog.

3.2.2 Selecting A2DP Decoder Parameters

Decoding SBC frames in the A2DP decoder can be slow if the analyzer decodes all the parts (the header, the scale factor and the audio samples) of the frame. You can increase the decoding speed by decoding only the header fields and disregarding other parts. You can select the detail-level of decoding using the **Set Initial Decoder Parameters** window.

Note: By default the decoder decodes only the header fields of the frame.

1. Select **Set Initial Decoder Parameters** from the **Options** menu on the **Control** window or the **Frame Display** window.

2. Click on the **A2DP** tab.

3. Choose the desired decoding method.

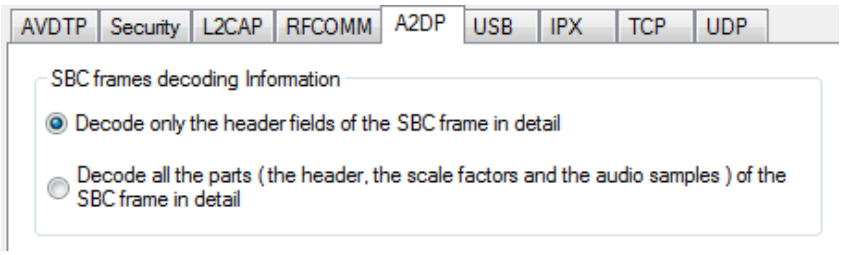

Figure 3.5 - A2DP Decoder Settings

4. Follow steps to save the template changes or to save a new template.

5. Click the **OK** button to apply the selection and exit the **Set Initial Decoder Parameters** window.

3.2.3 AVDTP Decoder Parameters

3.2.3.1 About AVDTP Decoder Parameters

Each entry in the **Set Initial Decoder Parameters** window takes effect from the beginning of the capture onward or until redefined in the **Set Subsequent Decoder Parameters** window.

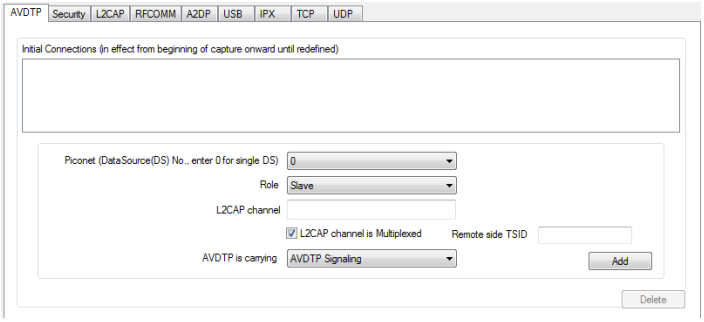

Figure 3.6 - AVDTP parameters tab

The **AVDTP** tab requires the following user inputs to complete a parameter:

- **Piconet (Data Source (DS) No.)** - When only one data source is employed, set this parameter to 0 (zero), otherwise, set to the desired number of data sources.
- **Role** - This identifies the role of the device initiating the frame (**Master** or **Slave**)
- **L2CAP Channel** - The channel number 0 through 78.
  - **L2CAP channel is Multiplexed** - when checked indicates that L2CAP is multiplexed with upper layer protocols.
- **AVDTP is carrying** - Select the protocol that AVDTP traverses to from the following:
  - AVDTP Signaling
  - AVDTP Media
  - AVDTP Reporting
  - AVDTP Recovery
  - -Raw Data-

Adding, Deleting, and Saving AVDTP Parameters

1. From the **Set Initial Decoder Parameters** window, click on the **AVDTP** tab.
2. Set or select the **AVDTP** decoder parameters.
3. Click on the **ADD** button. The Intial Connection window displays the added parameters.

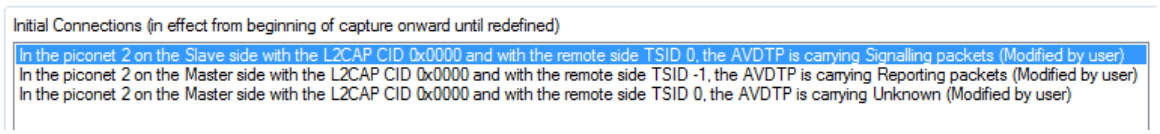
Initial Connections (in effect from beginning of capture onward until redefined)
In the piconet 2 on the Slave side with the L2CAP CID 0x0000 and with the remote side TSID 0, the AVDTP is carrying Signalling packets (Modified by user)
In the piconet 2 on the Master side with the L2CAP CID 0x0000 and with the remote side TSID -1, the AVDTP is carrying Reporting packets (Modified by user)
In the piconet 2 on the Master side with the L2CAP CID 0x0000 and with the remote side TSID 0, the AVDTP is carrying Unknown (Modified by user)

Figure 3.7 - Parameters Added to Decoder

4. To delete a parameter from the **Initial Connections** window, select the parameter and click on the **Delete** button.

5. Decoder parameters cannot be edited. The only way to change a parameter is to delete the original as described above, and recreate the parameter with the changed settings and selections and then click on the **Add** button.

6. AVDTP parameters are saved when the template is saved as described in Adding a New or Saving an Existing Template on page 26Adding a New or Saving an Existing Template on page 26

3.2.3.2 AVDTP Missing Decode Information

The analyzer usually determines the protocol carried in an AVDTP payload by monitoring previous traffic. However, when this fails to occur, the **Missing Decoding Information Detected** dialog appears and requests that the user supply the missing information.

The following are the most common among the many possible reasons for a failure to determine the traversal:

- The capture session started after transmission of the vital information.
- The analyzer incorrectly received a frame with the traversal information.
- The communication monitored takes place between two players with implicit information not included in the transmission.

In any case, either view the AVDTP payload of this frame (and other frames with the same channel) as hex data, or assist the analyzer by selecting a protocol using this dialog.

Note: You may use the rest of the analyzer without addressing this dialog. Additional information gathered during the capture session may help you decide how to respond to the request for decoding information.

If you are not sure of the payload carried by the subject frame, look at the raw data shown “data” in the **Decoder** pane on the **Frame Display**. You may notice something that hints as to the profile in use.

In addition, look at some of the frames following the one in question. The data may not be recognizable to the analyzer at the current point due to connection setup, but might be discovered later on in the capture.

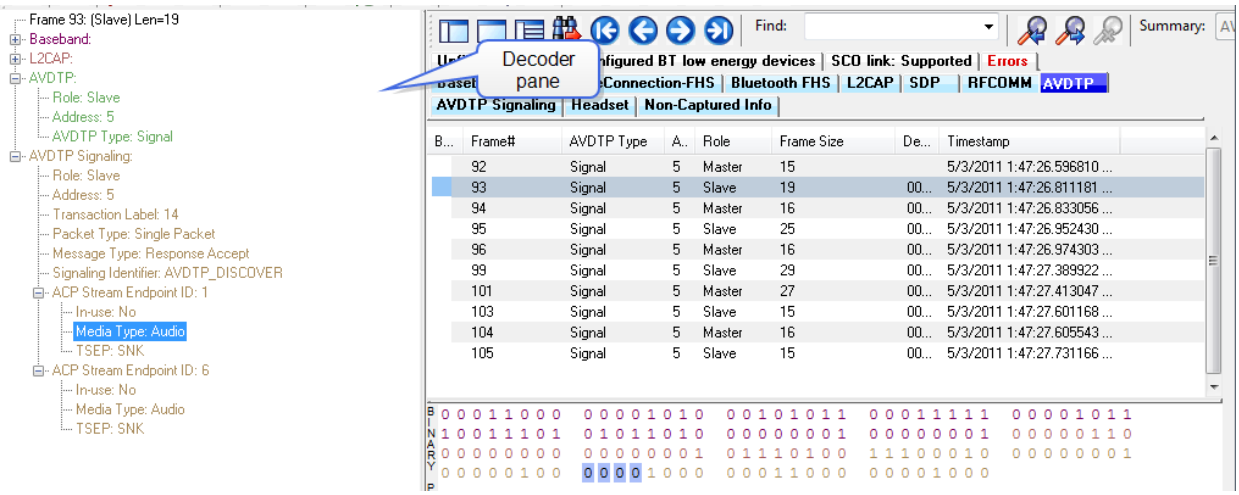

Figure 3.8 - Look in Decoder pane for profile hints

3.2.3.3 AVDTP Override Decode Information

The Set **Subsequent Decoder Parameters** dialog allows the user to override an existing parameter at any frame in the capture where the parameter is used.

If you have a parameter in effect and wish to change that parameter:

1. Select the frame where the change should take effect.
2. Select **Set Subsequent Decoder Parameters** from the **Options** menu, or by selecting a frame in the frame display and choosing from the right-click pop-up menu, and make the needed changes.
3. Select the rule you wish to modify from the list of rules.
4. Choose the protocol the selected item carries from the drop-down list, and click **OK**.

If you do not have any previously overridden parameters, you may set parameters for the current frame and onwards by right-clicking the desired frame and choosing **Provide AVDTP Rules...** from the right-click pop-up menu.

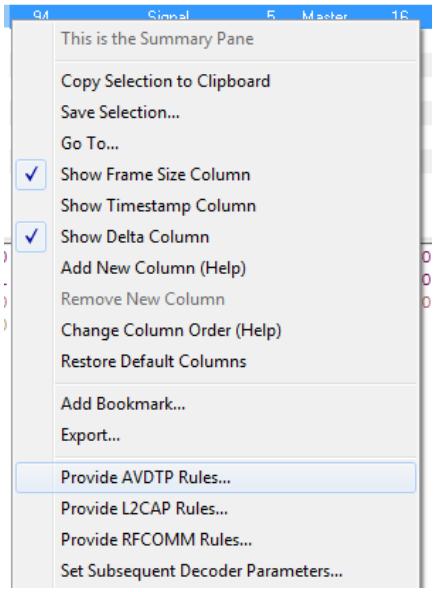

If you have a parameter in effect and wish to change it, there are two parameters that may be overridden for AVDTP: **Change the Selected Item to Carry**, and if AVDTP Media is selected. the codec type. Because there are times when vital AVDTP configuration information may not be transferred over the air, we give users the ability to choose between the four AVDTP channel types for each L2CAP channel carrying AVDTP as well as codec type. We attempt to make our best guess at codec information when it is not transferred over the air, but we realize we may not always be correct. When we make a guess for codec type, we specify it in the summary and decode panes by following the codec with the phrase '(best guess by analyzer). This is to let you know that this information was not obtained over the air and that the user may wish to alter it by overriding AVDTP parameters.

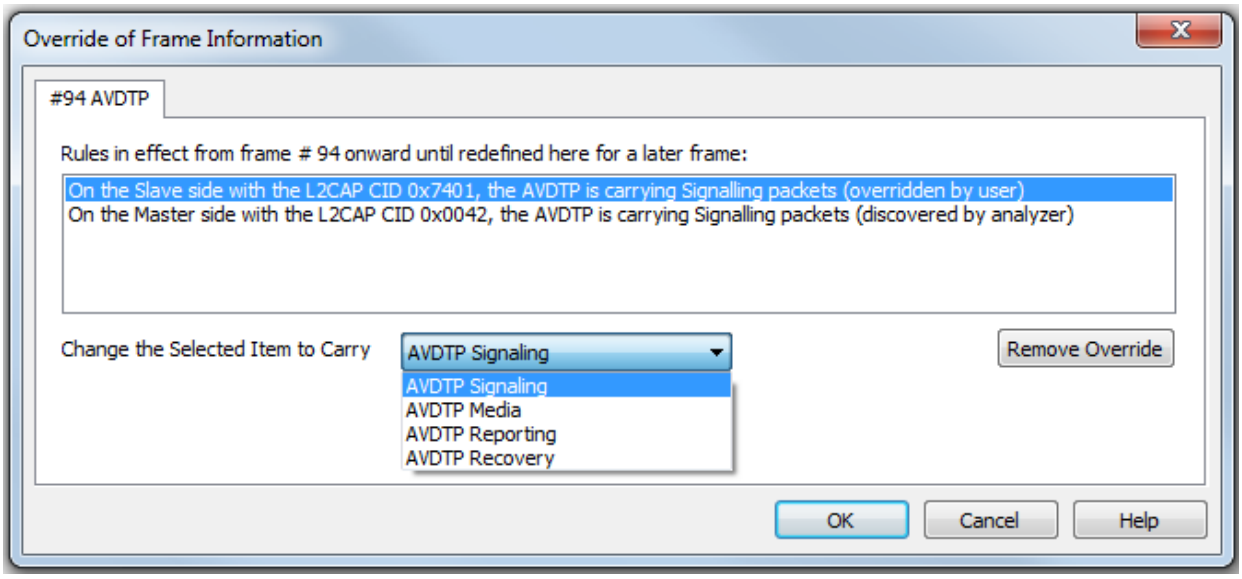
Override of Frame Information
#94 AVDTP
Rules in effect from frame # 94 onward until redefined here for a later frame:
On the Slave side with the L2CAP CID 0x7401, the AVDTP is carrying Signalling packets (overridden by user)
On the Master side with the L2CAP CID 0x0042, the AVDTP is carrying Signalling packets (discovered by analyzer)
Change the Selected Item to Carry
AVDTP Signaling
AVDTP Signaling
AVDTP Media
AVDTP Reporting
AVDTP Recovery
Remove Override
OK
Cancel
Help

Figure 3.9 - AVDTP Override of Frame Information, Item to Carry

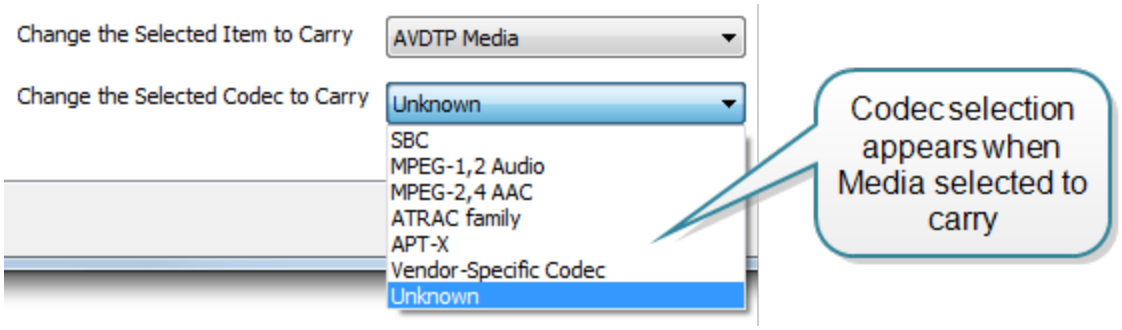

Figure 3.10 - AVDTP Override of Frame Information, Media Codec Selection

Each entry in the **Set Subsequent Decoder Parameters** dialog takes effect from the specified frame onward or until redefined in this dialog on a later frame. If you are unhappy with your changes, you can undo them by simply choosing your override from the dialog box and pressing the 'Remove Override' button. After pressing 'OK,' the capture file will recompile as if your changes never existed, so feel free to experiment with desired changes if you are unsure of what configuration to use.

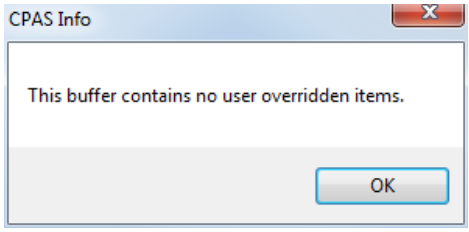

Note: If the capture has no user defined overrides, then the system displays a dialog stating that no user defined overrides exist.

3.2.4 L2CAP Decoder Parameters

3.2.4.1 About L2CAP Decoder Parameters

Each entry in the Set Initial Decoder Parameters dialog takes effect from the beginning of the capture onward or until redefined in the Set Subsequent Decoder Parameters dialog.

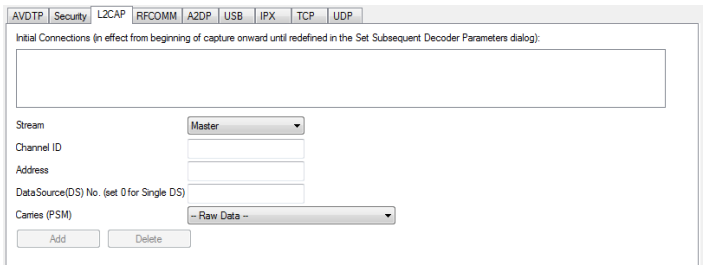

Figure 3.11 - L2CAP Decoder parameters tab

The **L2CAP Set Initial Decoder Parameters** dialog requires the following user inputs to complete a Parameter :

- **Stream** - This identifies the role of the device initiating the frame (master or slave)
- **Channel ID** - The channel number 0 through 78
- **Address** - This is the physical connection values for the devices. Each link in the net will have an address. A piconet can have up to seven links. The **Frame Display** can provide address information.

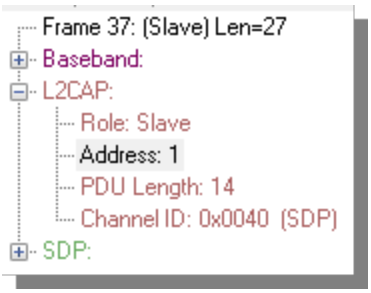

- **Data Source (DS) No.** -When only one data source is employed, set this parameter to 0 (zero), otherwise, set to the desired data source number.

Carries (PSM) - Select the protocol that L2CAP traverses to from the following:

- AMP Manager
- AMP Test Manager
- SDP
- RFCOMM
- TCS
- LPMP
- BNEP
- HCRP Control
- HCRP Data
- HID

- AVCTP
- AVDTP
- CMTP
- MCAP Control
- IEEE P11073 20601
- -Raw Data-

Adding, Deleting, and Saving L2CAP Parameters

1. From the **Set Initial Decoder Parameters** window, click on the **L2CAP** tab.
2. Set or select the **L2CAP** decoder parameters.
3. Click on the **ADD** button. The Intial Connection window displays the added parameters.

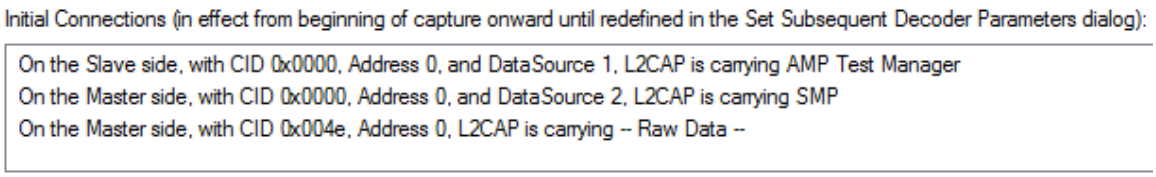
Initial Connections (in effect from beginning of capture onward until redefined in the Set Subsequent Decoder Parameters dialog):
On the Slave side, with CID 0x0000, Address 0, and DataSource 1, L2CAP is carrying AMP Test Manager
On the Master side, with CID 0x0000, Address 0, and DataSource 2, L2CAP is carrying SMP
On the Master side, with CID 0x004e, Address 0, L2CAP is carrying -- Raw Data --

Figure 3.12 - Parameters Added to Decoder

4. To delete a parameter from the **Initial Connections** window, select the parameter and click on the **Delete** button.
5. Decoder parameters cannot be edited. The only way to change a parameter is to delete the original as described above, and recreate the parameter with the changed settings and selections and then click on the **Add** button.
6. **L2CAP** parameters are saved when the template is saved. Adding a New or Saving an Existing Template on page 26

3.2.4.2 L2CAP Override Decode Information

The **Set Subsequent Decoder Parameters** dialog allows the user to override an existing parameter at any frame in the capture where the parameter is used.

If you have a parameter in effect and wish to change that parameter:

1. Select the frame where the change should take effect
2. Select **Set Subsequent Decoder Parameters** from the **Options** menu, or by selecting a frame in the frame display and choosing from the right-click pop-up menu, and make the needed changes. Refer to
3. Change the L2CAP parameter by selecting from the rule to change, and click on the listed parameters.
4. If you wish to remove an overridden rule click on **Remove Override** button. If you want to remove all decoder parameter settings click on **Remove All**.
5. Click **OK**.

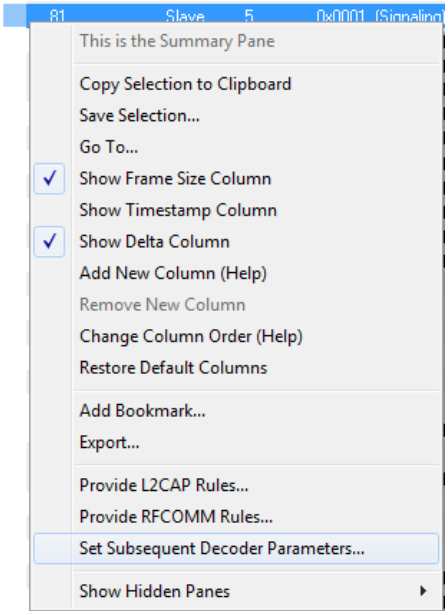

Each entry in the **Set Subsequent Decoder Parameters** dialog takes effect from the specified frame onward or until redefined in this dialog on a later frame.

Note: If the capture has no user defined overrides, then the system displays a dialog stating that no user defined overrides exist.

3.2.5 RFCOMM Decoder Parameters

3.2.5.1 About RFCOMM Decoder Parameters

Each entry in the **Set Initial Decoder Parameters** dialog takes effect from the beginning of the capture onward or until redefined in the **Set Subsequent Decoder Parameters** dialog.

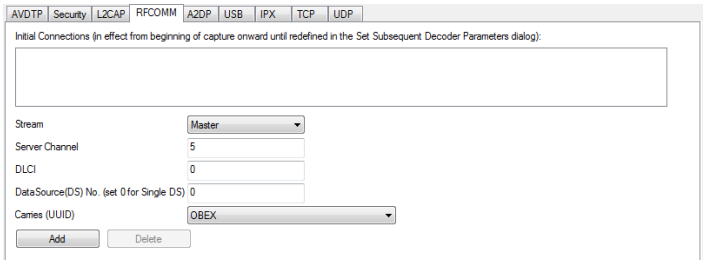
AVDTP Security L2CAP RFCOMM A2DP USB IPX TCP UDP
Initial Connections (In effect from beginning of capture onward until redefined in the Set Subsequent Decoder Parameters dialog):
Stream Master
Server Channel 5
DLCI 0
DataSource(DS) No. (set 0 for Single DS) 0
Carries (UUID) OBEX
Add
Delete

Figure 3.13 - RFCOMM parameters tab

The **RFCOMM Set Initial Decoder Parameters** tab requires the following user inputs to complete a parameter:

- **Stream** - Identifies the role of the device initiating the frame (master or slave)
- **Server Channel** - The Bluetooth® channel number 0 through 78
- **DLCI** - This is the Data Link Connection Identifier, and identifies the ongoing connection between a client and a server

- **Data Source (DS) No**.- When only one data source is employed, set this parameter to 0 (zero), otherwise, set to the desired data source
- **Carries (UUID)** - Select from the list to apply the Universal Unique Identifier (UUID) of the application layer that RFCOMM traverses to from the following:
  - OBEX
  - SPP
  - encap asyncPPP
  - Headset
  - FAX
  - Hands Free
  - SIM Access
  - VCP
  - UDI
  - -Raw Data-

Adding, Deleting, and Saving RFCOMMParameters

1. From the **Set Initial Decoder Parameters** window, click on the **RFCOMM**tab.
2. Set or select the **RFCOMM**decoder parameters.
3. Click ont he **ADD** button. The Intial Connection window displays the added parameters.


Initial Connections (in effect from beginning of capture onward until redefined)
In the piconet 2 on the Slave side with the L2CAP CID 0x0000 and with the remote side TSID 0, the AVDTP is carrying Signalling packets (Modified by user)
In the piconet 2 on the Master side with the L2CAP CID 0x0000 and with the remote side TSID -1, the AVDTP is carrying Reporting packets (Modified by user)
In the piconet 2 on the Master side with the L2CAP CID 0x0000 and with the remote side TSID 0, the AVDTP is carrying Unknown (Modified by user)

Figure 3.14 - Parameters Added to Decoder

4. To delete a parameter from the **Initial Connections** window, select the parameter and click on the **Delete** button.
5. Decoder parameters cannot be edited. The only way to change a parameter is to delete the original as described above, and recreate the parameter with the changed settings and selections and then click on the **Add** button.
6. RFCOMM parameters are saved when the template is saved as described in Adding a New or Saving an Existing Template on page 26

3.2.5.2 RFCOMM Missing Decode Information

ComProbe software usually determines the protocol carried in an RFCOMM payload by monitoring previous traffic. However, when this fails to occur, the **Missing Decoding Information Detected** dialog appears and requests that the user supply the missing information.

The following are the most common among the many possible reasons for a failure to determine the traversal:

- The capture session started after transmission of the vital information
- The analyzer incorrectly received a frame with the traversal information
- The communication monitored takes place between two players with implicit information not included in the transmission

In any case, either view the RFCOMM payload of this frame (and other frames with the same channel) as hex data, or assist the analyzer by selecting a protocol using this dialog.

Note that you may use the rest of the analyzer without addressing this dialog. Additional information gathered during the capture session may help you decide how to respond to the request for decoding information.

If you are not sure of the payload carried by the subject frame, look at the raw data shown under **data** in the **Decode** pane in the **Frame Display**. You may notice something that hints as to the profile in use.

In addition, look at some of the frames following the one in question. The data may not be recognizable to the analyzer at the current point due to connection setup, but might be discovered later on in the capture.

3.2.5.3 RFCOMM Override Decode Information

The **Set Subsequent Decoder Parameters** dialog allows the user to override an existing parameter at any frame in the capture where the parameter is used.

If you have a parameter in effect and wish to change that parameter:

1. Select the frame where the change should take effect, and select **Set Subsequent Decoder Parameters** from the **Options** menu, or by selecting a frame in the frame display and choosing from the right-click pop-up menu, and make the needed changes.
2. Change the RFCOMM parameter by selecting from the **Change the Selected Item to Carry** drop down list.
3. If you wish to remove an overridden rule click on **Remove Override** button. If you want to remove all decoder parameter settings click on **Remove All**.
4. Choose the protocol the selected item carries from the drop-down list, and click **OK**.

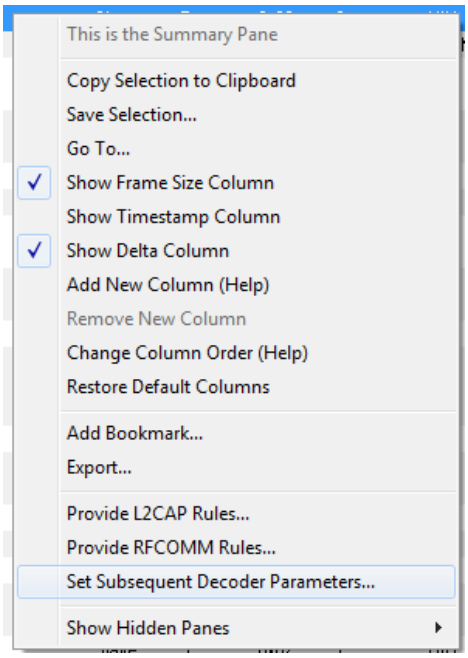

Each entry in the **Set Subsequent Decoder Parameters** dialog takes effect from the specified frame onward or until redefined in this dialog on a later frame.

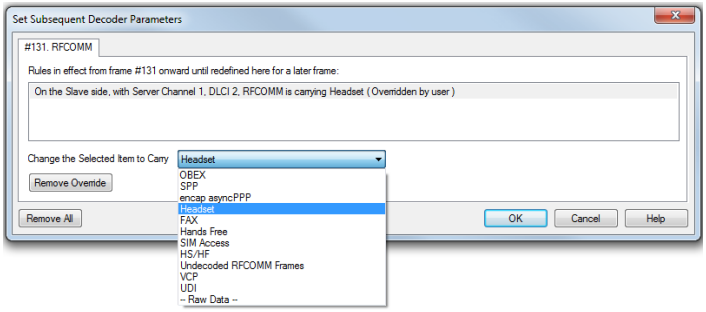

Figure 3.15 - Set Subsequent Decoder Parameters selection list

Note: If the capture has no user defined overrides, then the system displays a dialog stating that no user defined overrides exist.

Chapter 4 Capturing and Analyzing Data

The following sections describe the various ComProbe software functions that capture and display data packets.

4.1 Capture Data

4.1.1 Air Sniffing: Positioning Devices

When capturing over the air packets, proper positioning of the ComProbe hardware and the Devices Under Test (DUTs) will result in the best possible captures and will mitigate sources of path loss and interference. The following procedures will help optimize the capture process especially if you are have problems obtaining reliable …captures.

Problems with indoor radio propagation

Even in free space, it is well understood that radio frequencies attenuate over distance. The free-space rule-of-thumb dictates that radio energy decreases in strength by 20 dB by each 10-to-1 increase in range. In the real-world, the effects of objects in an outdoor environment cause reflection, diffraction, and scattering resulting in greater signal losses. Indoors the situation can be worse. Reflections occur from walls and other large flat surfaces. Diffraction occurs from objects with sharp edges. Scattering is produced from objects with rough surfaces and from small objects. Also any object directly in the path of the radiation can present a hard or soft partition depending on the partition's material properties. Path losses from partitions are difficult to estimate.

Estimating indoor propagation loss

One estimate of indoor path loss, based on path loss data from a typical building, provides a $\frac{1}{range^{3.5}}$ power rule. At 2.4 GHz, the following relationship provides an approximate estimate of indoor path loss:

$$Indoor\ Path\ Loss\ (in\ dB) = 40 + 35Log_{10}(range,\ in\ meters)$$

This approximation is expected to have a variance of 13 dB.

Mitigating path loss and interference

Bluetooth device design contributes to mitigating environmental effects on propagation through spread spectrum radio design, for example. However, careful planning of the testing environment can also contribute to reliable data capture process.

The first step to ensuring reliable air-sniffing data capture is to understand the RF characteristics of the Devices Under Test (DUTs). The *Bluetooth* Class, antenna types, and radiation patterns are all important factors that can affect the placement of the DUTs and the ComProbe analyzer. Radiation patterns are rarely spherical, so understanding your device's radiation patterns can greatly enhance successful data capture. Position devices to avoid radiation attenuation by the surroundings.

This step is optional: Consider conductive testing to establish a baseline capture. Conductive testing isolates the DUTs and analyzer from environmental effects.

The next step is to ensure that the testing environment is as clutter-free as possible.

- Line-of-sight obstructions should be eliminated between the ComProbe hardware and the DUTs because they cause a reduction in signal strength. Obstructions include, but are not limited to: water bottles, coffee cups, computers, computer screens, computer speakers, and books. A clear, unobstructed line-of-sight is preferred for DUT and ComProbe hardware positioning.
- If using an analyzer connected to a computer, position the computer on an adjacent table or surface away from the analyzer and DUTs, taking advantage of the cables' length. If this is not possible, position the computer behind the analyzer as far away as possible. If using the ComProbe FTS4BT, which is a dongle, either use an extension USB cable or position the computer such that the dongle is positioned towards the DUTs.
- The preferred placement is positioning the DUTs and the ComProbe hardware at the points of an equilateral triangle in the same horizontal plane, i.e. placed on the same table or work surface. The sides of the triangle should be between 1 and 2 meters for Bluetooth transmitter classes 1 and 2. The distance for transmitter class 3 should be 1/2 meter.

Figure 4.1 - Devices Equally Spaced in the Same Horizontal Plane

Finally, eliminate other RF sources.

- Wi-Fi interference should be minimized or eliminated. *Bluetooth* shares the same 2.4 GHz frequency bands as Wi-Fi technology. Wi-Fi interference can cause loss of packets and poor captures. In a laboratory or testing

environment do not place the DUTs and ComProbe hardware in close proximity with Wi-Fi transmitting sources such as laptops or routers. Turning off Wi-Fi on the computer running the ComProbe software is recommended.

Poor Placement

A poor test configuration for the analyzer is placing the DUTs very close to each other and the analyzer far away. The DUTs, being in close proximity to each other, reduce their transmission power and thus make it hard for the analyzer to hear the conversation. If the analyzer is far away from DUTs, there are chances that the analyzer may miss those frames, which could lead to failure in decryption of the data.

Obstacles in close proximity to or in between the analyzer and the DUTs can interfere and cause reduction in signal strength or interference. Even small objects can cause signal scattering.

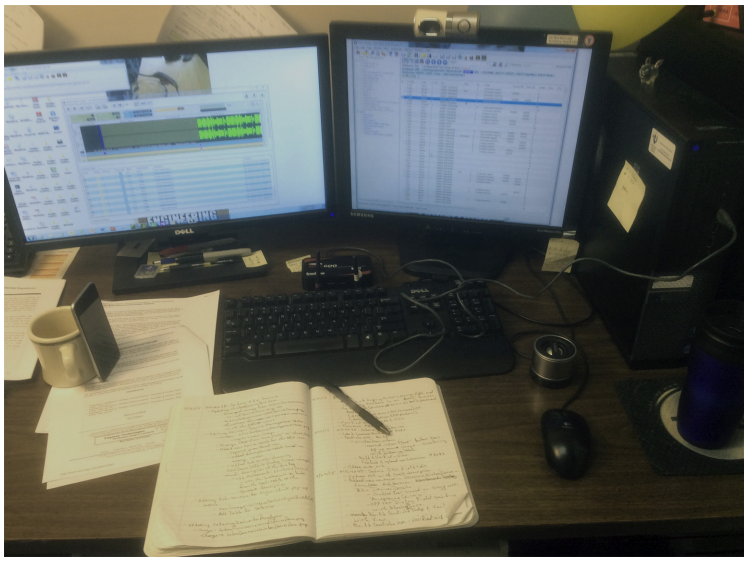

Figure 4.2 - Example: Poor Capture Environment

4.1.2 Capturing Data to Disk - General Procedure

Note: Capture is not available in Viewer mode.

1. Click the **Start Capture** button to begin capturing to a file. This icon is located on the **Control** , **Event Display**, and **Frame Display** windows.
2. Files are placed in My Capture Files by default and have a .cfa extension. Choose **Directories** from the **Options** menu on the **Control** window to change the default file location.

   Note: For the Dashboard, when you capture to series of files, the window displays the data from the beginning of the first capture, even when a new file in the series is created. This is because the Dashboard is a "Session Monitor", which means that even if you capture to a series of files, the data from the first file is always displayed. The display does not refresh when a new capture file in a series is created.
3. Watch the status bar on the **Control** window to monitor how full the file is. When the file is full, it begins to **wrap**, which means the oldest data will be overwritten by new data.

4. Click the **Stop Capture** icon to temporarily stop data capture. Click the **Start Capture** icon again to resume capture. Stopping capture means no data will be added to the capture file until capture is resumed, but the previously captured data remains in the file.
5. To clear captured data, click the **Clear** icon .

- If you select **Clear** after selecting **Stop Capture**, a dialog appears asking whether you want to save the data.
  - You can click **Save File** and enter a file name when prompted .
  - If you choose **Do Not Save**, all data will be cleared.
  - If you choose **Cancel,** the dialog closes with no changes.
- If you select the **Clear** icon while a capture is occurring:
  - The capture stops.
  - A dialog appears asking if you want to save the capture
  - You can select **Yes** and save the capture or select **No** and close the dialog. In either case, the existing capture file is cleared and a new capture file is started.
  - If you choose **Cancel**, the dialog closes with no changes.

To see how to capture to a single file, choose System Settings from the Options menu on the Control window.

When live capture stops, no new packets are sniffed but there can still be packets that were previously sniffed but not yet read by the ComProbe analyzer. This happens when packets are being sniffed faster than the ComProbe analyzer can process them. These packets are stored either on the ComProbe hardware itself or in a file on the PC. If there are remaining packets to be processed when live capture stops the **Transferring Packets** dialog below is displayed showing the packets yet to be read by the ComProbe analyzer. The dialog shows the name of each ComProbe hardware device, its process id in square brackets, and the number of packets remaining. These stored packets are read until they're exhausted or the user clicks the Discard button on the dialog.

Unlike 802.11, *Bluetooth* packets never come in faster than the datasource can process them. However, *Bluetooth* packets must still be stored so that they can be read in chronological order with the 802.11 packets.

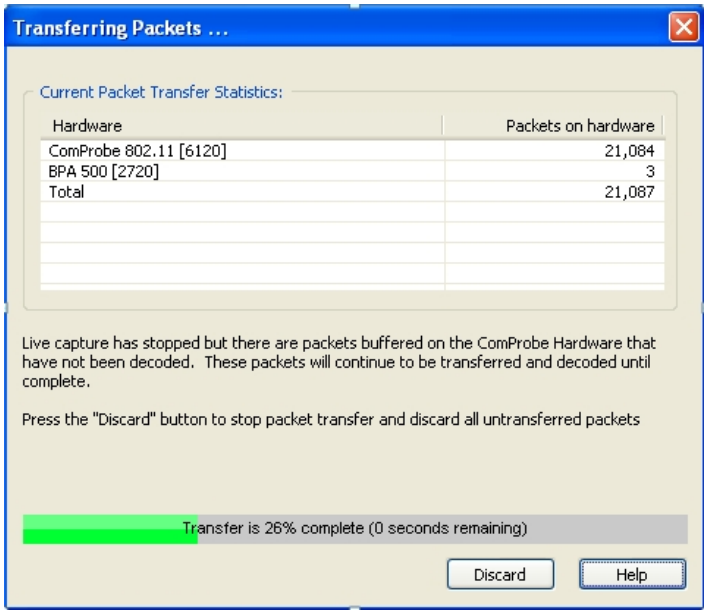
Transferring Packets ...
Current Packet Transfer Statistics:
Hardware
Packets on hardware
ComProbe 802.11 [6120]
21,084
BPA 500 [2720]
3
Total
21,087
Live capture has stopped but there are packets buffered on the ComProbe Hardware that have not been decoded. These packets will continue to be transferred and decoded until complete.
Press the "Discard" button to stop packet transfer and discard all untransferred packets
Transfer is 26% complete (0 seconds remaining)
Discard
Help

Figure 4.3 - Packet Transfer Dialog

4.1.3 Capturing Data with BPA 500 Devices

Once you have completed the **Devices Under Test** selection, you are ready to capture data.

Note: Data Capture is not available in Viewer mode.

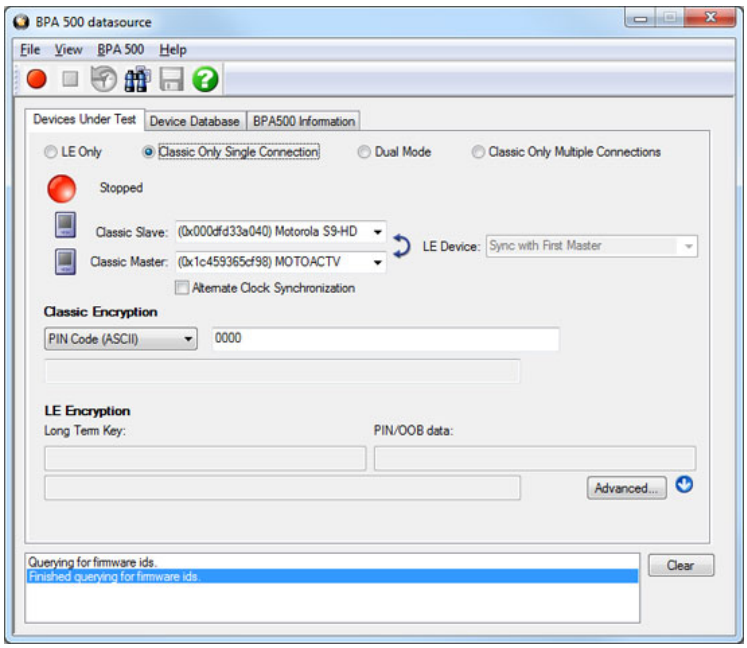

Figure 4.4 - BPA 500 Datasource Dialog

1. Select the start sniffing button on the toolbar or,**Start Sniffing** on the **BPA 500** menu.

2. The pairing process between the devices begins.

As data is being captured, the Status message at the top of the window indicates the synchronization status of the ComProbe analyzer. Also, the color of the ComProbe icon changes depending on the synchronization state. There are four states:

Table 4.1 - BPA 500 LED Capture Indicators

LED Color	Description
	Red = Halted/Pending
	Green = Waiting for the master to connect to the slave
	Blue = Synchronized with the master clock — link active
	Grey = Synchronized with the master clock — link inactive
	Yellow = Waiting for the master to resume transmission

When you are capturing data, there are several important concepts to consider.

- Files are placed in My Capture Files by default and have a .cfa extension. Choose **Directories** from the **Options** menu on the **Control** window to change the default file location.

- Watch the status bar on the **Control** window to monitor how full the file is. When the file is full, it begins to wrap, which means the oldest data will be overwritten by new data.

- Click the **Stop** icon to temporarily stop data capture. Click the **Start Capture** icon again to resume capture. Stopping capture means no data will be added to the capture file until capture is resumed, but the previously captured date remains in the file.

- To clear captured data, click the **Clear** icon .

  - If you select **Clear** after selecting **Stop**, a dialog appears asking whether you want to save the data.

    - You can click **Save File** and enter a file name when prompted .

    - If you choose **Do Not Save**, all data will be cleared.

    - If you choose **Cancel,** the dialog closes with no changes.

- If you select the **Clear** icon while a capture is occurring:
  - The capture stops.
  - A dialog appears asking if you want to save the capture
  - You can select Yes and save the capture or select No and close the dialog. In either case, the existing capture file is cleared and a new capture file is started.
  - If you choose Cancel, the dialog closes with no changes.

- The link key/pin code can be changed while sniffing and the changes will be automatically saved in the configuration file.
  - While the device is sniffing click in the Classic Encryption link key/pin code field. This action places the focus on that window.
  - Change the link key/pin code.
  - The Status window at the bottom of the page will inform the user to move focus away from the link key/pin code window.
  - Click the mouse outside the link key/pin code field or press the Tab key. This action will remove the focus from the link key/pin code window.
  - The link key/pin code changes are automatically saved to the configuration file.


In order to automatically save changes, move focus away from field when editing is complete.
Automatically saving pin code.
Clear

4.1.4 Extended Inquiry Response

Extended Inquiry Response (EIR) is a tab that appears automatically on the **Frame Display** window when you capture data.

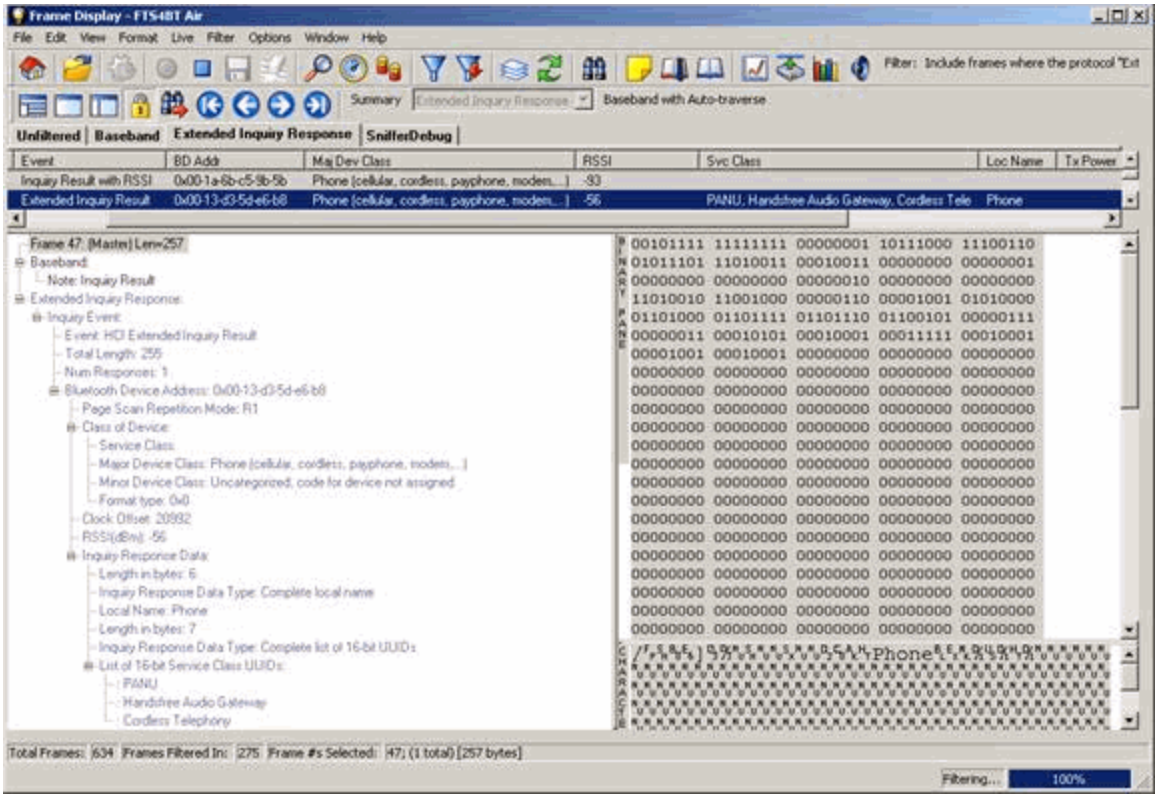

Figure 4.5 - Frame Display Extended Inquire Response

EIR displays extensive information about the Bluetooth® devices that are discovered as data is being captured. EIR provides more information during the inquiry procedure to allow better filtering of devices before connection; and sniff subrating, which reduces the power consumption in low-power mode. Before the EIR tab was created, this type of information was not available until a connection was made to a device. Therefore, EIR can be used to determine whether a connection can/should be made to a device prior to making the connection.

Note: If a *Bluetooth* device does not support **Extended Inquiry Response**, the tab displays **Received Signal Strength Indication** (RSSI) data, which is less extensive than EIR data.

4.2 Protocol Stacks

4.2.1 Protocol Stack Wizard

The Protocol Stack wizard is where you define the protocol stack you want the analyzer to use when decoding frames.

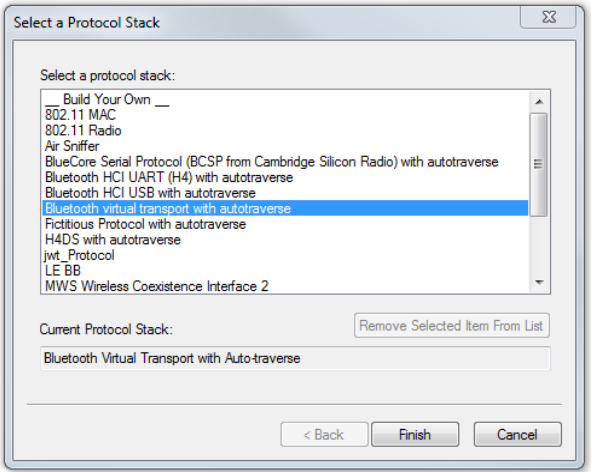

To start the wizard:

1. Choose **Protocol Stack** from the **Options** menu on the **Control** window or click the **Protocol Stack** icon on the **Frame Display**.
2. Select a protocol stack from the list, and click **Finish**.

Most stacks are pre-defined here. If you have special requirements and need to set up a custom stack, see Creating and Removing a Custom Stack on page 47.

1. If you select a custom stack (i.e. one that was defined by a user and not included with the analyzer), the **Remove Selected Item From List** button becomes active.
2. Click the **Remove Selected Item From List**button to remove the stack from the list. You cannot remove stacks provided with the analyzer. If you remove a custom stack, you need to define it again in order to get it back.

If you are changing the protocol stack for a capture file, you may need to reframe. See Reframing on page 48 for more information.

You cannot select a stack or change an existing one for a capture file loaded into the Capture File Viewer (the Capture File Viewer is used only for viewing capture files and cannot capture data). Protocol Stack changes can only be made from a live session.

4.2.2 Creating and Removing a Custom Stack

To create a custom stack:

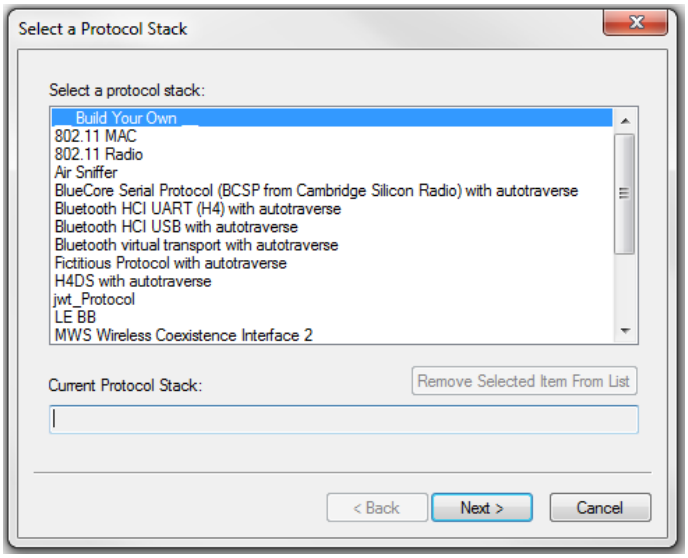

1. Choose **Protocol Stack** from the **Options** menu on the **Control** window or click the Protocol Stack icon on the **Frame Display** toolbar.
2. Select **Build Your Own** from the list and click **Next**.
3. The system displays an information screen that may help you decide if you need to define your own custom stack. Defining a custom stack means that the analyzer uses the stack for every frame. Frames that do not conform to the stack are decoded incorrectly. Click **Next** to continue.

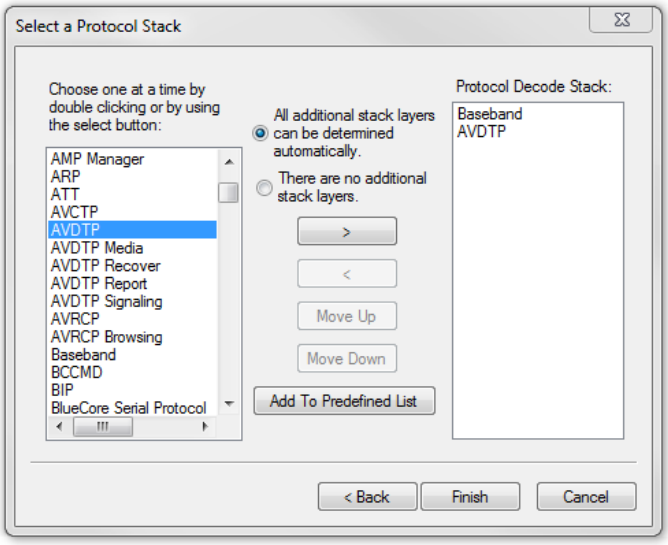

Select Protocols

1. Select a protocol from the list on the left.
2. Click the right arrow button to move it to the **Protocol Decode Stack** box on the right, or double-click the protocol to move it to the right.
3. To remove a protocol from the stack, double-click it or select it and click the left arrow button.
4. If you need to change the order of the protocols in the stack, select the protocol you want to move, and click on the **Move Up** and **Move Down** buttons until the protocol is in the correct position.
5. The lowest layer protocol is at the top of the list, with higher layer protocols listed underneath.

Auto-traversal (Have the analyzer Determine Higher Layers)

If you need to define just a few layers of the protocol stack, and the remaining layers can be determined based on the lower layers:

1. Click the **All additional stack layers can be determined automatically** button.
2. If your protocol stack is complete and there are no additional layers, click the **There are no additional stack layers** button.

3. If you select this option, the analyzer uses the stack you defined for every frame. Frames that do use this stack are decoded incorrectly.

Save the Stack

1. Click the Add To Predefined List button.
2. Give the stack a name, and click Add.

In the future, the stack appears in the **Protocol Stack List** on the first screen of the Protocol Stack wizard.

Remove a Stack

1. Select it in the first screen and click Remove Selected Item From List.
2. If you remove the stack, you must to recreate it if you need to use it again.

Note: If you do not save your custom stack, it does appear in the predefined list, but applies to the frames in the current session. However, it is discarded at the end of the session.

4.2.3 Reframing

If you need to change the protocol stack used to interpret a capture file and the framing is different in the new stack, you need to reframe in order for the protocol decode to be correct. You can also use **Reframe** to frame unframed data. The original capture file is not altered during this process.

Note: You cannot reframe from the Capture File Viewer (accessed by selecting Capture File Viewer or Load Capture File to start the software and used only for viewing capture files).

To reframe your data, load your capture file, select a protocol stack, and then select **Reframe** from the **File** menu on the **Control** window. **Reframe** is only available if the frame recognizer used to capture the data is different from the current frame recognizer.

In addition to choosing to **Reframe**, you can also be prompted to Reframe by the Protocol Stack Wizard.

1. Load your capture file by choosing **Open** from the **File** menu on the **Control** window, and select the file to load.
2. Select the protocol stack by choosing **Protocol Stack** from the **Options** menu on the **Control** window, select the desired stack and click **Finish**.
3. If you selected a protocol stack that includes a frame recognizer different from the one used to capture your data, the **Protocol Stack Wizard** asks you if you want to reframe your data. Choose **Yes**.
4. The analyzer adds frame markers to your data, puts the framed data into a new file, and opens the new file. The original capture file is not altered.

See Unframing on page 48 for instructions on removing framing from data.

4.2.4 Unframing

This function removes start-of-frame and end-of-frame markers from your data. The original capture file is not altered during this process. You cannot unframe from the Capture File Viewer (accessed by selecting Capture File Viewer or Load Capture File to start the software and used only for viewing capture files).

To manually unframe your data:

1. Select **Unframe** from the **File** menu on the **Control** window. **Unframe** is only available if a protocol stack was used to capture the data and there is currently no protocol stack selected.

In addition to choosing to **Unframe**, you can also be prompted to Unframe by the Protocol Stack Wizard.

1. Load your capture file by choosing **Open** from the **File** menu on the **Control** window.
2. Select the file to load.
3. Choose **Protocol Stack** from the **Options** menu on the **Control** window
4. Select **None** from the list
5. Click **Finish**. The Protocol Stack Wizard asks you if you want to unframe your data and put it into a new file.
6. Choose **Yes**.

The system removes the frame markers from your data, puts the unframed data into a new file, and opens the new file. The original capture file is not altered.

See Reframing on page 48 for instructions on framing unframed data.

4.2.5 How the Analyzer Auto-traverses the Protocol Stack

In the course of doing service discovery, devices ask for and receive a Protocol Descriptor List defining which protocol stacks the device supports. It also includes information on which PSM to use in L2CAP, or the channel number for RFCOMM, or the port number for TCP or UDP. The description below talks about how the analyzer auto-traverses from L2CAP using a dynamically assigned PSM, but the principle is the same for RFCOMM channel numbers and TCP/UDP port numbers.

The analyzer looks for SDP Service Attribute Responses or Service Search Attribute Responses carrying protocol descriptor lists. If the analyzer sees L2CAP listed with a PSM, it stores the PSM and the UUID for the next protocol in the list.

After the SDP session is over, the analyzer looks at the PSM in the L2CAP Connect frames that follow. If the PSM matches one the analyzer has stored, the analyzer stores the source channel ID and destination channel ID, and associates those channel IDs with the PSM and UUID for the next protocol. Thereafter, when the analyzer sees L2CAP frames using those channel IDs, it can look them up in its table and know what the next protocol is.

In order for the analyzer to be able to auto-traverse using a dynamically assigned PSM, it has to have seen the SDP session giving the Protocol Descriptor Lists, and the subsequent L2CAP connection using the PSM and identifying the source and channel IDs. If the analyzer misses any of this process, it is not able to auto-traverse. It stops decoding at the L2CAP layer.

For L2CAP frames carrying a known PSM (0x0001 for SDP, for example, or 0x0003 for RFCOMM), the analyzer looks for Connect frames and stores the PSM along with the associated source and destination channel IDs. In this case the analyzer does not need to see the SDP process, but does need to see the L2CAP connection process, giving the source and destination channel IDs.

4.2.6 Providing Context For Decoding When Frame Information Is Missing

There may be times when you need to provide information to the analyzer because the context for decoding a frame is missing. For example, if the analyzer captured a response frame, but did not capture the command frame

indicating the command.

The analyzer provides a way for you to supply the context for any frame, provided the decoder supports it. (The decoder writer has to include support for this feature in the decoder, so not all decoders support it. Note that not all decoders require this feature.)

If the decoder supports user-provided context, three items are active on the **Options** menu of the **Control** window and the **Frame Display** window. These items are **Set Initial Decoder Parameters**, **Automatically Request Missing Decoding Information**, and **Set Subsequent Decoder Parameters**. (These items are not present if no decoder is loaded that supports this feature.)

Set Initial Decoder Parameters is used to provide required information to decoders that is not context dependent but instead tends to be system options for the protocol.

Choose **Set Initial Decoder Parameters** in order to provide initial context to the analyzer for a decoder. A dialog appears that shows the data for which you can provide information.

If you need to change this information for a particular frame :

1. Right-click on the frame in the Frame Display window
2. Choose Provide <context name>.

Alternatively, you can choose **Set Subsequent Decoder Parameter** from the **Options** menu.

3. This option brings up a dialog showing all the places where context data was overridden.
4. If you know that information is missing, you can't provide it, and you don't want to see dialogs asking for it, un-check **Automatically Request Missing Decoding Information.**
5. When unchecked, the analyzer doesn't bother you with dialogs asking for frame information that you don't have. In this situation, the analyzer decodes each frame until it cannot go further and then simply stop decoding.

4.3 Analyzing Byte Level Data

4.3.1 Event Display

To open this window click the **Event Display** icon on the **Control** window toolbar.

The **Event Display** window provides detailed information about every captured event. Events include data bytes, data related information such as start-of-frame and end-of-frame flags, and the analyzer information, such as when the data capture was paused. Data bytes are displayed in hex on the left side of the window, with the corresponding ASCII character on the right.

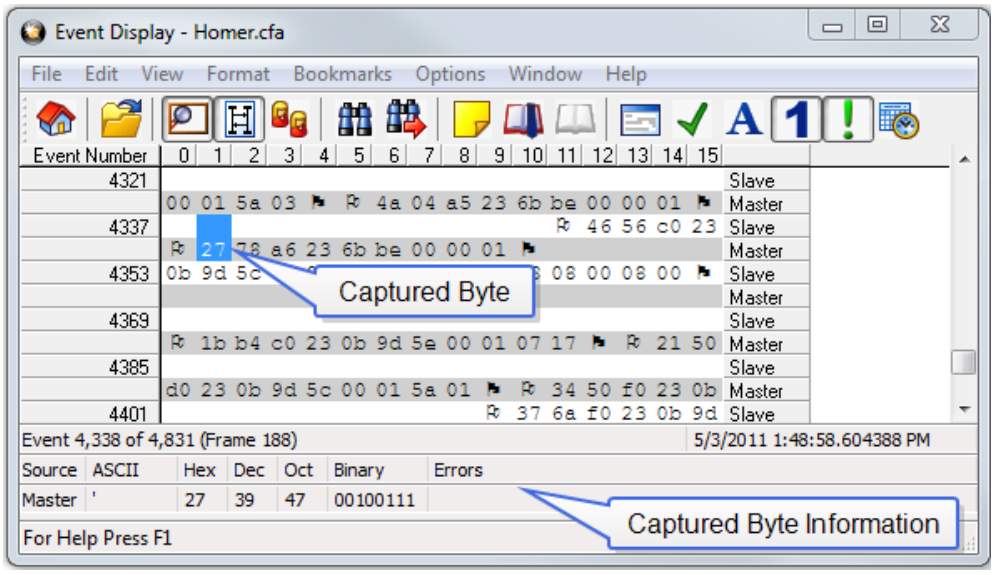
Event Display - Homer.cfa
File Edit View Format Bookmarks Options Window Help
Event Number
Captured Byte
Event 4,338 of 4,831 (Frame 188)
5/3/2011 1:48:58.604388 PM
Source ASCII Hex Dec Oct Binary Errors
Master ' 27 39 47 00100111
Captured Byte Information
For Help Press F1

Figure 4.2 Event Display

Click on an event to find out more about it. The three status lines at the bottom of the window are updated with information such as the time the event occurred (for data bytes, the time the byte was captured), the value of the byte in hex, decimal, octal, and binary, any errors associated with the byte, and more.

Events with errors are shown in red to make them easy to spot.

When capturing data live, the analyzer continually updates the Event Display as data is captured. Make sure the **Lock** icon is displayed on the toolbar to prevent the display from updating (Clicking on the icon again will unlock the display). While locked, you can review your data, run searches, determine delta time intervals between bytes, and check CRCs. To resume updating the display, click the **Lock** icon again.

You can have more than one **Event Display** open at a time. Click the **Duplicate View** icon to create a second, independent **Event Display** window. You can lock one copy of the **Event Display** and analyze your data, while the second **Event Display** updates as new data is captured.

Event Display is synchronized with the **Frame Display** and **Mesage Sequence Chart** dialogs. Selecting a byte in **Event Display** will also select the related frame in the **Frame Display** and the related message in the **Message Sequence Chart**.

4.3.2 The Event Display Toolbar

Home – Brings the Control window to the front.

Home – Brings the Control window to the front.

Start Capture - Begins data capture to disk.

Stop Capture - Closes a capture file and stops data capture to disk.

Save - Prompts user for a file name. If the user supplies a name, a .cfa file is saved.

Clear- Discards the temporary file and clears the display.

MSC Chart - Opens the Message Sequence Chart

Lock - In the Lock state, the window is locked so you can review a portion of data. Data capture continues in the background. Clicking on the Lock icon unlocks the window.

Unlock - In the Unlock state, the screen fills in the data captured since the screen lock and moves down to display incoming data again. Clicking on the Unlock icon locks the window.

Duplicate View - Creates a second Event Display window identical to the first.

Frame Display - (framed data only) Brings up a Frame Display, with the frame of the currently selected bytes highlighted.

Display Capture Notes - Brings up the Capture Notes window where you can view or add notes to the capture file.

Add/Modify Bookmark - Add a new or modify an existing bookmark.

Display All Bookmarks - Shows all bookmarks and lets you move between bookmarks.

Find - Search for errors, string patterns, special events and more.

Go To - Opens the Go To dialog, where you can specify which event number to go to.

CRC - Change the algorithm and seed value used to calculate CRCs. To calculate a CRC, select a byte range, and the CRC appears in the status lines at the bottom of the Event Display.

Mixed Sides - (Serial data only) By default, the analyzer shows data with the DTE side above the DCE side. This is called DTE over DCE format. DTE data has a white background and DCE data has a gray background. The analyzer can also display data in mixed side format. In this format, the analyzer does not separate DTE data from DCE data but shows all data on the same line as it comes in. DTE data is still shown with a white background and DCE data with a gray background so that you can distinguish between the two. The benefit of using this format is that more data fits onto one screen.

Character Only - The analyzer shows both the number (hex, binary, etc.) data and the character (ASCII, EBCDIC or BAUDOT) data on the same screen. If you do not wish to see the hex characters, click on the Character Only button. Click again to go back to both number and character mode.

Number Only - Controls whether the analyzer displays data in both character and number format, or just number format. Click once to show only numeric values, and again to show both character and numeric values.

All Events - Controls whether the analyzer shows all events in the window, or only data bytes. Events include control signal changes and framing information.

Timestamping Options – Brings up the timestamping options window which has options for customizing the display and capture of timestamps.

4.3.3 Opening Multiple Event Display Windows

Click the **Duplicate View** icon from the **Event Display** toolbar to open a second **Event Display** window.

You can open as many **Event Display** windows as you like. Each **Event Display** is independent of the others and can show different data, use a different radix or character set, or be frozen or live.

The **Event Display** windows are numbered in the title bar. If you have multiple **Event Displays** open, click on the **Event Display** icon on the **Control** window toolbar to show a list of all the **Event Displays** currently open. Select a window from the list to bring it to the front.

4.3.4 Calculating CRCs or FCSs

The cyclic redundancy check (CRC) is a function on the **Event Display** window used to produce a checksum. The frame check sequence (FCS) are the extra checksum characters added to a frame to detect errors.

1. Open the **Event Display** window.
2. Click and drag to select the data for which you want to generate a CRC.
3. Click on the **CRC** icon .
4. In the **CRC** dialog box, click on the down arrow to show the list of choices for CRC algorithms..
5. Enter a **Seed** value in hexadecimal if desired.
6. Click **OK** to generate the CRC. It appears in the byte information lines at the bottom of the Event Display window. Whenever you select a range of data, a CRC is calculated automatically.

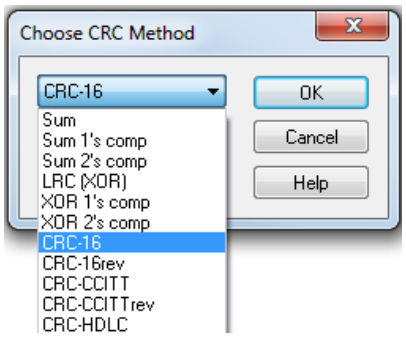

4.3.5 Calculating Delta Times and Data Rates

1. Click on the E**vent Display** icon on the **Control** window to open the **Event Display** window.
2. Use the mouse to select the data you want to calculate a delta time and rate for.
3. The **Event Display** window displays the delta time and the data rate in the status lines at the bottom of the window.

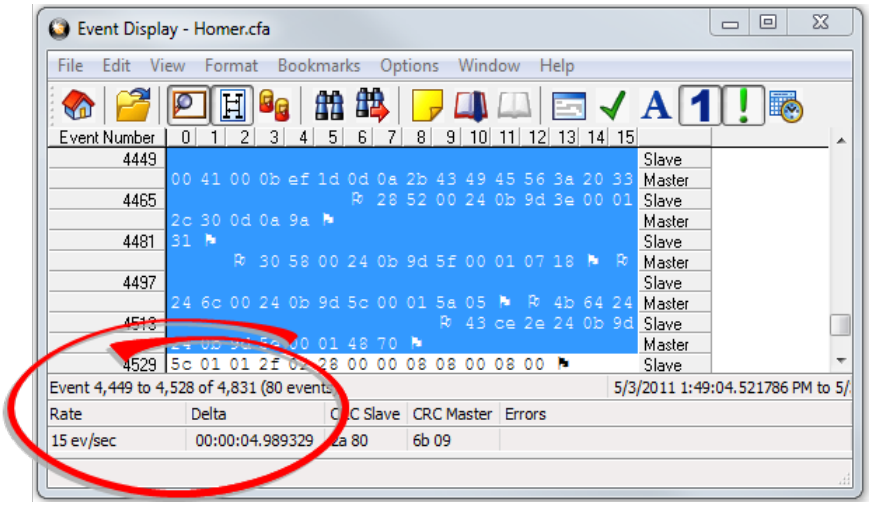

Figure 4.3 Delta fields

4.3.6 Switching Between Live Update and Review Mode

The **Event Display** and **Frame Display** windows can update to display new data during live capture, or be frozen to allow data analysis. By default, the **Event Display** continually updates with new data, and the **Frame Display** is locked.

1. Make sure the **Lock** icon is active so the display is locked and unable to scroll.
2. Click the **Unlock** icon again to resume live update.

The analyzer continues to capture data in the background while the display is locked. Upon resuming live update, the display updates with the latest data.

You can have more than one **Event Display** or **Frame Display** window open at a time. Click the **Duplicate View** icon to open additional Event or Frame Display windows. The lock/resume function is independent on each window. This means that you can have two **Event Display** windows open simultaneously, and one window can be locked while the other continues to update.

4.3.7 Data Formats and Symbols

4.3.7.1 Switching Between Viewing All Events and Viewing Data Events

By default, the analyzer on the Event Display dialog shows all **events**[1] that include:

- Data bytes
- Start-of-frame
- End-of-frame characters
- Data Captured Was Paused.

[1]An event is anything that happens on the circuit or which affects data capture. Data bytes, control signal changes, and long and short breaks are all events, as are I/O Settings changes and Data Capture Paused and Resumed.

Click on the **Display All Events** icon to remove the non-data events. Click again to display all events.

See List of all Event Symbols on page 57 for a list of all the special events shown in the analyzer and what they mean.

4.3.7.2 Switching Between Hex, Decimal, Octal or Binary

On the Event Display window the analyzer displays data in Hex by default. There are several ways to change the **radix**[1] used to display data.

Go to the **Format** menu and select the radix you want. A check mark next to the radix indicates which set is currently being used.

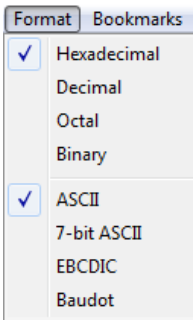

Figure 4.6 - Format Menu

1. Right-click on the data display header labels and choose a different radix.

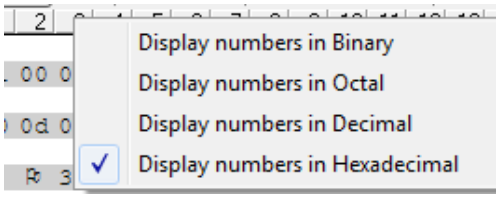

Figure 4.7 - Header labels, right click

2. Or right-click anywhere in the data display and select a different radix.

[1]The base of a number system. Binary is base 2, octal is base 8, decimal is base 10 and hexadecimal is base 16.

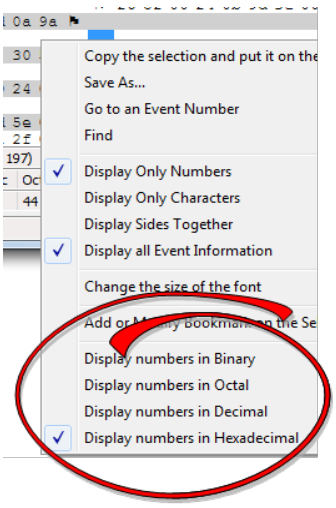

Figure 4.8 - Data display right click menu

If you want to see only the numerical values, click on the **Numbers Only** icon on the **Event Display** toolbar.

4.3.7.3 Switching Between ASCII, EBCDIC, and Baudot

On the **Event Display** window, the analyzer displays data in ASCII by default when you click on the **Characters Only** icon . There are several ways to change the character set used to display data.

1. Go to the **Format** menu and select the character set you want. A check mark next to the character set indicates which set is currently being used.
2. With the data displayed in characters, right-click on the data panel header label to choose a different character set.

If you want to see only characters, click on the Characters Only icon on the Event Display toolbar.

4.3.7.4 Selecting Mixed Channel/Sides

If you want to get more data on the **Event Display** window, you can switch to mixed sides mode. This mode puts all the data together on the same line. Data from one side (**Slave**) is shown on a white background and data from the other side (**Master**)is shown on a gray background.

1. Click once on the **Mixed Sides** icon to put the display in mixed sides mode.
2. Click again to return to side over side mode.
3. You can right click in the center of the data display window to change between mixed and side over side modes by selecting **Display Sides Together**. A check mark is displayed. Click on **Display Sides Together** to remove the check mark and return to side-by-side display.
4. Right click in the sides panel on the right of the data display and select **Display Sides Together**. A check mark is displayed. Click on **Display Sides Together** to remove the check mark and return to side-by-side display.

4.3.7.5 List of all Event Symbols

By default, the **Event Display** shows all **events**[1], which includes control signal changes, start and end of frame characters and flow control changes. If you want to see only the data bytes, click on the All Events button . Click again to display all events.

Click on a symbol, and the analyzer displays the symbol name and sometimes additional information in the status lines at the bottom of the **Event Display** window. For example, clicking on a control signal change symbol displays which signal(s) changed.

In addition to data bytes, the events shown are (in alphabetical order):

Table 4.4 - Event Symbols

Symbol	Event
	Abort
	Broken Frame - The frame did not end when the analyzer expected it to. This occurs most often with protocols where the framing is indicated by a specific character, control signal change, or other data related event.
	Buffer Overflow - Indicates a buffer overflow error. A buffer overflow always causes a broken frame.
	Control Signal Change - One or more control signals changed state. Click on the symbol, and the analyzer displays which signal(s) changed at the bottom of the Event Display window.
	Data Capture Paused - The Pause icon was clicked, pausing data capture. No data is recorded while capture is paused.
	Data Capture Resumed - The Pause icon was clicked again, resuming data capture.
	Dropped Frames - Some number of frames were lost. Click on the symbol, and the analyzer displays many frames were lost at the bottom of the Event Display window.
	End of Frame - Marks the end of a frame.
	Flow Control Active - An event occurred which caused flow control to become active (i.e. caused the analyzer to stop transmitting data) Events which activate flow control are signal changes or the receipt of an XON character.
	Flow Control Inactive - An event occurred which caused flow control to become inactive (i.e. caused the analyzer to transmit data). Events which deactivate flow control are signal changes or the receipt of an XOFF character.
	Frame Recognizer Change - A lowest layer protocol was selected or removed here, causing the frame recognizer to be turned off or on.
	I/O Settings Change - A change was made in the I/O Settings window which altered the baud, parity, or other circuit setting.
	Long Break

[1]An event is anything that happens on the circuit or which affects data capture. Data bytes, control signal changes, and long and short breaks are all events, as are I/O Settings changes and Data Capture Paused and Resumed.

Table 4.4 - Event Symbols (continued)

Symbol	Event
	Low Power - The battery in the ComProbe® is low.
	Short Break
	SPY Event (SPY Mode only) - SPY events are commands sent by the application being spied on to the UART.
	Start of Frame - Marks the start of a frame.
	Begin Sync Character Strip
	End Sync Character Strip
	Sync Dropped
	Sync Found
	Sync Hunt Entered
	Sync Lost
	Test Device Stopped Responding - The analyzer lost contact with the ComProbe for some reason, often because there is no power to the ComProbe.
	Test Device Began Responding - The analyzer regained contact with the ComProbe.
	Timestamping Disabled - Timestamping was turned off. Events following this event are not timestamped.
	Timestamping Enabled - Timestamping was turned on. Events following this event have timestamps.
	Truncated Frame- A frame that is not the same size as indicated within its protocol.
	Underrun Error
	Unknown Event

4.3.7.6 Font Size

The font size can be changed on several **Event Display** windows. Changing the font size on one window does not affect the font size on any other window.

To change the font size:

1. Click on **Event Display** menu **Options,** and select **Change the Font Size**.

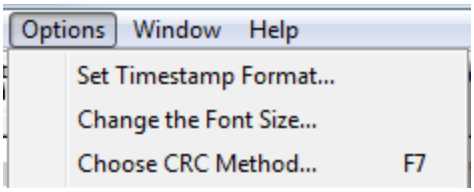

Figure 4.9 - Event Display Options menu

2. Choose a font size from the list.

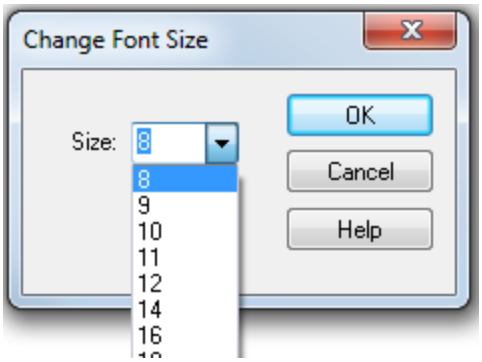

Figure 4.10 - Event Display Font Size Selection

3. Click **OK**.

4.4 Analyzing Protocol Decodes

4.4.1 Frame Display Window

To open this window

Click the **Frame Display** icon on the **Control** window toolbar, or select **Frame Display** from the **View** menu.

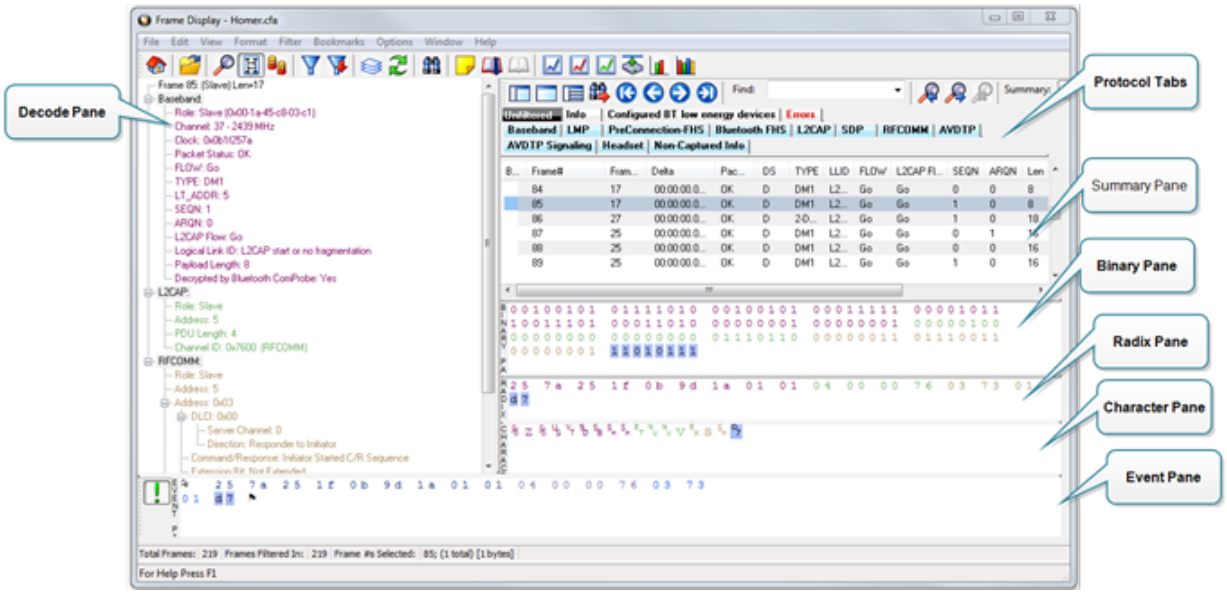

Figure 4.11 - Frame Display with all panes active

Frame Display Panes

The **Frame Display** window is used to view all frame related information. It is composed of a number of different sections or "panes", where each pane shows a different type of information about a frame.

- Summary Pane - The **Summary Pane** displays a one line summary of each frame for every protocol found in the data, and can be sorted by field for every protocol. Click here for an explanation of the symbols next to the frame numbers.
- Decode Pane - The **Decode Pane** displays a detailed decode of the highlighted frame. Fields selected in the **Decode Pane** have the appropriate bit(s) or byte(s) selected in the **Radix**, **Binary**, **Character** , and **Event** panes
- Radix Pane - The **Radix Pane** displays the logical data bytes in the selected frame in either hexadecimal, decimal or octal.
- Binary Pane - The **Binary Pane** displays a binary representation of the logical data bytes.
- Character Pane - The **Character Pane** displays the character representation of the logical data bytes in either ASCII, EBCDIC or Baudot.
- Event Pane - The Event Pane displays the physical data bytes in the frame, as received on the network.

By default, all panes except the **Event Pane** are displayed when the Frame Display is first opened.

Protocol Tabs

Protocol filter tabs are displayed in the **Frame Display** above the Summary pane.

- These tabs are arranged in separate color-coded groups. These groups and their colors are General (white), Classic Bluetooth (blue), Bluetooth low energy (green), 802.11 (orange), USB (purple), NFC (brown) and SD (teal). The General group applies to all technologies. The other groups are technology-specific.

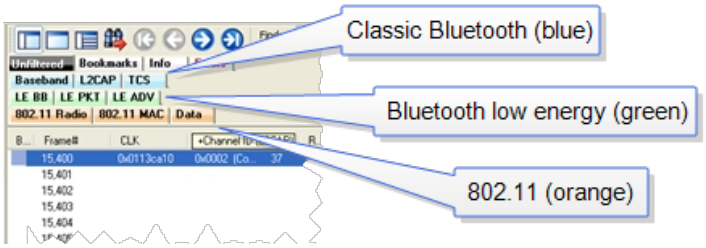

- Clicking on a protocol filter tab in the General group filters in all packets containing that protocol regardless of each packet's technology.
- Clicking on a protocol filter tab in a technology-specific group filters in all packets containing that protocol on that technology.
- A protocol filter tab appears in the General group only if the protocol occurs in more than one of the technology-specific tab groups. For example, if L2CAP occurs in both Classic Bluetooth and Bluetooth low energy , there will be L2CAP tabs in the General group, the Classic Bluetooth group, and the Bluetooth low energy group.

Select the **Unfiltered** tab to display all packets.

There are several special tabs that appear in the **Summary Pane** when certain conditions are met. These tabs appear only in the General group and apply to all technologies. The tabs are:

- **Bookmarks** appear when a bookmark is first seen.
- **Errors** appear when an error is first seen. An error is a physical error in a data byte or an error in the protocol decode.
- **Info** appears when a frame containing an Information field is first seen.

The tabs disappear when the capture buffer is cleared during live capture or when decoders are reloaded, even if one of the tabs is currently selected. They subsequently reappear as the corresponding events are detected.

Comparing Frames

If you need to compare frames, you can open additional **Frame Display** windows by clicking on the **Duplicate View** icon . You can have as many **Frame Display** windows open at a time as you wish.

Frame Wrapping and Display

In order to assure that the data you are seeing in **Frame Display** are current, the following messages appear describing the state of the data as it is being captured.

- All **Frame Display** panes except the Summary pane display "No frame selected" when the selected frame is in the buffer (i.e. not wrapped out) but not accessible in the **Summary** pane. This can happen when a tab is selected that doesn't filter in the selected frame.
- When the selected frame wraps out (regardless of whether it was accessible in the Summary pane) all **Frame Display** panes except the **Summary** pane display "Frame wrapped out of buffer".

- When the selected frame is still being captured, all **Frame Display** panes except the Summary pane display "Frame incomplete".

4.4.1.1 Frame Display Toolbar

The buttons that appear in the **Frame Display** window vary according to the particular configuration of the analyzer. For controls not available the icons will be grayed-out.

Table 4.5 - Frame Display Toolbar Icons

Icon	Description
	Control – Brings the Control window to the front.
	Open File - Opens a capture file.
	I/O Settings - Opens the I/O Settings dialog.
	Start Capture - Begins data capture to a user designated file.
	Stop Capture - Closes a capture file and stops data capture to disk.
	Save - Save the currently selected bytes or the entire buffer to file.
	Clear- Discards the temporary file and clears the display.
	Event Display – Brings the Event Display window to the front.
	Show Message Sequence Chart - Message Sequence Chart (MSC) displays information about the messages passed between protocol layers.
	Duplicate View - Creates a second Frame Display window identical to the first.
	Apply/Modify Display Filters - Opens the Display Filter dialog.
	Quick Protocol Filter - brings up a dialog box where you can filter or hide one or more protocol layers.
	Protocol Stack - brings up the Protocol Stack Wizard where you can change the stack used to decode framed data

Table 4.5 - Frame Display Toolbar Icons(continued)

Icon	Description
	Reload Decoders - When Reload Decoders is clicked, the plug-ins are reset and received frames are re-decoded. For example, If the first frame occurs more than 10 minutes in the past, the 10-minute utilization graph stays blank until a frame from 10 minutes ago or less is decoded.
	Find - Search for errors, string patterns, special events and more.
	Display Capture Notes - Brings up the Capture Notes window where you can view or add notes to the capture file.
	Add/Modify Bookmark - Add a new or modify an existing bookmark.
	Display All Bookmarks - Shows all bookmarks and lets you move between bookmarks.
	Coexistence View - Opens the Coexistence View
	Bluetooth Classic Packet Error Rate Statistics - Opens the Packet Error Rate Statistics display.
Reload Decoders - When **Reload Decoders** is clicked, the plug-ins are reset and received frames are re-decoded. For example, If the first frame occurs more than 10 minutes in the past, the 10-minute utilization graph stays blank until a frame from 10 minutes ago or less is decoded.	
	Filter: Text giving the filter currently in use. If no filter is being used, the text reads "All Frames" which means that nothing is filtered out. To see the text of the entire filter, place the cursor over the text and a ToolTip pops up with the full text of the filter.
The following icons all change how the panes are arranged on the Frame Display. Additional layouts are listed in the View menu.	
	Show Default Panes - Returns the panes to their default settings.
	Show Only Summary Pane - Displays only the Summary pane.

Table 4.5 - Frame Display Toolbar Icons(continued)

Icon	Description
	Shall All Panes Except Event Pane - Makes the Decode pane taller and the Summary pane narrower.
	Toggle Display Lock - Prevents the display from updating.
	Go To Frame
	First Frame - Moves to the first frame in the buffer.
	Previous Frame - Moves to the previous frame in the buffer.
	Next Frame - Moves to the next frame in the buffer.
	Last Frame - Moves to the last frame in the buffer.
	Find on Frame Display only searches the Decode Pane for a value you enter in the text box.
	Find Previous Occurrence - Moves to the previous occurrence of the value in the Frame Display Find.
	Find Next Occurrence - Moves to the next occurrence of the value in the Frame Display Find.
	Cancel Current Search - Stops the current Frame Display Find.

Table 4.5 - Frame Display Toolbar Icons(continued)

Icon	Description
Summary:	Summary Drop Down Box: Lists all the protocols found in the data in the file. This box does not list all the protocol decoders available to the analyzer, merely the protocols found in the data. Selecting a protocol from the list changes the Summary pane to display summary information for that protocol. When a low energy predefined Named Filter (like Nulls and Polls) is selected, the Summary drop-down is disabled. 
Text with Protocol Stack: To the right of the Summary Layer box is some text giving the protocol stack currently in use. 	

Note: If the frames are sorted in other than ascending frame number order, the order of the frames in the buffer is the sorted order. Therefore the last frame in the buffer may not have the last frame number.

4.4.1.2 Frame Display Status Bar

The **Frame Display Status** bar appears at the bottom of the **Frame Display**. It contains the following information:

- **Frame #s Selected**: Displays the frame number or numbers of selected (highlighted) frames, and the total number of selected frames in parentheses
- **Total Frames**: The total number of frames in the capture buffer or capture file in real-time
- **Frames Filtered In**: The total number of frames displayed in the filtered results from user applied filters in real-time

4.4.1.3 Hiding and Revealing Protocol Layers in the Frame Display

Hiding protocol layers refers to the ability to prevent a layer from being displayed on the **Decode** pane. Hidden layers remain hidden for every frame where the layer is present, and can be revealed again at any time. You can hide as many layers as you wish.

Note: Hiding from the **Frame Display** affects only the data shown in the **Frame Display** and not any information in any other window.

There are two ways to hide a layer.

1. Right-click on the layer in the **Decode** pane, and choose **Hide** [protocol name] **Layer In All Frames**.
2. Click the **Set Protocol Filtering** button on the **Summary** pane toolbar. In the **Protocols to Hide** box on the right, check the protocol layer(s) you want hidden. Click **OK** when finished.

To reveal a hidden protocol layer:

1. Right-click anywhere in the **Decode** pane
2. Choose **Show** [protocol name] **Layer** from the right-click menu, or click the **Set Protocol Filtering** button and un-check the layer or layers you want revealed.

4.4.1.4 Physical vs. Logical Byte Display

The **Event Display** window and **Event Pane** in the **Frame Display** window show the physical bytes. In other words, they show the actual data as it appeared on the circuit. The Radix, Binary and Character panes in the Frame Display window show the logical data, or the resulting byte values after escape codes or other character altering codes have been applied (a process called transformation).

As an example, bytes with a value of less than 0x20 (the 0x indicates a hexadecimal value) cannot be transmitted in Async PPP. To get around this, a 0x7d is transmitted before the byte. The 0x7d says to take the next byte and subtract 0x20 to obtain the true value. In this situation, the Event pane displays 0x7d 0x23, while the Radix pane displays 0x03.

4.4.1.5 Sorting Frames

By default, frames are sorted in ascending numerical sequence by frame number. Click on a column header in the **Summary** pane to sort the frames by that column. For example, to sort the frames by size, click on the **Frame Size** column header.

An embossed triangle next to the header name indicates which column the frames are sorted by. The direction of the triangle indicates whether the frames are in ascending or descending order, with up being ascending.

Note that it may take some time to sort large numbers of frames.

4.4.1.6 Frame Display - Find

Frame Display has a simple **Find** function that you can use to search the Decode Pane for any alpha numeric value. This functionality is in addition to the more robust Search/Find dialog.

Frame Display Find is located below the toolbar on the **Frame Display** dialog.

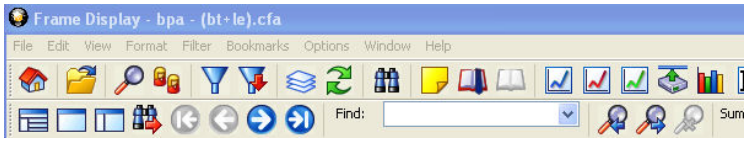

Figure 4.12 - Frame Display Find text entry field

Where the more powerful Search/Find functionality searches the **Decode**, **Binary**, **Radix**, and **Character** panes on **Frame Display** using TImestamps, Special Events, Bookmarks, Patterns, etc.,

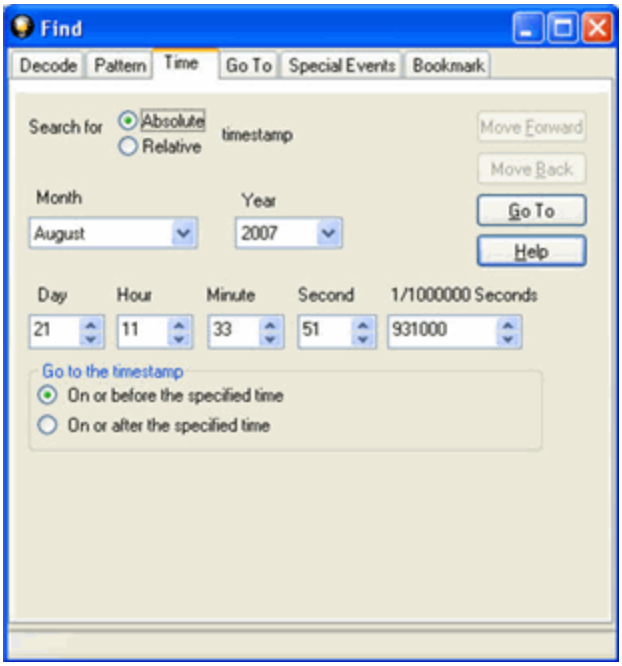

Figure 4.13 - Search/Find Dialog

Find on **Frame Display** only searches the Decode Pane for a value you enter in the text box.

To use **Find**:

1. Select the frame where you want to begin the search.

2. Enter a value in the **Find** text box.

Note: Note: The text box is disabled during a live capture.

Select **Find Previous Occurrence** to begin the search on frames prior to the frame you selected, or **Find Next Occurrence** to begin the search on frames following the frame you selected.

The next occurrence of the value (if it is found) will be highlighted in the Decode Pane.

4. Select **Find Previous Occurrence** or **Find Next Occurrence** to continue the search.

There are several important concepts to remember with Find.

- When you enter a search string and select Enter, the search moves forward.
- If you select **Find Previous Occurrence**, when the search reaches the first frame it will then cycle to the last frame and continue until it reaches the frame where the search began.
- Shift + F3 is a shortcut for Find Previous Occurrence.
- If you select **Find Next Occurrence**, when the search reaches the last frame it will then cycle to the first frame and continue until it reaches the frame where the search began.
- F3 is a shortcut for Find Next Occurrence.
- You cannot search while data is being captured.
- After a capture is completed, you cannot search until Frame Display has finished decoding the frames.
- Find is not case sensitive.
- The status of the search is displayed at the bottom of the dialog.
- The search occurs only on the protocol layer selected.
- To search across all the protocols on the Frame Display, select the Unfiltered tab.

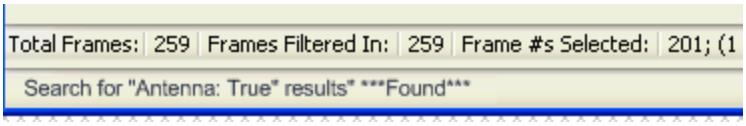

- A drop-down list displays the search values entered during the current session of Frame Display.
- The search is cancelled when you select a different protocol tab during a search.
- You can cancel the search at any time by selecting the **Cancel Current Search** button.

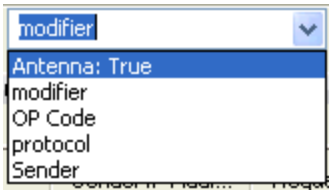

4.4.1.7 Synchronizing the Event and Frame Displays

The **Frame Display** is synchronized with the **Event Display.** Click on a frame in the **Frame Display** and the corresponding bytes is highlighted in the **Event Display**. Each **Frame Display** has its own **Event Display**.

As an example, here's what happens if the following sequence of events occurs.

1. Click on the **Frame Display** icon in **Control** window toolbar to open the **Frame Display.**
2. Click on the **Duplicate View** icon to create **Frame Display** #2.
3. Click on **Event Display** icon in **Frame Display** #2. **Event Display** #2 opens. This **Event Display** is labeled #2, even though there is no original **Event Display**, to indicate that it is synchronized with **Frame Display** #2.
4. Click on a frame in **Frame Display** #2. The corresponding bytes are highlighted in **Event Display** #2.
5. Click on a frame in the original **Frame Display**. **Event Display** #2 does not change.

4.4.1.8 Working with Multiple Frame Displays

Multiple Frame Displays are useful for comparing two frames side by side. They are also useful for comparing all frames against a filtered subset or two filtered subsets against each other.

- To create a second Frame Display, click the **Duplicate View** icon on the **Frame Display** toolbar.

  This creates another **Frame Display** window. You can have as many **Frame Displays** open as you wish. Each **Frame Display** is given a number in the title bar to distinguish it from the others.

- To navigate between multiple Frame Displays, click on the **Frame Display** icon in the Control window toolbar.

  A drop-down list appears, listing all the currently open Frame Displays.

- Select the one you want from the list and it comes to the front.

Note: When you create a filter in one **Frame Display**, that filter does not automatically appear in the other **Frame Display**. You must use the Hide/Reveal feature to display a filter created in one Frame Display in another.

Note: When you have multiple **Frame Display** windows open and you are capturing data, you may receive an error message declaring that "Filtering cannot be done while receiving data this fast." If this occurs, you may have to stop filtering until the data is captured.

4.4.1.9 Working with Panes on Frame Display

When the **Frame Display** first opens, all panes are displayed except the **Event** pane (To view all the panes, select **Show All Panes** from the **View** menu).

- The **Toggle Expand Decode Pane** icon makes the decode pane longer to view lengthy decodes better.
- The **Show Default Panes** icon returns the **Frame Display** to its default settings.
- The Show only Summary Pane icon displays on the Summary Pane.

To close a pane, right-click on the pane and select **Hide This Pane** from the pop-up menu, or de-select **Show [Pane Name]** from the **View** menu.

To open a pane, right-click on the any pane and select **Show Hidden Panes** from the pop-up menu and select the pane from the fly-out menu, or select **Show [Pane Name]** from the **View** menu.

To re-size a pane, place the cursor over the pane border until a double-arrow cursor appears. Click and drag on the pane border to re-size the pane.

4.4.1.10 Frame Display - Byte Export

The captured frames can be exported as raw bytes to a text file.

1. From the **Frame Display File** menu select **Byte Export...**.

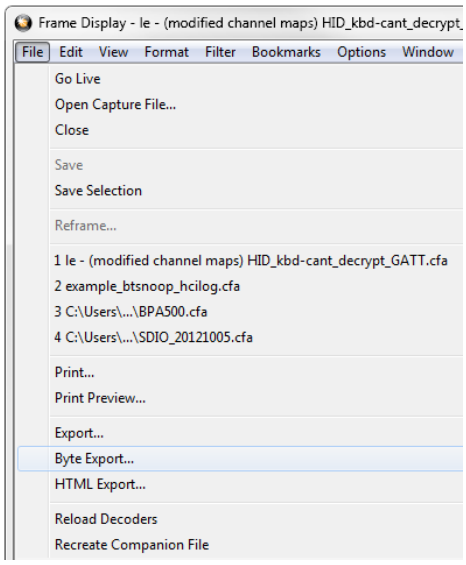

Figure 4.14 - Frame Display File menu, Byte Export

2. From the Byte Export window specify the frames to export.

   - All Frames exports all filtered-in frames including those scrolled off the **Summary** pane. Filtered-in frames are dependent on the selected **Filter** tab above the **Summary** pane. Filtered-out frames are not exported.
   - Selected Frames export is the same as **All Frames** export except that only frames selected in the **Summary** pane will be exported.

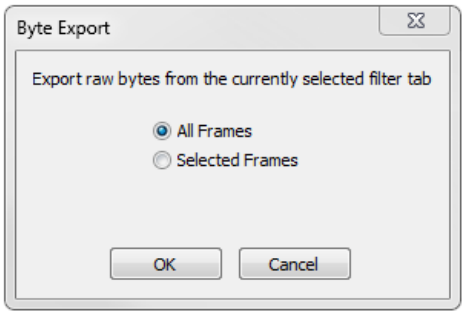

Figure 4.15 - Byte Export dialog

   Click the **OK** button to save the export. Clicking the **Cancel** button will exit Byte Export.

3. The **Save As** dialog will open. Select a directory location and enter a file name for the exported frames file.

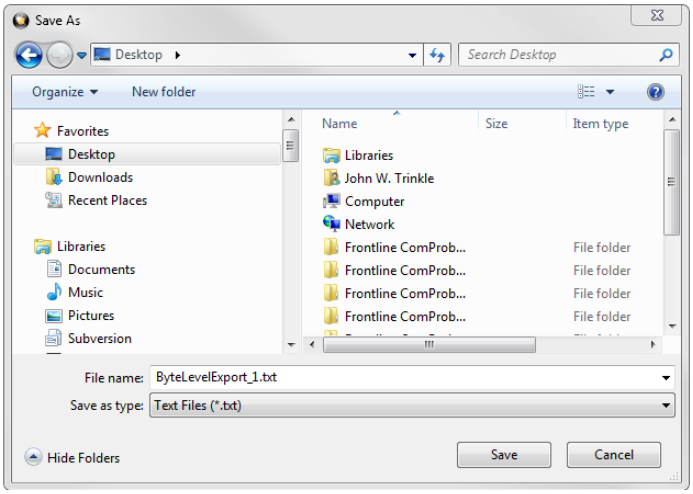

Figure 4.16 - Save As dialog

Click on the **Save** button.

The exported frames are in a text file that can be opened in any standard text editing application. The header shows the export type, the capture file name, the selected filter tab, and the number of frames. The body shows the frame number, the timestamp in the same format shown in the **Frame Display Summary** pane, and the frame contents as raw bytes.

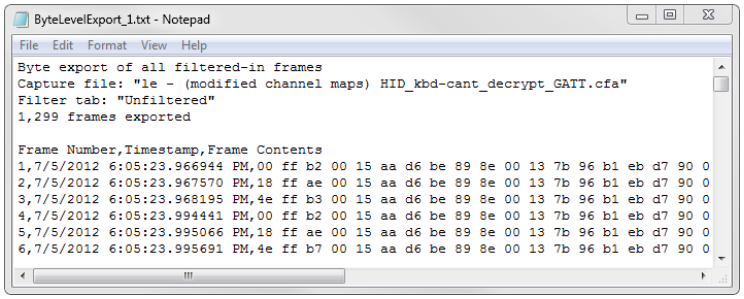
ByteLevelExport_1.txt - Notepad
File Edit Format View Help
Byte export of all filtered-in frames
Capture file: "le - (modified channel maps) HID_kbd-cant_decrypt_GATT.cfa"
Filter tab: "Unfiltered"
1,299 frames exported
Frame Number,Timestamp,Frame Contents
1,7/5/2012 6:05:23.966944 PM,00 ff b2 00 15 aa d6 be 89 8e 00 13 7b 96 b1 eb d7 90 0
2,7/5/2012 6:05:23.967570 PM,18 ff ae 00 15 aa d6 be 89 8e 00 13 7b 96 b1 eb d7 90 0
3,7/5/2012 6:05:23.968195 PM,4e ff b3 00 15 aa d6 be 89 8e 00 13 7b 96 b1 eb d7 90 0
4,7/5/2012 6:05:23.994441 PM,00 ff b2 00 15 aa d6 be 89 8e 00 13 7b 96 b1 eb d7 90 0
5,7/5/2012 6:05:23.995066 PM,18 ff ae 00 15 aa d6 be 89 8e 00 13 7b 96 b1 eb d7 90 0
6,7/5/2012 6:05:23.995691 PM,4e ff b7 00 15 aa d6 be 89 8e 00 13 7b 96 b1 eb d7 90 0

Figure 4.17 - Sample Exported Frames Text File

4.4.1.11 Panes in the Frame Display

4.4.1.11.1 Summary Pane

The **Summary** pane displays a one-line summary of every frame in a capture buffer or file, including frame number, timestamp, length and basic protocol information. The protocol information included for each frame depends on the protocol selected in the summary layer box (located directly below the main toolbar).

On a two-channel circuit, the background color of the one-line summary indicates whether the frame came from the DTE or the DCE device. Frames with a white background come from the DTE device, frames with a gray background come from the DCE device.

Frame numbers in red indicate errors, either physical (byte-level) or frame errors. If the error is a frame error in the displayed protocol layer, the bytes where the error occurred is displayed in red. The Decode Pane gives precise information as to the type of error and where it occurred.

The **Summary** pane is synchronized with the other panes in this window. Click on a frame in the **Summary** pane, and the bytes for that frame is highlighted in the **Event** pane while the **Decode** pane displays the full decode for that frame. Any other panes which are being viewed are updated accordingly. If you use one pane to select a subset of the frame, then only that subset of the frame is highlighted in the other panes.

Protocol Tabs

Protocol filter tabs are displayed in the Frame Display above the Summary pane.

- These tabs are arranged in separate color-coded groups. These groups and their colors are General (white), Classic Bluetooth® (blue), *Bluetooth* low energy (green), 802.11 (orange), USB (purple), and SD (brown). The General group applies to all technologies. The other groups are technology-specific.

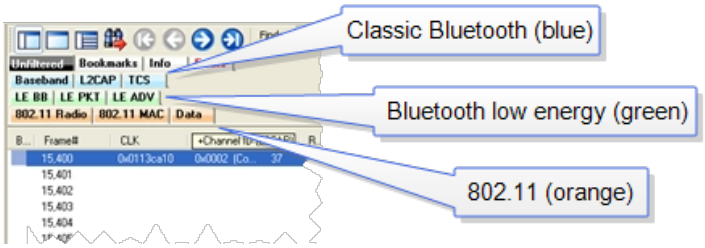

Figure 4.18 - Example Protocol Tags

- Clicking on a protocol filter tab in the General group filters in all packets containing that protocol regardless of each packet's technology.
- Clicking on a protocol filter tab in a technology-specific group filters in all packets containing that protocol on that technology.
- A protocol filter tab appears in the General group only if the protocol occurs in more than one of the technology-specific tab groups. For example, if L2CAP occurs in both Classic *Bluetooth* and *Bluetooth* low energy , there will be L2CAP tabs in the General group, the Classic *Bluetooth* group, and the *Bluetooth* low energy group.

Select the Unfiltered tab to display all packets.

There are several special tabs that appear in the **Summary** pane when certain conditions are met. These tabs appear only in the General group and apply to all technologies. The tabs are:

- **Bookmarks** appear when a bookmark is first seen.
- **Errors** appear when an error is first seen. An error is a physical error in a data byte or an error in the protocol decode.
- **Info** appears when a frame containing an Information field is first seen.

The tabs disappear when the capture buffer is cleared during live capture or when decoders are reloaded, even if one of the tabs is currently selected. They subsequently reappear as the corresponding events are detected.

The tabs disappear when the capture buffer is cleared during live capture or when decoders are reloaded, even if one of the tabs is currently selected. They subsequently reappear as the corresponding events are detected.

Use the navigation icons, keyboard or mouse to move through the frames. The icons and move you to the first and last frames in the buffer, respectively. Use the Go To icon to move to a specific frame number.

Placing the mouse pointer on a summary pane header with truncated text displays a tooltip showing the full header text.

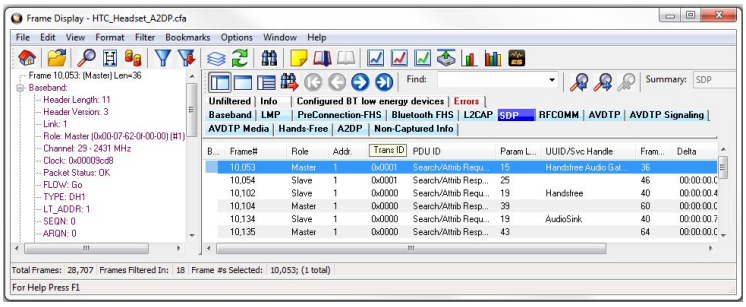
Frame Display - HTC_Headset_A2DP.cfa
File Edit View Format Filter Bookmarks Options Window Help
Frame 10,053: (Master) Len=36
Baseband:
Header Length: 11
Header Version: 3
Link: 1
Role: Master (0x00-07-62-0f-00-00) (#1)
Channel: 29 - 2431 MHz
Clock: 0x00009cd8
Packet Status: OK
FLOW: Go
TYPE: DH1
LT_ADDR: 1
SEQN: 0
ARQN: 0
Find:
Summary: SDP
Unfiltered | Info | Configured BT low energy devices | Errors |
Baseband | LMP | PreConnection-FHS | Bluetooth FHS | L2CAP | SDP | RFCOMM | AVDTP | AVDTP Signaling |
AVDTP Media | Hands-Free | A2DP | Non-Captured Info
B... Frame# Role Addr. Trans ID PDU ID Param L... UUID/Svc Handle Fram... Delta
10,053 Master 1 0x0001 Search/Attrib Requ... 15 Handsfree Audio Gat... 36
10,054 Slave 1 0x0001 Search/Attrib Resp... 25 46
10,102 Slave 1 0x0000 Search/Attrib Requ... 19 Handsfree 40
10,104 Master 1 0x0000 Search/Attrib Resp... 39 60
10,134 Slave 1 0x0000 Search/Attrib Requ... 19 AudioSink 40
10,135 Master 1 0x0000 Search/Attrib Resp... 43 64
Total Frames: 28,707 Frames Filtered In: 18 Frame #s Selected: 10,053; (1 total)
For Help Press F1

Figure 4.19 - Summary pane (right) with Tooltip on Column 5 (Tran ID)

4.4.1.11.2 Customizing Fields in the Summary Pane

You can modify the **Summary** Pane in **Frame Display**.

Summary pane columns can be reordered by dragging any column to a different position.

Fields from the **Decode** pane can be added to the summary pane by dragging any **Decode**pane field to the desired location in the **summary** pane header. If the new field is from a different layer than the summary pane a plus sign (+) is prepended to the field name and the layer name is added in parentheses. The same field can be added more than once if desired, thus making it possible to put the same field at the front and back (for example) of a long header line so that the field is visible regardless of where the header is scrolled to.

An added field can be removed from the **Summary** pane by selecting **Remove New Column** from the right-click menu.

The default column layout (both membership and order) can be restored by selecting **Restore Default Columns** from the **Format** or right-click menus.

Changing Column Widths

To change the width of a column:

1. Place the cursor over the right column divider until the cursor changes to a solid double arrow.
2. Click and drag the divider to the desired width.
3. To auto-size the columns, double-click on the column dividers.

Hiding Columns

To hide a column:

1. Drag the right divider of the column all the way to the left.
2. The cursor changes to a split double arrow when a hidden column is present.

3. To show the hidden column, place the cursor over the divider until it changes to a split double arrow, then click and drag the cursor to the right.
4. The **Frame Size**, **Timestamp**, and **Delta** columns can be hidden by right-clicking on the header and selecting **Show Frame Size Column, Show Timestamp Column,** or **Show Delta Column**. Follow the same procedure to display the columns again.

Moving Columns - Changing Column Order

To move a column :

1. Click and hold on the column header
2. Drag the mouse over the header row.
3. A small white triangle indicates where the column is moved to.
4. When the triangle is in the desired location, release the mouse.

Restoring Default Column Settings

To restore columns to their default locations, their default widths, and show any hidden columns

1. Right-click on any column header and choose **Restore Default Column Widths**, or select **Restore Default Column Widths** from the **Format** menu.

4.4.1.11.3 Frame Symbols in the Summary Pane

Table 4.6 - Frame Symbols

Symbol	Description
	A green dot means the frame was decoded successfully, and the protocol listed in the **Summary Layer** drop-down box exists in the frame. No dot means the frame was decoded successfully, but the protocol listed in the **Summary Layer** drop-down box does not exist in the frame.
	A green circle means the frame was not fully decoded. There are several reasons why this might happen. • One reason is that the frame compiler hasn't caught up to that frame yet. It takes some time for the analyzer to compile and decode frames. Frame compilation also has a lower priority than other tasks, such as capturing data. If the analyzer is busy capturing data, frame compilation may fall behind. When the analyzer catches up, the green circle changes to either a green dot or no dot. • Another reason is if some data in the frame is context dependent and we don't have the context. An example is a compressed header where the first frame gives the complete header, and subsequent frames just give information on what has changed. If the analyzer does not capture the first frame with the complete header, it cannot decode subsequent frames with partial header information.
	A magenta triangle indicates that a bookmark is associated with this frame. Any comments associated with the bookmark appear in the column next to the bookmark symbol.

4.4.1.11.4 Decode Pane

The **Decode** pane (aka detail pane) is a post-process display that provides a detailed decode of each frame transaction (sometimes referred to as a frame). The decode is presented in a layered format that can be

expanded and collapsed depending on which layer or layers you are most interested in. Click on the plus sign to expand a layer. The plus sign changes to a minus sign. Click on the minus sign to collapse a layer. **Select Show All** or **Show Layers** from the **Format** menu to expand or collapse all the layers. Layers retain their expanded or collapsed state between frames.

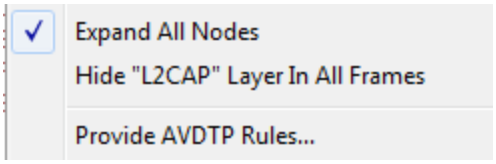

Protocol layers can be hidden, preventing them from being displayed on the **Decode** pane. Right-click on any protocol layer and choose **Hide** [protocol name] from the right-click menu.

Each protocol layer is represented by a color, which is used to highlight the bytes that belong to that protocol layer in the **Event**, **Radix**, **Binary** and **Character** panes. The colors are not assigned to a protocol, but are assigned to the layer.

The **Event**, **Radix**, **Binary**, **Character** and **Decode** panes are all synchronized with one another. Clicking on an element in any one of the panes highlights the corresponding element in all the other panes.

Click the **Toggle Expand Decode Pane** icon to make the **Decode** pane taller. This allows for more of a lengthy decode to be viewed without needing to scroll.

4.4.1.11.5 Radix or Hexadecimal Pane

The **Radix** pane displays the logical bytes in the frame in either hexadecimal, decimal or octal. The radix can be changed from the **Format** menu, or by right-clicking on the pane and choosing **Hexadecimal**, **Decimal** or **Octal**.

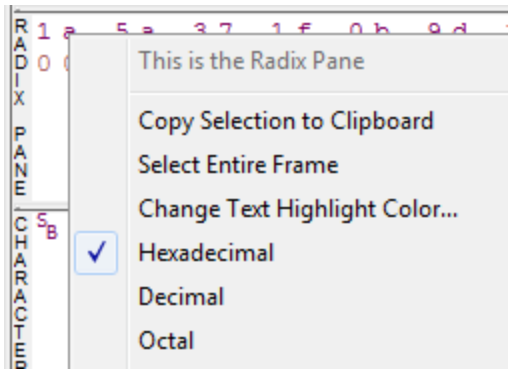

Because the Radix pane displays the logical bytes rather than the physical bytes, the data in the Radix pane may be different from that in the Event pane. See Physical vs. Logical Byte Display for more information.

Colors are used to show which protocol layer each byte belongs to. The colors correspond to the layers listed in the Decode pane.

The Event, Radix, Binary, Character and Decode panes are all synchronized with one another. Clicking on an element in any one of the panes highlights the corresponding element in all the other panes.

4.4.1.11.6 Character Pane

The **Character** pane represents the logical bytes in the frame in **ASCII**, **EBCDIC** or **Baudot**. The character set can be changed from the **Format** menu, or by right-clicking on the pane and choosing the appropriate character set.

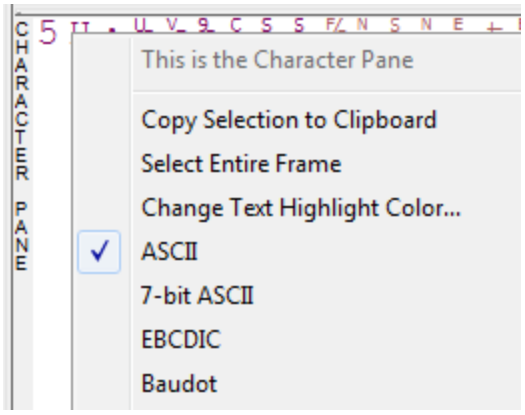

Because the **Character** pane displays the logical bytes rather than the physical bytes, the data in the **Character** pane may be different from that in the **Event** pane. See Physical vs. Logical Byte Display for more information.

Colors are used to show which protocol layer each byte belongs to. The colors correspond to the layers listed in the **Decode** pane.

The **Event**, **Radix**, **Binary**, **Character** and **Decode** panes are all synchronized with one another. Clicking on an element in any one of the panes highlights the corresponding element in all the other panes.

4.4.1.11.7 Binary Pane

The **Binary** pane displays the logical bytes in the frame in binary.

Because the **Binary** pane displays the logical bytes rather than the physical bytes, the data in the Binary pane may be different from that in the **Event** pane. See Physical vs. Logical Byte Display for more information.

Colors are used to show which protocol layer each byte belongs to. The colors correspond to the layers listed in the **Decode** pane.

The **Event**, **Radix**, **Binary**, **Character** and **Decode** panes are all synchronized with one another. Clicking on an element in any one of the panes highlights the corresponding element in all the other panes.

4.4.1.11.8 Event Pane

The **Event** pane shows the physical bytes in the frame. You can choose between displaying only the data events or displaying all events by clicking the **All Events** icon .

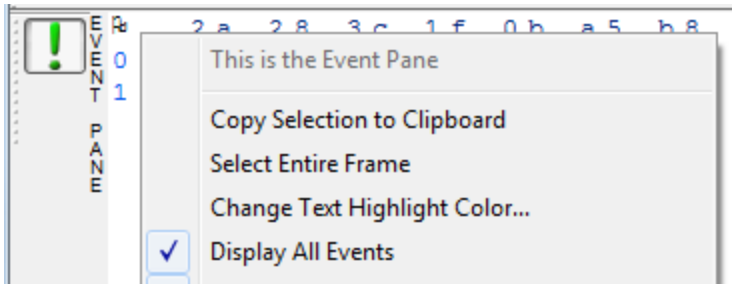

Displaying all events means that special events, such as **Start of Frame**, **End of Frame** and any signal change events, are displayed as special symbols within the data.

The status lines at the bottom of the pane give the same information as the status lines in the **Event Display** window. This includes physical data errors, control signal changes (if appropriate), and timestamps.

Because the **Event** pane displays the physical bytes rather than the logical bytes, the data in the **Event** pane may be different from that in the **Radix**, **Binary** and **Character** panes. See Physical vs. Logical Byte Display for more information.

Colors are used to show which protocol layer each byte belongs to. The colors correspond to the layers listed in the Decode pane.

The **Event**, **Radix**, **Binary**, **Character** and **Decode** panes are all synchronized with one another. Clicking on an element in any one of the panes highlights the corresponding element in all the other panes.

4.4.1.11.9 Change Text Highlight Color

Whenever you select text in the **Binary**, **Radix**, or **Character** panes in **Frame Display**, the text is displayed with a highlight color. You can change the color of the highlight.

1. Select **Change Text Highlight Color** from the **Options** menu. You can also access the option by right clicking in any of the panes.
2. Select a color from the drop-down menu.
3. Click **OK**.

The highlight color for the text is changed.

Select **Cancel** to discard any selection. Select **Defaults** to return the highlight color to blue.

4.4.1.12 Protocol Layer Colors

4.4.1.12.1 Data Byte Color Notation

The color of the data in the panes specifies which layer of the protocol stack the data is from. All data from the first layer is bright blue, the data from the second layer is green, the third layer is pink, etc. The protocol name for each layer in the **Decode** pane is in the same color. Note that the colors refer to the layer, not to a specific protocol. In some situations, a protocol may be in two different colors in two different frames, depending on where it is in the stack. You can change the default colors for each layer.

Red is reserved for bytes or frames with errors. In the **Summary** pane, frame numbers in red mean there is an error in the frame. Also, the **Errors** tab is displayed in red. This could be a physical error in a data byte or an error in the protocol decode. Bytes in red in the **Radix**, **Character**, **Binary** and **Event** panes mean there is a physical error associated with the byte.

4.4.1.12.2 Changing Protocol Layer Colors

You can differentiate different protocol layers in the **Decode**, **Event**, **Radix**, **Binary** and **Character** panes.

1. Choose **Select Protocol Layer Colors** from the **Options** menu to change the colors used.

   The colors for the different layers is displayed.
2. To change a color, click on the arrow next to each layer and select a new color.
3. Select **OK** to accept the color change and return to **Frame** Display.

Select **Cancel** to discard any selection. Select **Defaults** to return the highlight colors to the default settings.

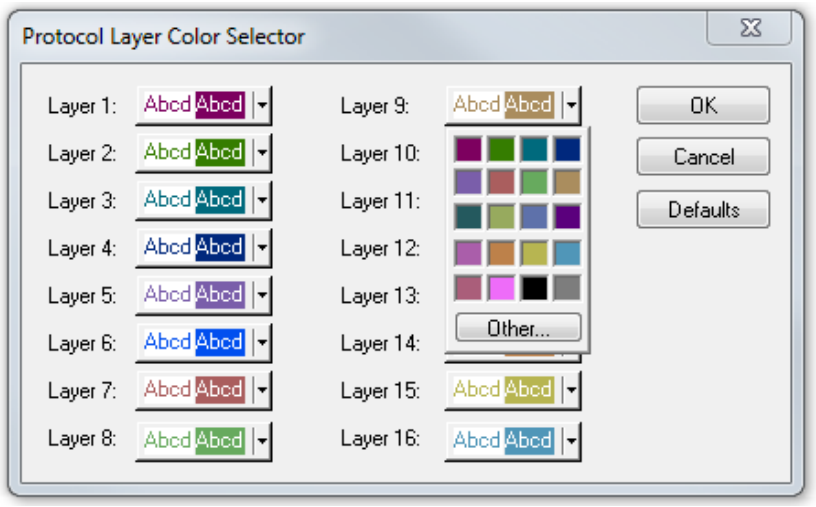

Figure 4.20 - Frame Display Protocol Layer Color Selector

4.4.1.13 Filtering

Filtering allows the user to control the display which capture frames are displayed. Filters fall into two general categories:

1. **Display filters** allow a user to look at a subset of captured data without affecting the capture content. Frames matching the filter criteria appear in the **Frame Display**; frames not matching the criteria will not appear.
2. **Connection filters** Two options are available.
    a. A Bluetooth connection: Displays only the frames associated with a Classic *Bluetooth* link or a *Bluetooth* low energy access address. A new **Frame Display** will open showing only the protocol tabs, frames, summary, and events associated with that particular *Bluetooth* connection.
    b. A specific wireless or wired technology. Displays all of the frames associated with:
        - Classic *Bluetooth*
        - *Bluetooth* low energy
        - 802.11
        - HCI

        A new Frame Display will open showing only the protocol tabs, frames, summary and events associated with the selected technology.

4.4.1.13.1 Display Filters

A display filter looks at frames that have already been captured. It looks at every frame in the capture buffer and displays those that match the filter criteria. Frames that do not match the filter criteria are not displayed. Display filters allow a user to look at a subset of captured data without affecting the capture content. There are three general classes of display filters:

- Protocol Filters
- Named Filters
- Quick Filter

Protocol Filters

Protocol filters test for the existence of a specific single layer. The system creates a protocol filter for each decoder that is loaded if that layer is encountered in a capture session.

There are also three special purpose filters that are treated as protocol filters:

- All Frames with Errors
- All Frames with Bookmarks
- All Special Information Nodes

Named Filters

- Named filters test for anything other than simple single layer existence. Named filters can be constructed that test for the existence of multiple layers, field values in layers, frame sizes, etc., as well as combinations of those things. Named filters are persistent across sessions.
- Named filters are user-defined. User-defined filters persist in a template file. User defined filters can be deleted.

Quick Filters

- Quick Filters are combinations of Protocol Filters and/or Named Filters that are displayed on the Quick Filter tab.
- Quick Filters cannot be saved and do not persist across sessions.
- Quick Filters are created on the Quick Filter Dialog.

4.4.1.13.1.1 Creating a Display Filter

There are two steps to using a display filter. Define the filter conditions, and then apply the filter to the data set. The system combines both filter definition and application in one dialog.

1. Click the **Display Filters** icon on the **Frame Display** window or select **Apply/Modify Display Filters** from the **Filter** menu to open the **Set Condition** dialog box. The Set Condition dialog is self configuring which means that when you **Select each frame** under **Conditions** the following displayed fields depend on your selection. With each subsequent selection the dialog fields will change depending on you selection in that field.

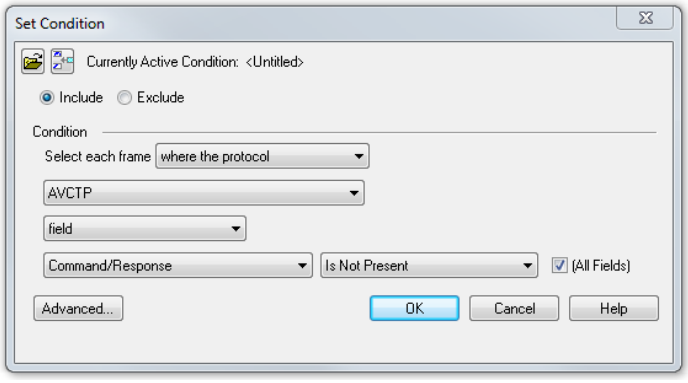

Figure 4.21 - Example: Set Conditions Self Configuring Based on Protocol Selection

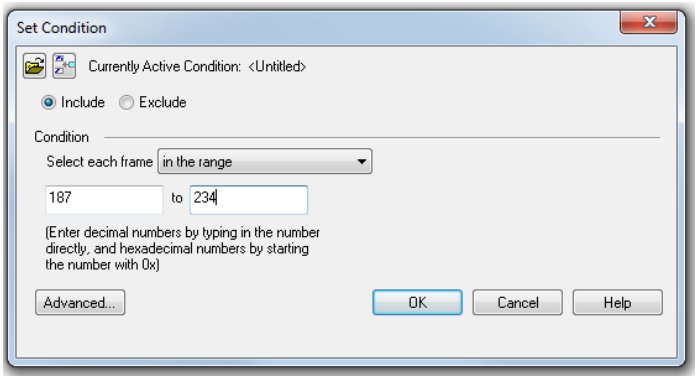

Figure 4.22 - Example: Set Conditions Self Configuring Based on Frame Range

2. Select **Include** or **Exclude** to add filtered data or keep out filtered data respectively.
3. Select the initial condition for the filter from the drop-down list.
4. Set the parameters for the selected condition in the fields provided. The fields that appear in the dialog box are dependent upon the previous selection. Continue to enter the requested parameters in the fields provided until the condition statement is complete.
5. Click OK. The system displays the **Save Named Condition** dialog. Provide a name for the filter condition or accept the default name provided by the system and click **OK**. Prohibited characters are left bracket '[', right bracket ']' and equal sign '='. The **Set Condition** dialog box closes, creates a tab on the **Frame Display** with the filter name, and applies the filter.

The filter also appears in the Quick Filtering and Hiding Protocols dialog.

When a display filter is applied, a description of the filter appears to the right of the toolbar in the **Frame Display** windows.

Notes:

- The system requires naming and saving of all filters created by the user.
- The **OK** button on the **Set Condition** dialog box is unavailable (grayed out) until the condition selections are complete.

- When you have multiple Frame Display windows with a display filter or filters, those filter do not automatically appear in other **Frame Display** windows. You must use the Hide/Reveal feature to display a filter created in one Frame Display in different **Frame Display** window.

4.4.1.13.1.2 Including and Excluding Radio Buttons

All filter dialog boxes contain an **Include** and an **Exclude** radio button. These buttons are mutually exclusive. The **Include/Exclude** selection becomes part of the filter definition, and appears as part of the filter description displayed to the right of the Toolbar.

Include: A filter constructed with the "Include" button selected, returns a data set that includes frames that meet the conditions defined by the filter and omits frames that do not.

Exclude: A filter constructed with the "Exclude" button selected, returns a data set that excludes frames that meet the conditions defined by the filter and consists of frames that do not.

4.4.1.13.1.3 Named Display Filters

You can create a unique display filter by selecting a data type on the **Frame Display** and using a right click menu. When you create a **Name Filter**, it appears in the Quick Filtering dialog, where you can use it do customize the data you see in the **Frame Display** panes.

1. Select a frame in the **Frame Display Summary** Pane.
2. Right click in the one of the data columns in the **Summary** Pane: CRC, NESN, DS, Packet Success, Ethertype, Source Address, etc.
3. Select **Filter in *(data type)* =** . The **Filtering Results** dialog appears.
4. Enter a name for the filter
5. Select **OK**.

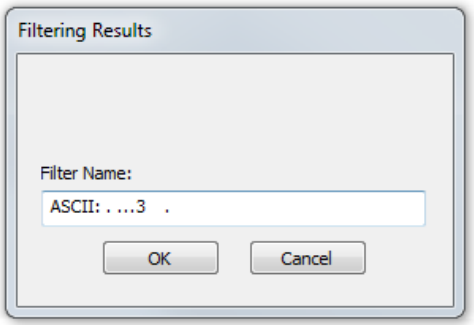

The filter you just created appears in the **Named Filters** section of the Quick Filtering dialog.

4.4.1.13.1.4 Using Compound Display Filters

Compound filters use boolean logic to create complex and precise filters. There are three primary Boolean logic operators: **AND**, **OR**, and **NOT**.

The **AND** operator narrows the filter, the **OR** operator broadens the filter, and the **NOT** operator excludes conditions from the filtered results. Include parentheses in a compound filter to nest condition sets within larger condition sets, and force the filter-processing order.

There are two steps to using a compound filter. Define the filter conditions, and then apply the filter to the data set. The analyzer combines both filter definition and application in one dialog.

1. Click the **Display Filters** icon on the **Frame Display** window or select **Apply/Modify Display Filters...** from the filter menu to open the **Set Condition** dialog box.
2. Click the **Advanced** button on the **Set Condition** dialog box.
3. Select **Include** or **Exclude** radio button.

Now you can set the conditions for the filter.

4. Select the initial condition for the filter from the combo box at the bottom of the dialog for **Select each frame.**

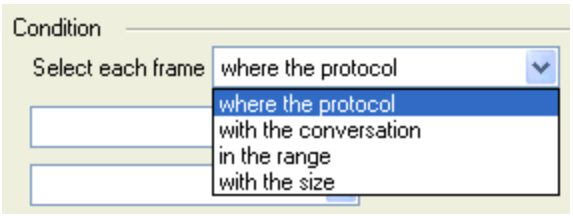

5. Set the parameters for the selected condition in the fields provided. The fields that appear in the dialog box are dependent upon the previous selection. Continue to enter the requested parameters in the fields provided until the conditions statement is complete.

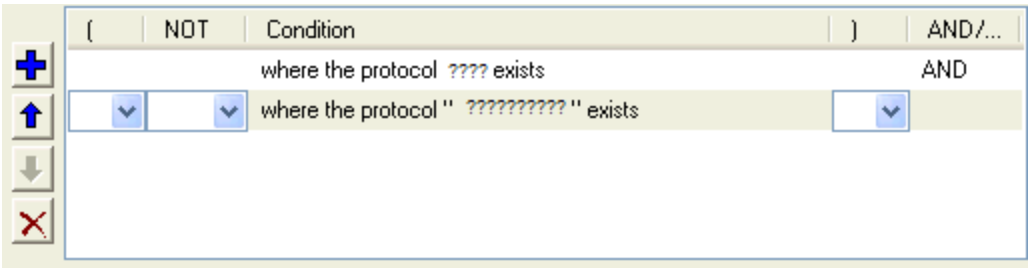

Figure 4.23 - Two Filter Conditions Added with an AND Operator

6. Click the plus icon on the left side of the dialog box and repeat steps 4 and 5 for the next condition. Use the up and down arrow icons on the left side of the dialog box to order your conditions, and the delete button to delete conditions from your filter.

7. Continue adding conditions until your filter is complete.

8. Include parentheses as needed and set the boolean operators.

9. Click **OK**.

10. The system displays the **Save Named Condition** dialog. Provide a name for the filter condition or accept the default name provided by the system and click **OK**.

Figure 4.24 - Save Named Filter Condition Dialog

The **Set Condition** dialog box closes, creates a tab on the **Frame Display** with the filter name, and applies the filter.

When a display filter is applied, a description of the filter appears to the right of the toolbar in the **Frame Display** windows.

Note: The **OK** button on the **Set Condition** dialog box is unavailable (grayed out) until the condition selections are complete.

4.4.1.13.1.5 Defining Node and Conversation Filters

There are two steps to using Node and Conversation display filter. Define the filter conditions, and then apply the filter to the data set. The analyzer combines both filter definition and application in one dialog.

1. Click the **Display Filters** icon on the **Frame Display** window or select **Apply/Modify Display Filters…** from the filter menu to open the **Set Condition** dialog box.
2. From the **Select each frame** combo box choose **frames with the conversation** as the initial condition.
3. Select an address type—IP, MAC, TCP/UDB—from the **Type**combo box (The address type selection populates both Address combo boxes with node address in the data set that match the type selection).
4. Select a node address from the first **Address** combo box.
5. Choose a direction arrow from the direction box . The left arrow filters on all frames where the top node address is the destination, the right arrow filters on all frames where the top node address is the source, and the double arrow filters on all frames where the top node address is either the source or the destination.

6. If you want to filter on just one node address, skip step 7 and continue with step 8.
7. If you want to filter on traffic going between two address nodes (i.e. a conversation), select a node address from the second Address combo box..
8. Click **OK**. The **Set Condition** dialog box closes and the analyzer applies the filter.

When a display filter is applied, a description of the filter appears to the right of the toolbar in the **Frame Display** windows.

Note: The **OK** button is unavailable (grayed out) until the condition selections are complete.

4.4.1.13.1.6 The Difference Between Deleting and Hiding Display Filters

If you wish to remove a filter from the system permanently, then use the Delete procedure. However, if all you want to do is remove a filter as a means to un-clutter the display, then use the Hide procedure.

Deleting a saved filter removes the filter from the current session and all subsequent sessions. In order to retrieve a deleted filter, the user must recreate it using the **Set Conditions** dialog.

Hiding a filter merely removes the filter from the display. A hidden filter can be reapplied using the Show/Hide procedure.

Deleting Saved Display Filters

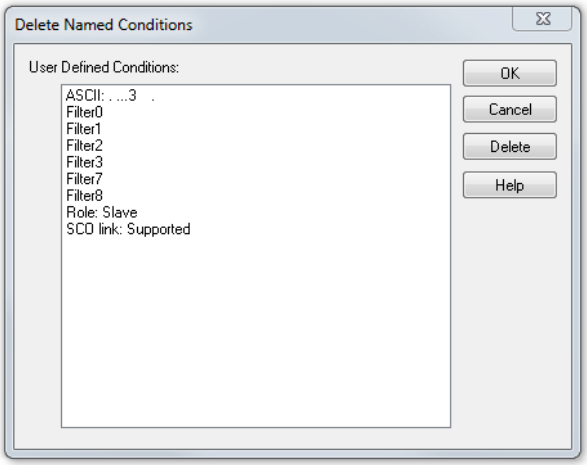

1. Select **Delete Display Filters** from the **Filter** menu in the **Frame Display** window to open the **Delete Named Condition** dialog. The system displays the **Delete Named Condition** dialog with a list of all user defined filters.
2. Select the filter to be deleted from the list.
3. Click the **Delete** button.
4. Click **OK**. The **Delete Named Condition** dialog box closes and the system deletes the filter.

Hiding and Revealing Display Filters

If a display filter is showing the following steps will hide that filter but will not delete it.

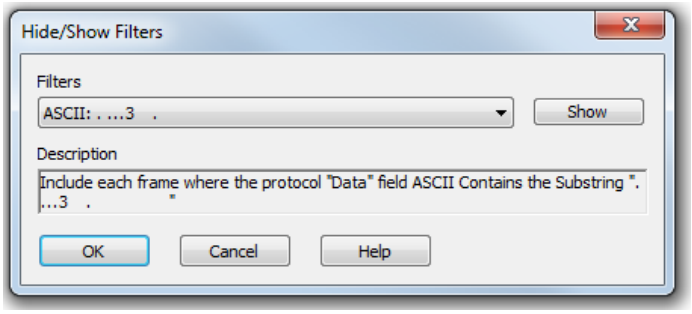

1. **Select Hide/Show Display Filters...** from the **Filter** menu on the **Frame Display** window to open the **Hide/Show Filters** dialog. The system displays the **Hide/Show Filters** dialog with a list of all user defined filters.
2. Select the filter to be hidden from the combo box.
3. Click the **Hide** button. The **Hide** button is only showing if the selected filter is currently showing in the **Frame Display**.
4. Click **OK**. The **Hide/Show Filters** dialog box closes, and the system hides the filter and removes the filter tab from the Frame Display.

If a display filter is hidden the following steps will reveal that filter in the **Frame Display**.

1. Select **Hide/Show Display Filters...** from the **Filter** menu in the **Frame Display** window to open the **Hide/Show Filters** dialog. The system displays the **Hide/Show Filters** dialog with a list of all user defined filters.
2. Select the filter to be revealed from the combo box.
3. Click the **Show** button.
4. Click **OK**. The **Hide/Show Filters** dialog box closes and the system reveals the filter in the **Frame Display**.

You can also open the Quick Filter dialog and check the box next to the hidden filter to show or hide a display filter.

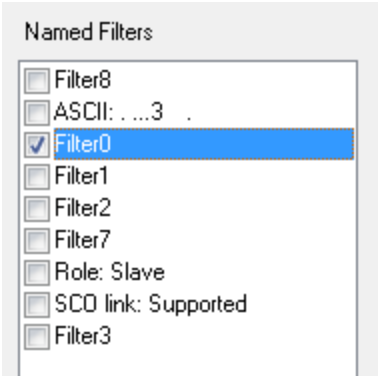

Figure 4.25 - Using Named Filters Section of Quick Filters to Show/Hide Filters

Note: When you have multiple Frame Display windows with a display filter or filters, those filter do not automatically appear in other Frame Display windows. You must use the Hide/Show dialog to display a filter created in one Frame Display in different Frame Display window.

4.4.1.13.1.7 Editing Filters

Modifying a Condition in a Filter

1. Click the **Display Filters** icon on the **Frame Display** window or select **Apply/Modify Display Filters...** from the **Filter** menu to open the **Set Condition** dialog box. The **Set Condition** dialog box displays the current filter definition at the top of the dialog.

   To display another filter, click the **Open** icon, and select the filter from the pop-up list of all the saved filters.

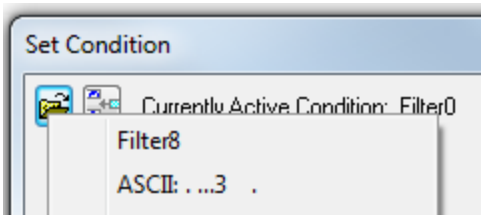

2. Edit the desired parameter of the condition: Because the required fields for a condition statement depend upon previously selected parameters, the Set Condition dialog box may display additional fields that were not present in the original filter. In the event this occurs, continue to enter the requested parameters in the fields provided until the condition statement is complete.
3. Click **OK**. The system displays the **Save Named Condition** dialog. Ensure that the filter name is displayed in the text box at the top of the dialog, and click **OK**. If you choose to create an additional filter, then provide a new name for the filter condition or accept the default name provided by the system and click **OK**.) The **Set Condition** dialog box closes, and the system applies the modified filter.

Note: When a display filter is applied, a description of the filter appears to the right of the toolbar in the Frame Display windows.

Note: The **OK** button on the **Set Condition** dialog box is unavailable (grayed out) until the condition selections are complete.

Deleting a Condition in a Filter

If a display filter has two or more conditions you can delete conditions. If there is only one condition set in the filter you must delete the filter using **Delete Display Filters...** from the **Filters** menu.

1. Click the **Display Filters** icon on the **Frame Display** window or select **Apply/Modify Display Filters…** from the **Filter** menu to open the **Set Condition** dialog box. Click on the Advanced button to show the condition in Boolean format. The dialog box displays the current filter definition. To display another filter, click the Open icon, and select the filter from the pop-up list of all the saved filters.

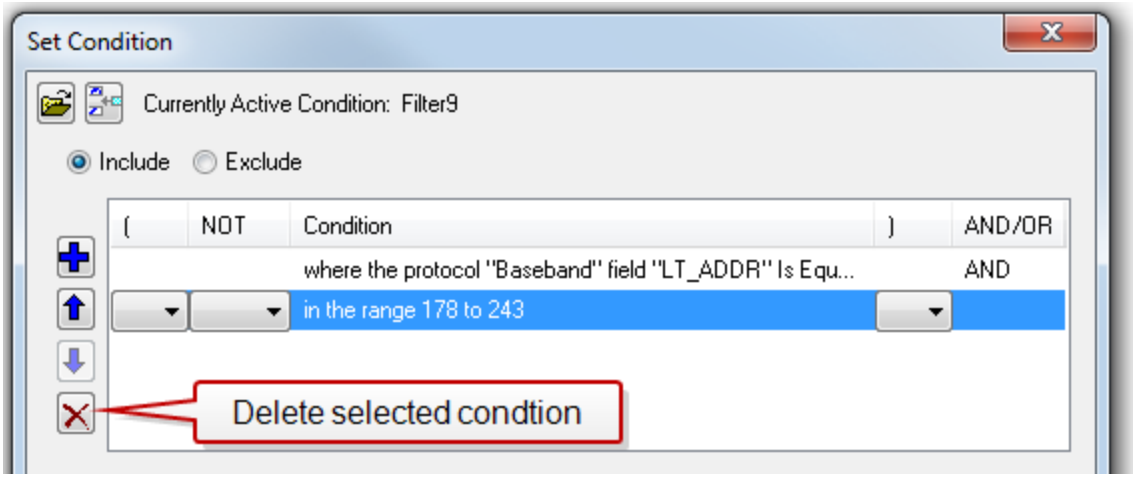

Figure 4.26 - Set Condition Dialog in Advanced View

2. Select the desired condition from the filter definition.
3. Click the **Delete Selected Line** icon.
4. Edit the Boolean operators and parentheses as needed.
5. Click **OK**. The system displays the **Save Named Condition** dialog. Ensure that the filter name is displayed in the text box at the top of the dialog, and click **OK**. (If you choose to create an additional filter, then provide a new name for the filter condition or accept the default name provided by the system and click **OK**.) The **Set Condition** dialog box closes, and the system applies the modified filter.

Note: When a display filter is applied, a description of the filter appears to the right of the toolbar in the **Frame Display** windows.

Note: The **OK** button on the **Set Condition** dialog box is unavailable (grayed out) until the condition selections are complete.

Renaming a Display Filter

1. Select **Rename Display Filters…** from the **Filter** menu in the **Frame Display** window to open the **Rename Filter** dialog. The system displays the **Rename Filter** dialog with a list of all user defined filters in the **Filters** combo box.

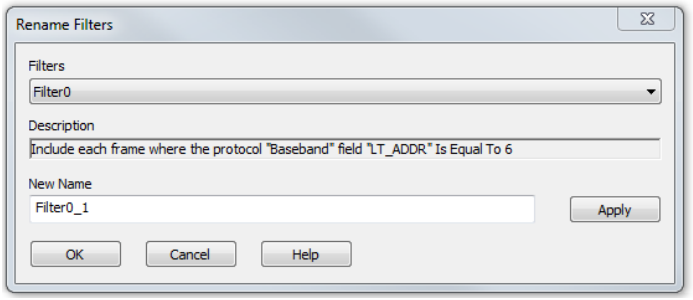

Figure 4.27 - Rename Filters Dialog

2. Select the filter to be renamed from the combo box.
3. Enter a new name for the filter in the **New Name** box. Optionally click the **Apply** button and the new name will appear in the **Filters** combo box and the **New Name** box will empty. This option allows you to rename several filters without closing the **Rename Filter** dialog each time.
4. Click **OK**. The **Rename Filter** dialog box closes and the system renames the filter.

4.4.1.13.2 Connection Filtering

Connection Filtering allows the user to view a subset of the total available packets within the **Frame Display**. The subset can include data from a single *Bluetooth* connection, or all of the BR/EDR packets, all of the low energy packets, all of the 802.11 packets, or all of the HCI packets.

Bluetooth Applicability

A connection (device pair) is identified by

1. A Link for Classic *Bluetooth*,
2. An Access Address for *Bluetooth* low energy.

The link ID is a number that the ComProbe software assigns to identify a pair of devices in a BR/EDR connection. In the **Frame Display** details pane, the Baseband layer contains the link ID field if the field's value is not 0.

An Access Address is contained in every *Bluetooth* low energy packet. The Access Address identifies a connection between a slave and a master or an advertising packet.

Connection filtering displays only the frames, protocols, summary, details, and events for the selected connections.

Note: Connection Filters are not persistent across sessions.

4.4.1.13.2.1 Creating a Connection Filter

In the Frame Display there are four ways to create a connection filter.

From the Frame Display Filter menu

Click on the **Frame Display Filter** menu **Connection Filter** selection. From the drop down menu, select **Classic** or **Bluetooth low energy**. The options are

- Classic *Bluetooth*:
  - **All** will filter in all Classic *Bluetooth* frames. You are in effect filtering out any *Bluetooth* low energy frames and are selecting to filter in all the Classic *Bluetooth* links.
  - **Links** displays all the master-slave links. You can select only one link to filter in. The selected link will filter in only the frames associated with that link.
- *Bluetooth* low energy:
  - **All** will filter in all Bluetooth low energy frames. You are in effect filtering out any Classic Bluetooth frames and are selecting to filter in all Bluetooth low energy access addresses.
  - **Access Addresses** displays all the low energy slave device's access address. You can select only one access address to filter. The selected link will filter in only the frames associated with that access address.
- 802.11:
  - **All** will filter in all 802.11 frames. You are in effect filtering out any other technology frames.
- HCI:
  - **All** will filter in all HCI frames. You are in effect filtering out any other technology frames.

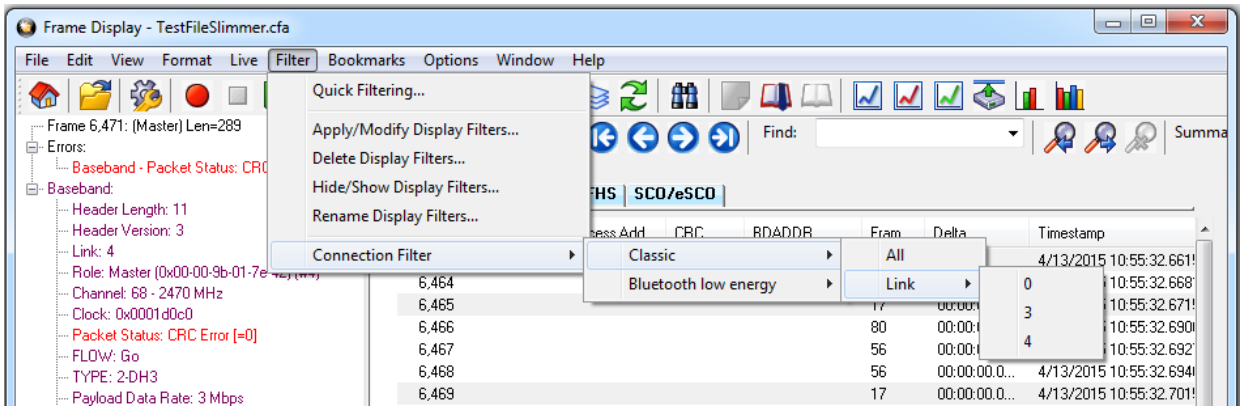

Figure 4.28 - Connection Filter from the Frame Display Menu

From the Frame Display toolbar

Right-click anywhere in the toolbar and select **Connection Filter** from the pop-up menu. The procedure for creating a connection filter are identical as described in **From the Frame Display Filter menu**, above.

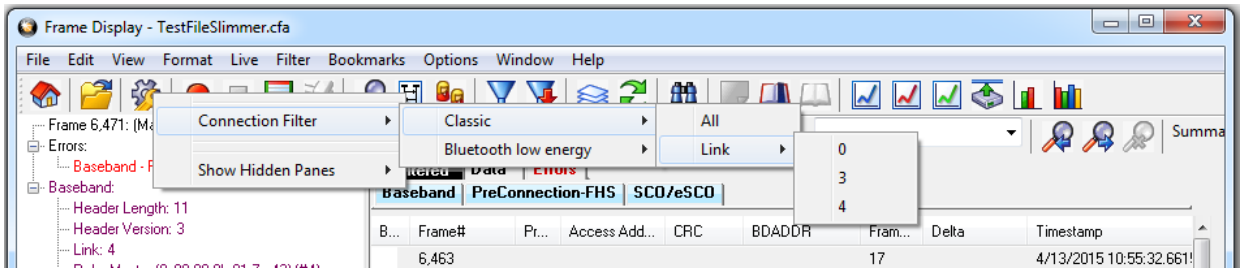

Figure 4.29 - Connection Filter from the Frame Display Toolbar right-click

From the Frame Display panes

Right-click anywhere in a Frame Display pane and select **Connection Filter** in the pop-up menu. The procedure for creating a connection filter are identical as described in **From the Frame Display Filter menu**, above.

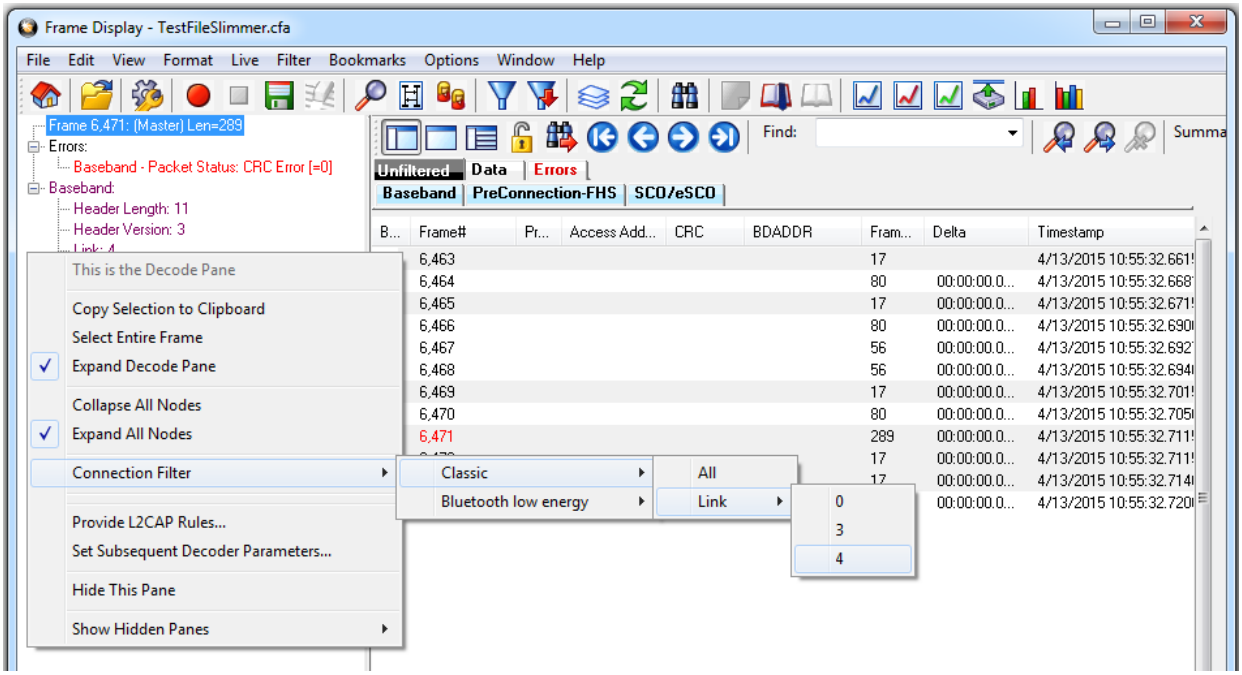

Figure 4.30 - Connection Filter from the Frame Display Pane right-click

From the Frame Display frame selection

Select a frame in the summary pane. Right-click and select **Connection Filter** in the pop-up menu. The procedure for creating a connection filter are identical as described in **From the Frame Display Filter menu**, above.

If the frame you have selected is associated with a Classic *Bluetooth* link or a *Bluetooth* low energy access address, an additional pop-up menu item will appear as shown in the example image below. This selection is a predetermined filter based on your selection. In the example, frame "6471" is associated with "Link 4", so the predetermined filter assumes that you may want create a connection filter for that link. Clicking on **Connection Filter Link = 4** will filter in "Link 4" frames without opening all the drop-down menus.

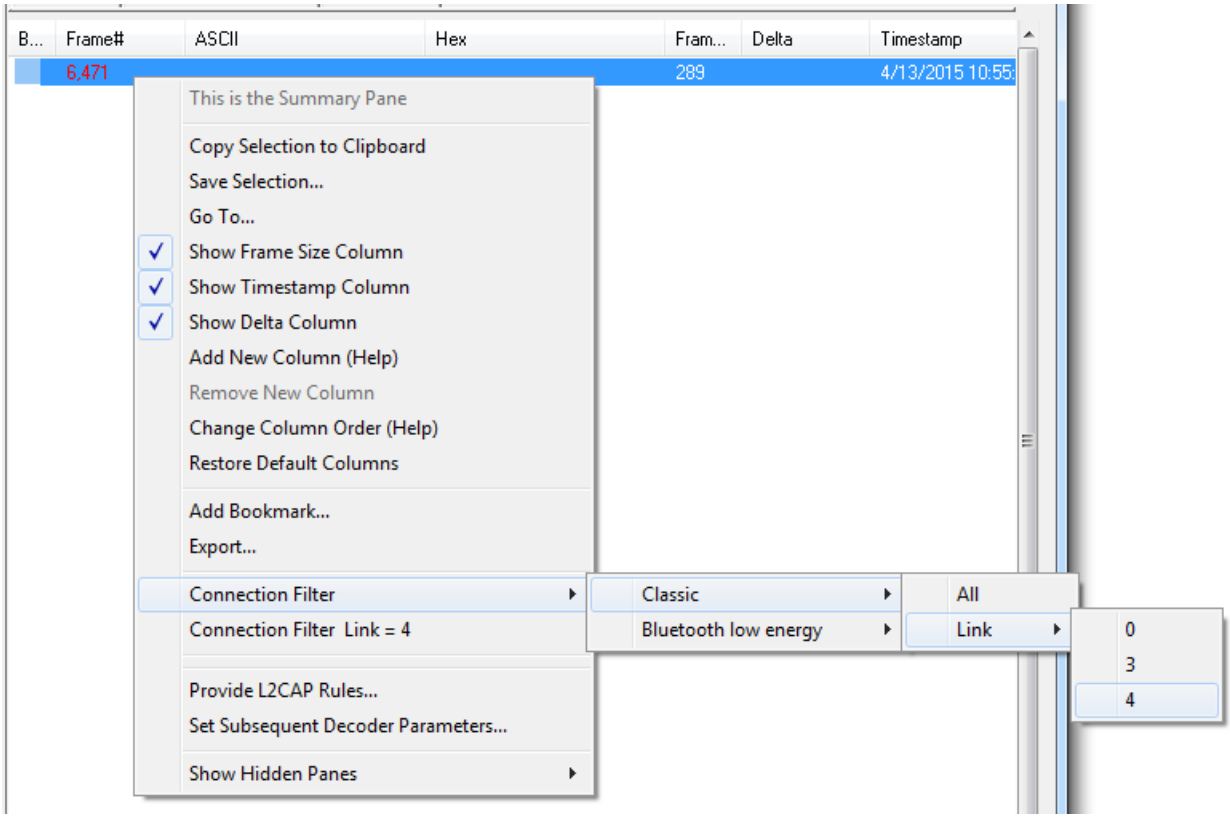

Figure 4.31 - Connection Filter from frame selection right-click

Creating from any Frame Display window

A Connection Filter can be created from any open Frame Display window, and the filtering will always be applied to the original captured data set.

4.4.1.13.2.2 Connection Filter Display

Once you have selected which connections to filter in, another Frame Display will open. The original Frame Display will remain open, and can be minimized.

Note: The system currently limits the number of frame displays to 5. This limit includes any Frame Displays opened using Duplicate View from the Toolbar (see Working with Multiple Frame Displays on page 69)

The new Frame Display with the filtered connection frames will only contain the data defined by the filter criteria. That is, the criteria could be a single link or data for a particular technology.

Display Example 1: Bluetooth low energy Access Address selected

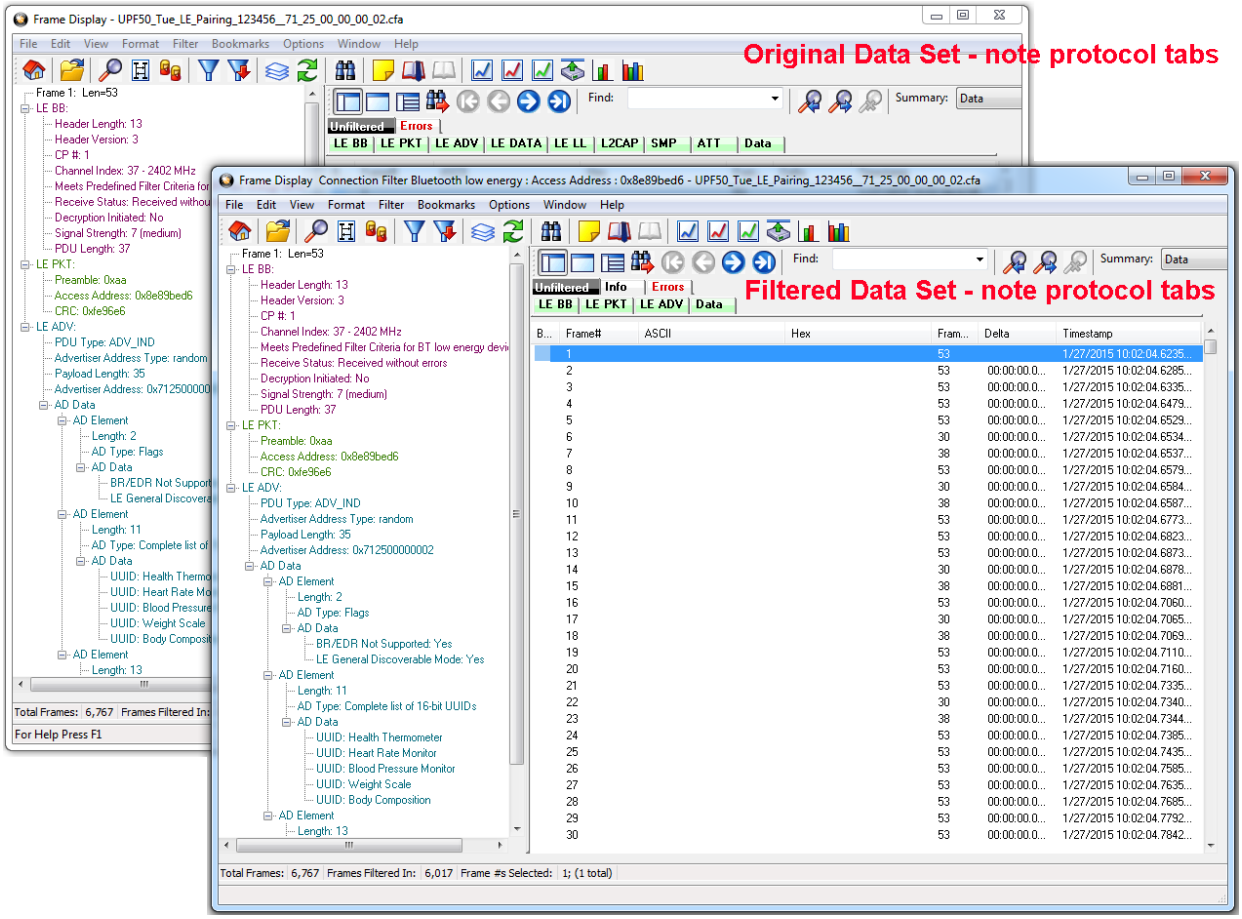

Figure 4.32 - Front Display: Filtered on Access Address 0x8e89bed6

In the figure above is an example Bluetooth low energy data set connection filtered on Access Address = 0x8e89bed6. The Frame Display in the front is the filtered data set. One way to note the difference between the original and the filtered display is to observe the Protocol Tabs. In the filtered display there are four low energy protocol tabs as compared to nine in the original display. This access address connection is not using five of the protocols.

From any open Frame display the user can set another Connection Filter based on the original data set.

Display Example 2: All 802.11 data filtered in

In this example, there is a capture file with Classic *Bluetooth*, *Bluetooth* low energy, and 802.11. To view just the 802.11 data set, 802.11 = All is selected from the right-click pop up menu.

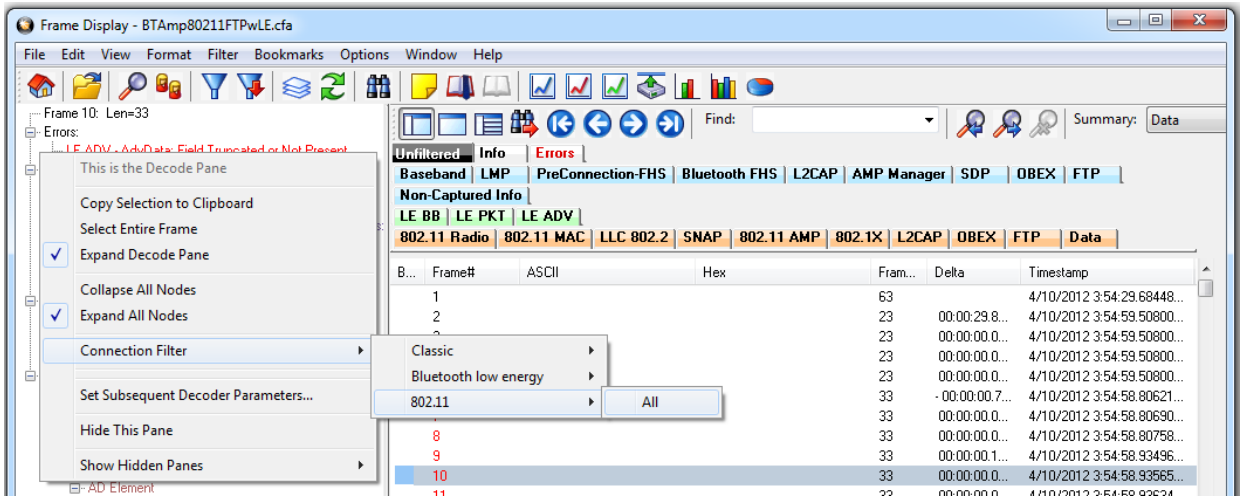

Figure 4.33 - Unfiltered: Capture File with Classic, low energy, and 802.11

When the Frame Display with the filtered 802.11 data set appears, only the Protocol Tabs for 802.11 are present and the tabs for Classic *Bluetooth* and *Bluetooth* low energy have been filtered out.

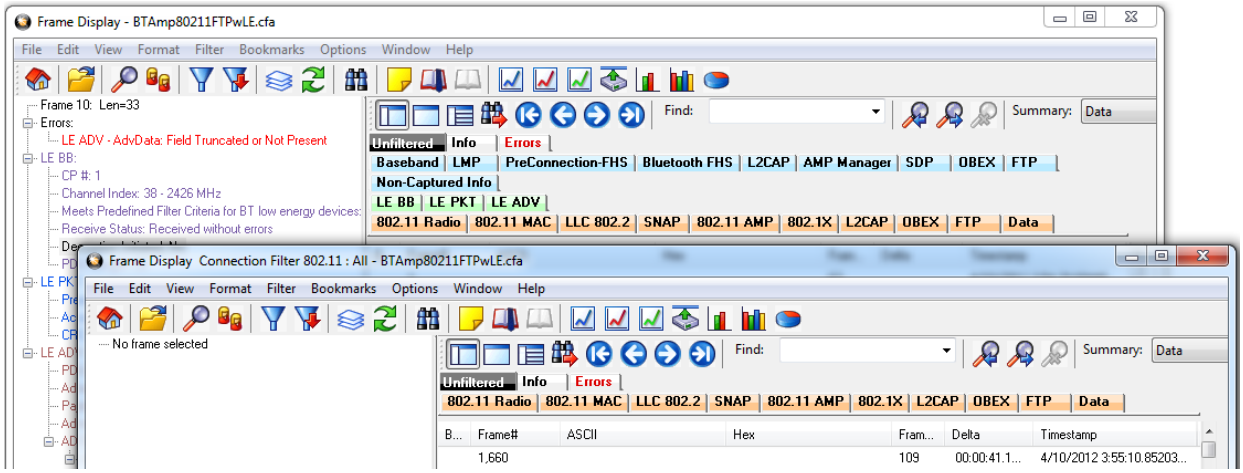
Frame Display - BTAmp80211FTPwLE.cfa
Frame 10: Len=33
Errors:
LE ADV - AdvData: Field Truncated or Not Present
LE BB:
CP #: 1
Channel Index: 38 - 2426 MHz
Meets Predefined Filter Criteria for BT low energy devices:
Receive Status: Received without errors
Frame Display Connection Filter 802.11 : All - BTAmp80211FTPwLE.cfa
No frame selected
Find:
Summary:
Data
Unfiltered Info Errors
802.11 Radio 802.11 MAC LLC 802.2 SNAP 802.11 AMP 802.1X L2CAP OBEX FTP Data
B... Frame# ASCII Hex Fram... Delta Timestamp

Figure 4.34 - Connection Filter selecting All 802.11 frames, front

4.4.1.13.3 Protocol Filtering from the Frame Display

4.4.1.13.3.1 Quick Filtering on a Protocol Layer

On the **Frame Display** , click the **Quick Filtering** icon or select **Quick Filtering** from the **Filter** menu.

This opens a dialog that lists all the protocols discovered so far. The protocols displayed change depending on the data received.

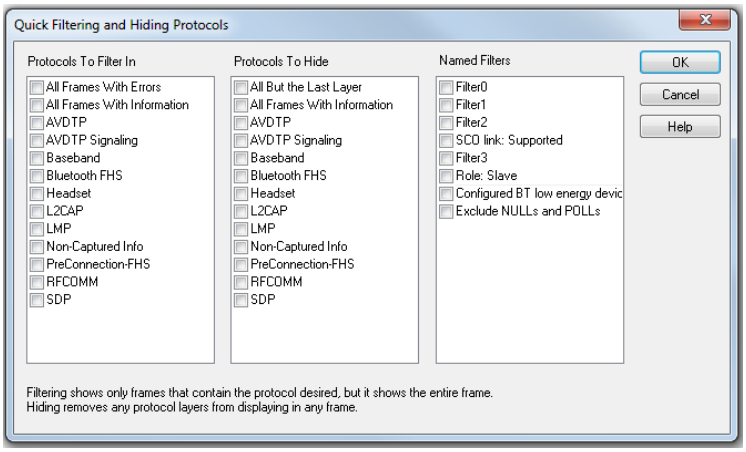

Figure 4.35 - Frame Display Quick Filtering and Hiding Protocols Dialog

The box on the left is **Protocols To Filter In**. When you select the checkbox for a protocol in the **Protocols to Filter In**, the **Summary** pane will only display those frames that contain data from that protocol.

If you filter on more than one protocol, the result are all frames that contain at least one of those protocols. For example, if you filter on IP and IPX NetBIOS, you receive all frames that contain either IP or IPX NetBIOS (or both). A **Quick Filter** tab then appears on the **Frame Display**. Changing the filter definition on the **Quick Filter** dialog changes the filter applied on the **Quick Filter** tab. Quick filters are persistent during the session, but are discarded when the session is closed.

The box in the center is the **Protocols To Hide**. When you select the checkbox for a protocol in the **Protocols To Hide**, data for that protocol will not appear in the **Decode**, **Binary**, **Radix**, and **Character** panes. The frames containing that type data will still appear in the **Summary** pane, but not in the **Decode**, **Binary**, **Radix**, and **Character** panes.

The box on the right is the **Named Filters**. It contains filters that you create using the Named Filter and Set Condition dialogs. When you select the checkbox for the **Name Filters**, a tab appears on the Summary Pane that displays the frame containing the specific data identified in the filter. The named Filter tab remains on the Frame Display Summary Pane unless you hide it using the Hide/Show Display Filters dialog.

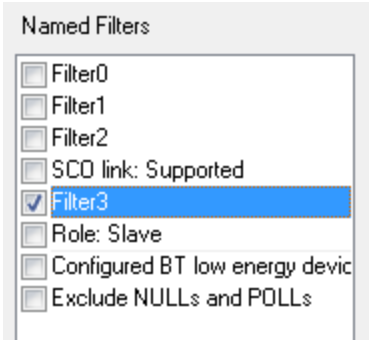

Check the small box next to the name of each protocol you want to filter in, hide, or **Named Filter** to display.

Then click **OK**

4.4.1.13.3.2 Easy Protocol Filtering

There are two types of easy protocol filtering. The first method lets you filter on the protocol shown in the **Summary** pane, and the second lets you filter on any protocol discovered on the network so far.

4.4.2 *Bluetooth* Timeline

In addition to the Coexistence View, which displays both Bluetooth® and 802.11 data together, you can also see more information about *Bluetooth* in a separate dialog. The *Bluetooth* **Timeline** displays packet information with an emphasis on temporal information and payload throughput. The timelines also provide selected information from Frame Display.

The timelines provide a rich set of diverse information about *Bluetooth* packets, both individually and as a range. Information is conveyed using text, color, graphic size, line type, and position.

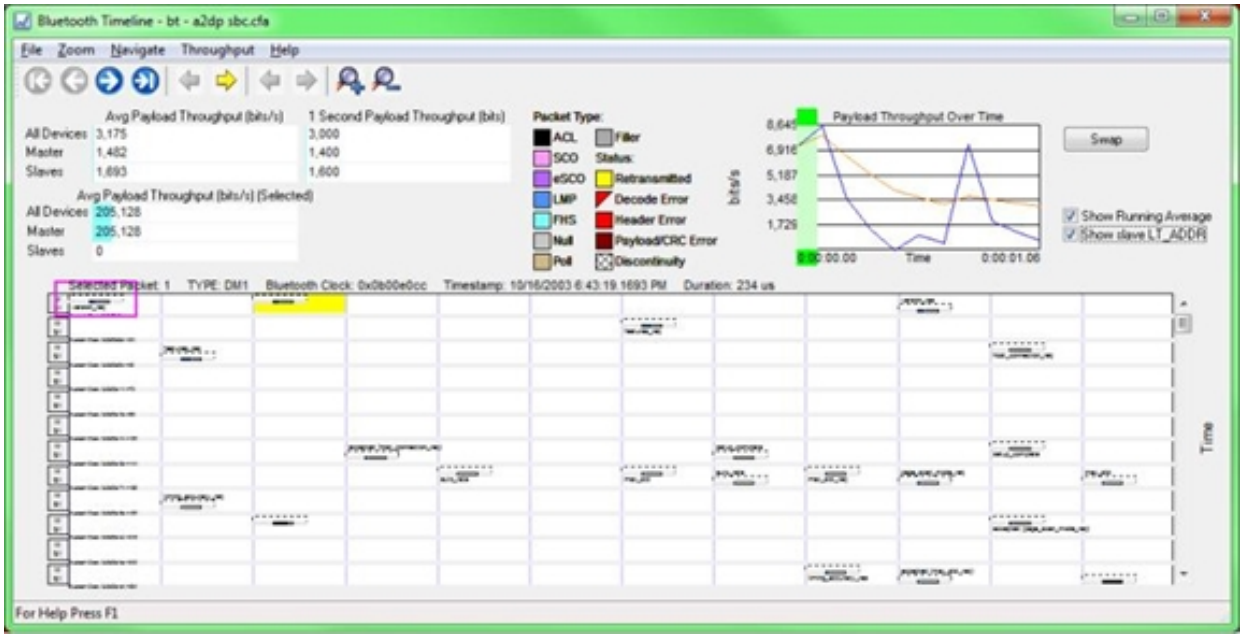

Figure 4.36 - Bluetooth Timeline window

You access the **Bluetooth Timeline** by selecting **Bluetooth Timeline** from the **Control** window **View** menu or by clickingthe **Bluetooth Timeline** icon on the **Control** window toolbar or **Frame Display**.

4.4.2.1 *Bluetooth* Timeline Packet Depiction

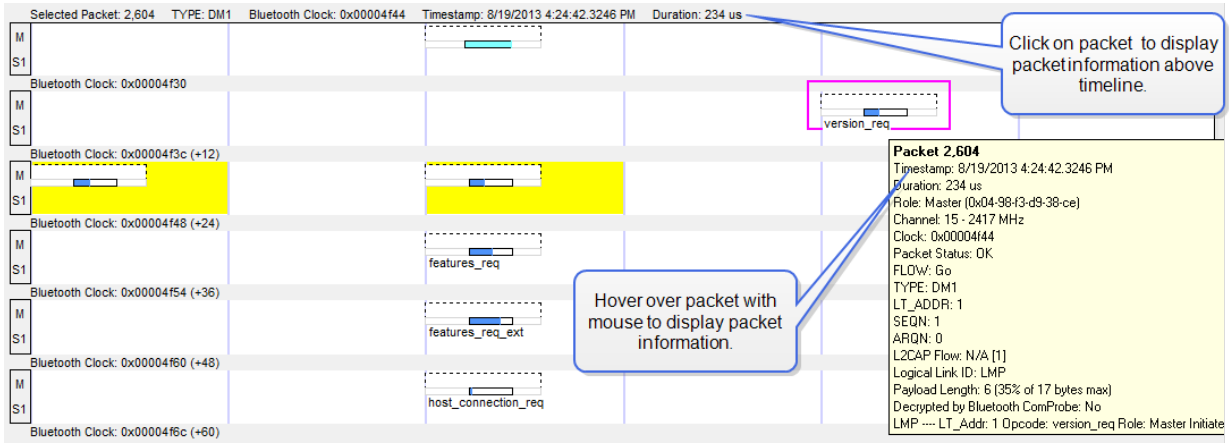
Selected Packet: 2,604 TYPE: DM1 Bluetooth Clock: 0x00004f44 Timestamp: 8/19/2013 4:24:42.3246 PM Duration: 234 us
Bluetooth Clock: 0x00004f30
Bluetooth Clock: 0x00004f3c (+12)
Bluetooth Clock: 0x00004f48 (+24)
Bluetooth Clock: 0x00004f54 (+36)
Bluetooth Clock: 0x00004f60 (+48)
Bluetooth Clock: 0x00004f6c (+60)
version_req
features_req
features_req_ext
host_connection_req
Click on packet to display packet information above timeline.
Hover over packet with mouse to display packet information.
Packet 2,604
Timestamp: 8/19/2013 4:24:42.3246 PM
Duration: 234 us
Role: Master (0x04-98-f3-d9-38-ce)
Channel: 15 - 2417 MHz
Clock: 0x00004f44
Packet Status: OK
FLOW: Go
TYPE: DM1
LT_ADDR: 1
SEQN: 1
ARQN: 0
L2CAP Flow: N/A [1]
Logical Link ID: LMP
Payload Length: 6 (35% of 17 bytes max)
Decrypted by Bluetooth ComProbe: No
LMP ---- LT_Addr: 1 Opcode: version_req Role: Master Initiate

Figure 4.37 - Bluetooth Timeline Packet Depiction with Packet Information Shown

- The timeline shows *Bluetooth* packets within a specific period of time.

- The time segments flow left to right and down, following a complete row across. Then you move down to the next row, go across, then down to the next row, just like reading a book, upper left corner to lower right corner.
- Within each row are two divisions: **M** (master) and **S** (Slave). Packets are placed on **M** or **S** depending on the data's role.
- Placing the mouse pointer on a packet displays information about that packet in an information box.
- Selecting a packet by clicking on it shows information about that packet above the timeline.
- You can use the arrow keys to move to the next or previous packet. You can select multiple packets by dragging within the timeline or by holding the SHIFT key down while arrowing.
- Using the mouse scroll wheel scrolls the timeline vertically. You can also zoom by using a right click (which displays specific magnification values), using the + and - Zoom tools, or by selecting a value from the Zoom menu.
- Packet height indicates speed (1, 2, or 3 Mbits/sec). Packet length indicates duration (for reference, the duration of a slot is 625-µs). Packet height and length together indicate size (speed times duration).

A packet is drawn using the following components:

- A “max packet on wire reference” rectangle (light solid lines). This indicates the packet in the air with a max payload.

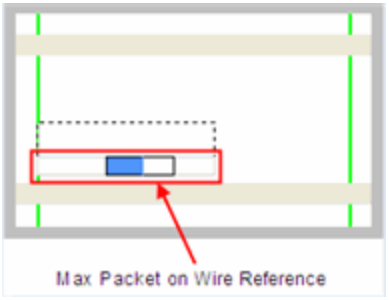

- A “max actual payload reference” rectangle (dark solid lines). This indicates a max payload as would be extracted by the receiving device (if the payload in the air contains forward error correction (FEC), it is longer than the actual payload). The position of the beginning of the rectangle indicates where the payload begins in time.

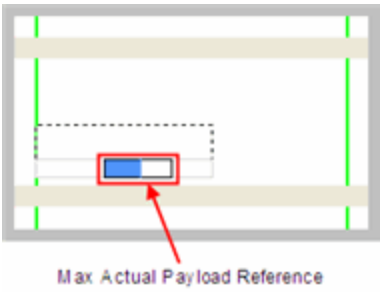

- An “actual payload” colored sub-rectangle (packet category-specific; blue here). This indicates the actual received payload with FEC (if any) removed. It is the beginning portion of the “max actual payload reference” rectangle. If the actual payload is of max size, the entire “max actual payload reference” rectangle is colored.

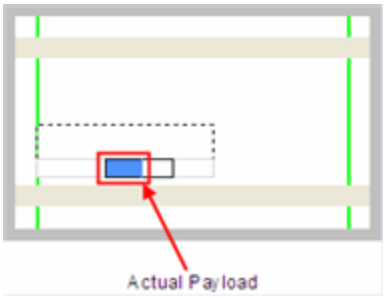

- An “unused payload reference” sub-rectangle (always white). This indicates the unused portion of a maximum payload. It is the remaining portion of the “max actual payload reference” rectangle. The packet in the air does not leave room for this. It is indicated for reference only.

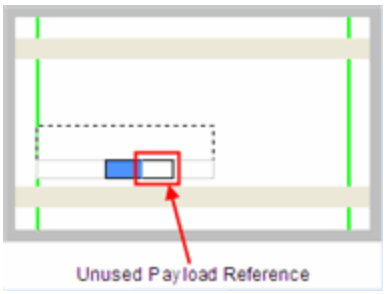

- A “max speed reference” rectangle (dashed lines). This is used to extend the height to that of a 3 Mbits/sec packet, and appears only for packets whose speed is less than that. The packet shown here has a speed of 1 Mbit/sec because the height of the other rectangles is 1/3 of the total height.

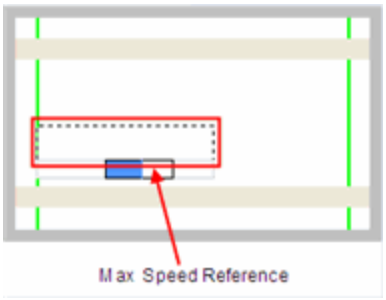

- The part of the “max packet on wire reference” rectangle (light solid lines) that trails the “max actual payload reference” rectangle (dark solid lines) is partly packet in the air (if the payload on the wire contained FEC) and partly trailer (CRC, etc). There is always a trailer, so there is always a little space (subject to round off error and

pixel granularity) between the ends of the two rectangles.

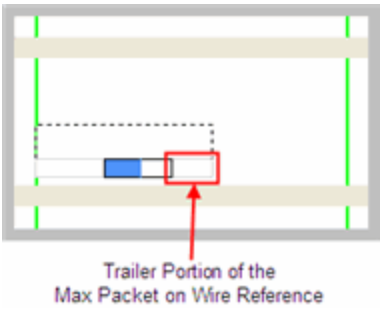

This table shows how packets are colored:

Table 4.7 - Packet Type Colors

Packet Category	Packet Types	Color
ALC	DM1, DM3, DM5, DH1, 2-DH1, 3-DH1, DH3, 2-DH3, 3-DH3, DH5, 2-DH5, 3-DH5, AUX1	Black
SCO	HV1, HV2, HV3, DV	Pink
eSCO	EV3, 2-EV3, 3-EV3, EV4, EV5, 2-EV5, 3-EV5	Purple
LMP*	DM1, DV	Dark Blue
FHS	FHS	Light Blue
NULL	NULL	Light Gray
POLL	POLL	Light Brown
Filler	Filler provided by ComProbe software	Dark Gray
*LMP is a protocol layer that uses either DM1 or DV packets. If a packet has an LMP layer, the LMP color is used instead of the packet type color.		

This table summarizes the various ways in which packet information is presented:

Table 4.8 - Packet Information Presentation

Information	Text	Color	Graphic size	Position
Packet Type	X			
Packet Category		X		
Protocol	X	X		
Time of occurence	X			X

Table 4.8 - Packet Information Presentation (continued)

Information	Text	Color	Graphic size	Position
Source device	X			X
Duration			X	
Size in bytes	X		X	
Size as a percent of max size for that packet type	X		X	
Speed			X	
Status	X		X	

4.4.2.2 *Bluetooth* Timeline Packet Navigation and Selection

- Buttons, menu items, and keystrokes can be used to go to the next or previous packet, next or previous error packet, next or previous retransmitted packet (Bluetooth only), and the first or last packet.
- If there is no selected packet in the timeline, **First Packet** , **Next Packet** , and **Last Packet** are enabled, but **Previous Packet** is not.
- A single packet is selected either by clicking on it, navigating to it, or selecting it in the **Frame Display**. Selecting a packet activates **Previous Packet**.
- Selecting **Previous Packet** with a packet that is currently not visible, places it in the top row (i.e. the display scrolls up just enough to make it visible).
- Selecting **Next Packet** with a packet that is currently not visible, places it in the bottom row (i.e. the display scrolls down just enough to make it visible).
- Selecting **Previous Packet** or **Next Packet** for a packet that's currently visible selects it without scrolling.
- Multiple packets are selected either by dragging the mouse or by holding down the shift key while navigating or clicking.
- When a single packet is selected in the timeline, it is also becomes selected in the **Frame Display**. When multiple packets are selected in the timeline, only one of them is selected in the **Frame Display.**
- The left arrow key goes to the previous packet. The right arrow key goes to the next packet. The Ctrl-left arrow key goes to the previous error packet. The Ctrl-right arrow key goes to the next error packet.

4.4.2.3 *Bluetooth* Timeline Toolbar

The toolbarbar contains the following:

Lock - The Lock button only appears in live mode and is automatically depressed when the user scrolls.

Unlock

First Packet

Previous Packet

Next Packet

Last Packet

Previous Retransmitted Packet

Next Retransmitted Packet

Previous Error Packet

Next Error Packet

Zoom In - Click on the icon each time to zoom in from 4800 slots to 12 slots

Zoom Out - Click on the icon each time to zoom out from 12 slots to 4800 slots

Reset - The Reset button appears only in live mode. Reset causes all packet data up to that point to be deleted from the Packet Timeline display. This does not affect the data in Frame Display. Resetting the display may be useful when the most recent throughput values are of interest.

4.4.2.4 *Bluetooth* Timeline Menu Bar

The **Bluetooth Timeline** menu bar contains the following:

Table 4.9 - Bluetooth Timeline Menus

Menu	Selection	Description
File	Reset	Resets Timeline to display beginning at current frame. Available only in Live mode.
	Exit	Closes the timeline window

Table 4.9 - Bluetooth Timeline Menus (continued)

Menu	Selection	Description
Zoom	Zoom In	Displays less of the timeline, but in greater detail. Keyboard Shortcut: (Ctrl +)
	Zoom Out	Displays more of the timeline, in less detail. Keyboard Shortcut: (Ctrl -)
	Zoom In Tool	Displays a magnifying glass icon with a + and an arrow that allows for precise positioning on the timeline. Clicking will show less of the timeline around the point where the tools is clicked.
	Zoom Out Tool	Similar to the Zoom In Tool except with a "-" sign in the magnifying glass, and clicking will show more of the timeline around the point where the tool is clicked.
	Selection Tool	
	12 Slots (3x4)	Display 12 timeline slots arranged in (*row* x *time slots*), that is, three row with 4 time slots.
	36 Slots (6x6)	Displays 36 slots.
	144 Slots (12x12)	Displays 144 slots
	324 Slots (18x18)	Displays 324 slots
	576 Slots (24x24)	Displays 576 slots
	900 Slots (30x30)	Displays 900 slots
	1296 Slots (36x36)	Displays 1296 slots
	1764 Slots (42x42)	Displays 1764 slots
	2304 Slots (48x48)	Displays 2304 slots
	2916 Slots (54x54)	Displays 2916 slots
	3600 Slots (60x60)	Displays 3600 slots
	4356 Slots (66x66)	Displays 4356 slots
	5184 Slots (72x72)	Displays 5184 slots

Table 4.9 - Bluetooth Timeline Menus (continued)

Menu	Selection	Description
Navigate	First Packet	Goes to the first packet. Keyboard Shortcut: Home
	Last Packet	Goes to the last packet. Keyboard Shortcut: End
	Previous Packet	Goes to the packet prior to the currently selected packet. Keyboard Shortcut: Left Arrow
	Next Packet	Goes to the next packet after the currently selected packet. Keyboard Shortcut: Right Arrow
	Previous Retransmitted Packet.	Goes to the previous retransmitted packet from the currently selected packet. If there is no previous retransmission this item is not active.
	Next Retransmitted Packet	Goes to the next retransmitted packet from the currently selected packet. If there are no retransmitted packets following the current selection, this item is not active.
	Previous Error Packet	Goes to the first error packet prior to the current selection. If there are no error packets available, this item is not active. Keyboard Shortcut: Ctrl+Left Arrow
	Next Error Packet	Goes to the first error packet following the current selection. If there are no error packets available, this item is not active. Keyboard Shortcut: Ctrl+Right Arrow
	Toggle Display Lock	Available only in Live mode. To prevent timeline scrolling during capture, click on this time and the display will lock in its current position. Capture will continue but the displays will remain static. To resume scrolling during capture, click again on this menu item.
Throughput	Export Payload throughput over time.	Save a comma-separated values (.csv) file that contains information about the **Payload Throughput Over Time** graph
	Export Object Throughput Stats	Save a comma-separated values (.csv) file that contains information about objects in the timeline. Assumes at most one object transfer per capture.
Help	Help Topics	Displays *Bluetooth* Timeline help topics.

4.4.2.5 *Bluetooth* Timeline Visual Elements

The *Bluetooth* Timeline consists of the following visual elements:

- The timeline shows *Bluetooth* packets within a specific period of time.
- The timeline shows *Bluetooth* packets within a specific period of time.
- The time segments flow left to right and down, following a complete row across. Then you move down to the next row, go across, then down to the next row, just like reading a book, upper left corner to lower right corner.
- Within each row are two divisions: **M** (master) and **S** (Slave). Packets are placed on **M or S** depending on source of the data withing the link.
- Placing the mouse pointer on a packet displays information about that packet in an information box.
- Selecting a packet by clicking on it shows information about that packet above the timeline.
- You can use the arrow keys to move to the next or previous packet.You can select multiple packets by dragging within the timeline or by holding the SHIFT key down while arrowing.
- Using the mouse scroll wheel scrolls the timeline vertically. You can also zoom by using a right click (which displays specific magnification values), using the + and - Zoom tools, or by selecting a value from the Zoom menu.
- Packet height indicates speed (1, 2, or 3 Mbits/sec). Packet length indicates duration (for reference, the duration of a slot is 625-µs). Packet height and length together indicate size (speed times duration).
- Rows of Bluetooth Slots: Each slot begins at the left edge of the vertical blue bar. There are two Bluetooth clocks per slot. Each slot represents 0.000625 seconds, or 625 µs.
- 'M' and 'S' labels: Within each row, master and slave packets are indicated on the left side of the row. By default, all possible slave devices (there can be up to 7) are put on the **S** sub-row, but checking the **Show slave LT_ADDR** checkbox shows all existing slave device sub-rows with numbered labels (some or all of S1, S2, …, S7).
- Bluetooth Clock: The *Bluetooth* clock of the first slot in each row is shown underneath each row.
- Packet Info Line: The packet info line appears just above the timeline and displays information for the currently selected packet(s). If only one packet is selected, this information consists of the **packet number**, **packet type**, *Bluetooth* **clock** (*Bluetooth* only), **Timestamp**, and **Duration**. **Duration** is shown as "Unknown" when the selected packet has an error.

  If multiple packets are selected, this information consists of the packet range, the *Bluetooth* **clock delta** (*Bluetooth* only), the **Timestamp delta**, and **Span**. **Span** is shown as "Unknown" when the last packet in the selected range has an error since its duration is unknown. A user can use these to verify the average throughput calculations.

  Selected packets are bounded by a magenta rectangle. See the Packet Navigation and Selection section.
- Floating Information Window (aka Tooltip): The information window displays when the mouse cursor hovers on a packet (not slot). It persists as long as the mouse cursor stays on the packet or tooltip. For Bluetooth, the tooltip shows the packet number (in bold), the Baseband layer decode from the decode pane of the Frame Display (with the percentage of the Payload Length max added).

  Discontinuities are indicated by cross-hatched slots. See the Discontinuities section.

- Zoom Tools: **Zoom** tools zoom in or out while maintaining the position on the screen of the area under the zoom tool. This makes it possible to zoom in or out for a specific packet or area of the timeline. See the "Zooming" section.
- Packet Status: Packet status is indicated by color codes. A yellow slot indicates a re-transmitted packet, a dark red slot indicates a CRC error, and a small red triangle in the upper-left corner of the packet (not the slot) indicates a decode error.
- Right-Click Menu: The right-click menu provides zooming and tool selection. See the "Zooming" section.
- Graphical Packet Depiction: Each packet within the visible range is graphically depicted. See the "Packet Depiction" section.
- Swap Button: The Swap button switches the position of the Timeline and the Throughput graph.
- Show Running Average: Selecting this check box shows a running average in the Throughput Over Time graph as an orange line.
- Show slave LT_ADDR: Selecting this checkbox displays the Slave LT_ADDR in the timeline row labels

Note: The raw timestamp value is the number of 100-nanosecond intervals since the beginning of January 1, 1601. This is standard Windows time.

4.4.2.6 *Bluetooth* Timeline Zooming

Zoom features can be accessed from the Zoom menu, clicking a zoom tool on the toolbar, or by right clicking on the **Timeline** window.

A couple of things to remember about Zooming.

- **Zoom** tools accessed using the right click menu allow you to maintain the current position on the screen and precisely zoom in to a specific packet.
- Selecting a **Zoom** icon (+ or -) on the toolbar does not change the pointer to a **Zoom** tool. Each distinct click only zooms in our out.
- **Zoom** tools accessed from the **Zoom** menu have a pointer in the upper-left corner which is useful for specifying the zoom location and bringing up a tool tip of a specific packet.

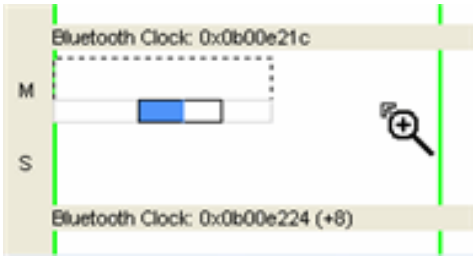

4.4.2.7 *Bluetooth* Timeline Throughput Displays

In computing throughput, payload is not counted from *Bluetooth* packets that have a CRC error (dark red slot) or that are a retransmission (yellow slot).

4.4.2.7.1 *Bluetooth* Timeline Average Payload Throughput

The figure depicts the **Throughput** display with the **Average Throughput** indicators in the left column.

Average Throughput is the total payload over the entire session divided by the total time. Total time is calculated by taking the difference in timestamps between the first and last packet. In *Bluetooth*, timestamp difference is used instead of *Bluetooth* clock count because timestamp difference is immune to role switches. However, this can result in inaccuracies when the duration is small enough that a coarse timestamp granularity is significant.

- **Average Throughput** is shown as 0 when there is only one packet, because in that case the timestamp difference is 0 and an average cannot be computed.
- **Duration** is the beginning of the first packet to the end of the last packet.
- **Duration** for average throughput is beginning of first packet to end of last packet. If a single packet is selected, the duration of that packet is used.
- **Average Throughput** is shown for all devices, master devices, and slave devices.
- A horizontal bar indicates relative percentage. Text displays the throughput value.

4.4.2.7.2 *Bluetooth* Timeline 1 Second Throughput Indicators

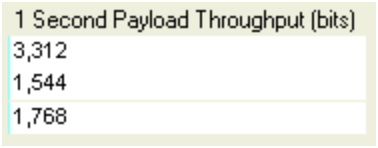

- 1-Second Payload Throughput is the total payload over the most recent one second of duration (This is determined by counting Bluetooth clocks). It is cleared after each discontinuity. A discontinuity is when the Bluetooth clock goes forward more than two (2) seconds or goes backwards any amount. This is caused by either a role switch or Bluetooth clock rollover . The Bluetooth clock count is used instead of timestamp difference because the Bluetooth clock count is precise; however, if timestamp difference were used it would not be necessary to clear the 1-second throughput after each discontinuity. Note: The raw timestamp value is the number of 100-nanosecond intervals since the beginning of January 1, 1601. This is standard Windows time.
- 1-second throughput is not an average. It is simply the total payload over the most recent one second of duration. Since it's not an average, it behaves differently than average throughput. In particular, while average throughput can be very large with only a couple of packets (since it's dividing small payload by small time), 1-second throughput is very small (since it counts only what it sees and doesn't try to extrapolate).
- A 1-second throughput is shown for all devices, master devices, and slave devices.
- A horizontal bar indicates percentage of max, and text gives the actual throughput.

4.4.2.7.3 Average Payload Throughput (bits/s) (Selected)

The following figure depicts the **Throughput** display with the **Average Payload Throughput (bits/sec) (Selected)** indicators in the left column. This portion of the dialog displays average throughput for a selected packet range when you select a packet from the Timeline.

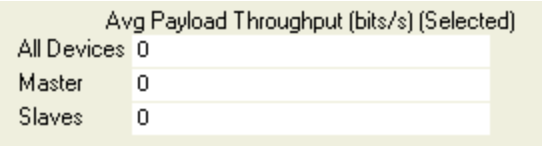

Average throughput is the total payload over the entire session divided by the total time. Total time is calculated by taking the difference in timestamps between the first and last packet. In *Bluetooth*, timestamp difference is used instead of *Bluetooth* clock count because timestamp difference is immune to role switches. However, this can result in inaccuracies when the duration is small enough that a coarse timestamp granularity is significant.

- Duration for average throughput is beginning of first packet to end of last packet. If a single packet is selected, the duration of that packet is used.
- Average throughput can be nonzero when a single packet is selected.
- Average throughput is shown for all devices, master devices, and slave devices.
- A horizontal bar indicates relative percentage. Text displays the throughput value

4.4.2.7.4 *Bluetooth* Payload Throughput Over Time Graph

The following figure depicts the Payload Throughput Over Time graph.

The Payload Throughput Over Time graph shows total payload for each successive time interval. The time interval is initially 0.1 second. Each time the number of throughput elements reaches 100, they are collapsed into a set of 50 by combining adjacent elements and doubling the duration of each element. Collapsing thus occurs as follows:

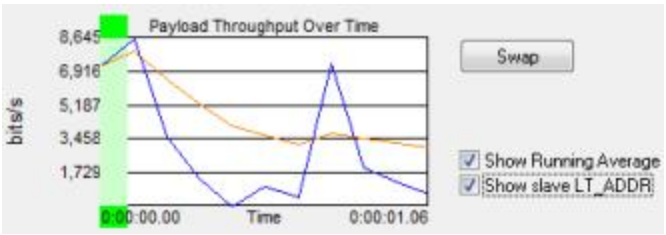

Collapse count	Time since beginning of session (seconds)	Element duration after collapse (seconds)
1	10	0.2
2	20	0.4
3	40	0.8
4	80	1.6
5	160	3.2
6	320	6.4

and so on...

- Th
e bottom of the graph shows a beginning time and an ending time. The beginning time is relative to the start of the session and initially 0. When packets start wrapping out it becomes the relative time offset of the first available packet. The ending time is always the total time of the session.
- Discontinuities are indicated by vertical dashed lines.
- A green view port indicates the time range corresponding to the visible slots in the timeline. The view port can be moved by clicking elsewhere in the graph or by dragging. Whenever it is moved, the timeline scrolls to match. When the slot range in the timeline changes, the view port moves and resizes as necessary to match.
- The **Swap** button - switches the position of the Timeline and the **Throughput** graph.
- **Show Running Average** - Selecting this check box shows a running average in the **Throughput Over Time** graph as an orange line.
- **Show slave LT_ADDR** - Selecting this checkbox displays the **Slave LT_ADDR** in the timeline row labels.

Comparison with the Coexistence View Throughput Graph

The throughput graphs for Classic *Bluetooth* in the Coexistence View and the *Bluetooth* Timeline can look quite different even though they are plotting the same data. The reason is that the Coexistence View uses timestamps while the *Bluetooth* Timeline uses *Bluetooth* clocks, and they do not always match up exactly. This mismatch can result in the data for a particular packet being included in different intervals in the two throughput graphs, and can have a significant impact on the shapes of the two respective graphs. This can also result in the total duration of the two throughput graphs being different.

Another factor that can affect total duration is that the *Bluetooth* **Timeline**'s throughput graph stops at the last Classic *Bluetooth* packet while the **Coexistence View**'s **Throughput Graph** stops at the last packet regardless of technology.

4.4.2.8 Export Payload Throughput Over Time

In the *Bluetooth* **Timeline** you can create and save a comma-separated values (.csv) file that contains information about the **Payload Throughput Over Time** graph. The file contains the following information:

- Sequence Number
- Beginning Packet
- Ending Packet
- Bit Count
- Duration (Secs)
- Bits/Sec
- Running Average (Bits/Sec)

To create the file:

1. Select **Export Payload Throughput Over Time** from the Throughput menu.

   The **Save As** menu appears.

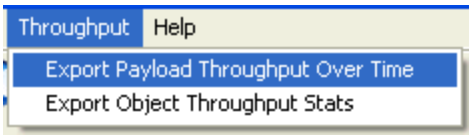

2. Select a location where you want to save the file.

   Note: In live mode, default path name is *C:\Users\Public\Public Documents\Frontline Test Equipment\My Log Files\PayloadThroughputOverTime.csv*. In view mode, default path name is *cfa basepathname with " (PayloadThroughputOverTime).csv"* appended.

3. Enter a **File Name.**
4. Select **Save.**

   The file is saved and you can open it in a simple text editor or database application.

4.4.2.9 Object Throughput Stats File

In the *Bluetooth* **Timeline** you can create and save a comma-separated values (.csv) file that contains information about objects in the timeline. The file contains the following information:

- Name
- Length (bytes)

- Connection Packet Number
- Begin Transfer Packet Number
- End Transfer Packet Number
- Disconnection Packet Number
- Connection Duration
- (Fractional Seconds)
- Transfer Duration
- (Fractional Seconds)
- Connection Throughput (bits/s)
- Transfer Throughput (bits/s)
- Transfer Duration Percentage of Connection Duration
- No Errors Packet Count (Includes Decode Errors) (While Connected)
- Retransmitted Packet Count (While Connected)
- Header Errors Packet Count (While Connected)
- Payload/CRC Errors Packet Count (While Connected)

To create the file:

1. Select **Export Object Throughput Stats** from the Throughput menu.

   The **Save As** menu appears.

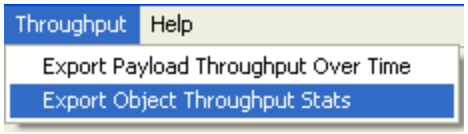

2. Select a location where you want to save the file.

   Note: In live mode, the default path name is *C:\Users\Public\Publick Documents\Frontline Test Equipment\My Log Files\ObjectThroughputStats.csv.* In view mode, default path name is *cfa basepathname with " (ObjectThroughputStats).csv"* appended.

3. Enter a **File Name.**
4. Select **Save.**

   The file is saved and you can open it in a simple text editor or database application

4.4.2.10 *Bluetooth* Timeline Discontinuities

The following figure depicts a discontinuity between two packets.

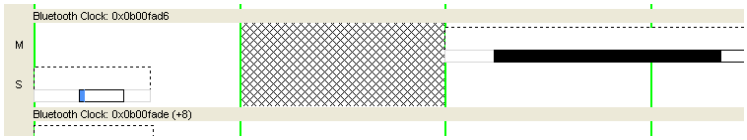

Figure 4.10 *Bluetooth* Timeline Packet Discontinuity, cross-hatched area.

To keep the timeline and the throughput graph manageable, big jumps in the *Bluetooth* clock are not represented linearly. Instead, they are shown as discontinuities. A discontinuity is said to exist when the *Bluetooth* clock goes forward more than two (2) seconds or backwards any amount. A discontinuity is indicated by a cross-hatched slot in the timeline and a corresponding vertical dashed line in the throughput graph. The *Bluetooth* clock can jump forward when capture is paused or when there is a role switch (in a role switch, a different device becomes master, and since each device keeps its own *Bluetooth* clock, the clock can change radically), and backwards when there is a role switch or clock rollover

Note: The raw timestamp value is the number of 100-nanosecond intervals since the beginning of January 1, 1601. This is standard Windows time.

4.4.2.11 Legend

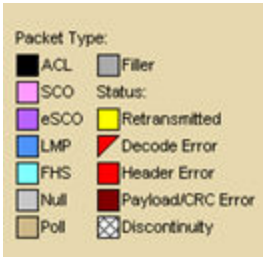

This legend identifies the color coding found in the timeline.

4.4.2.12 *Bluetooth* Timeline: Packets Missing *Bluetooth* Clock

Captured data that is missing the *Bluetooth* clock, such as HCI and BTSnoop, will not display packets. In an instance when the data is missing the clock the *Bluetooth* Timeline will display a message in the Throughput Graph and the Timeline: "Packets without a Bluetooth clock (such as HCI) won't be shown."

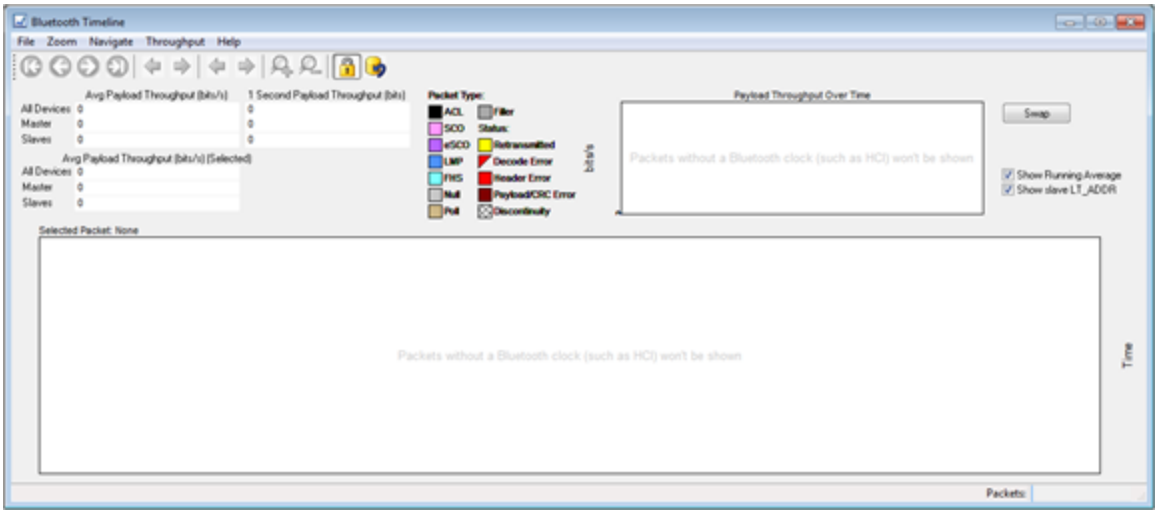
Bluetooth Timeline
File Zoom Navigate Throughput Help
Payload Throughput Over Time
Swap
Packets without a Bluetooth clock (such as HCI) won't be shown
Show Running Average
Show slave LT_ADDR
Selected Packet: None
Packets without a Bluetooth clock (such as HCI) won't be shown
Time
Packets:

Figure 4.38 - Missing packets message in timeline pane.

4.4.3 About The Message Sequence Chart (MSC)

The **Message Sequence Chart** (MSC) displays information about the messages passed between protocol layers. MSC displays a concise overview of a *Blutetooth* connection, highlighting the essential elements fo the connection. At a glance, you can see the flow of the data including role switches, connection requests, and errors. You can look at all the packets int he capture, or filter by protocol or profile. the MSC is color coded for a clear and easy view of your data.

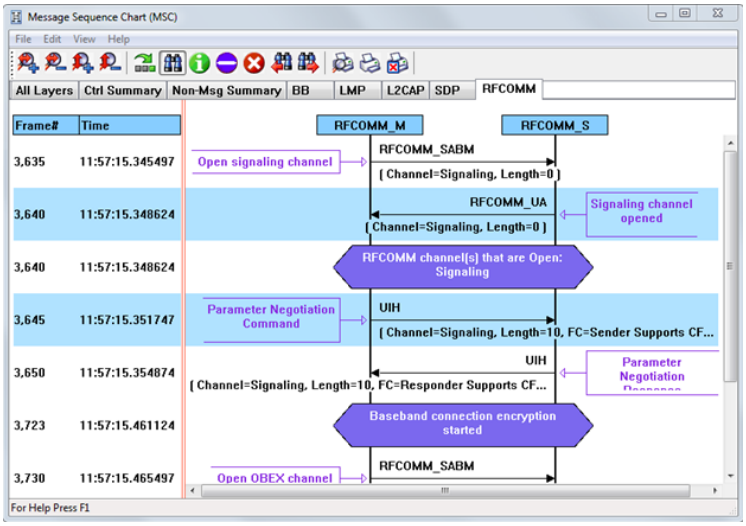

Figure 4.39 - Message Sequence Chart Window

How do I access the chart?

You access the **Message Sequence Chart** by selecting the icon or **MSC Chart** from the **View** menu from the **Control** window or **Frame Display**.

What do I see on the dialog?

At the top of the dialog you see four icons that you use to zoom in and out of the display vertically and horizontally. The same controls are available under the **View** menu.

There are three navigation icons also on the toolbar.

	This takes you to the first Information Frame.
	This takes you to first Protocol State Message.
	This takes you to the first Error Frame. Click here to learn more about this option.

If there is both Classic and low energy packets, there will be a **Classic** and **LE** tab at the top of the dialog.

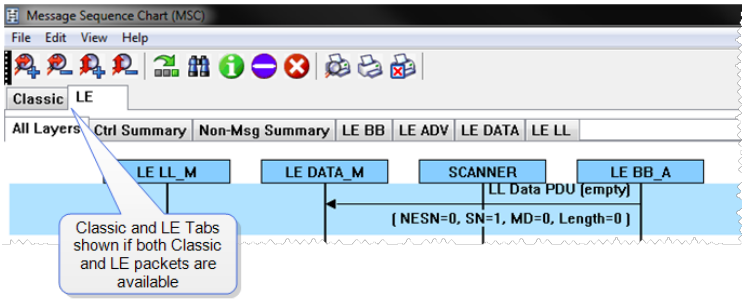
Message Sequence Chart (MSC)
File Edit View Help
Classic LE
All Layers Ctrl Summary Non-Msg Summary LE BB LE ADV LE DATA LE LL
LE LL_M
LE DATA_M
SCANNER
LE BB_A
LL Data PDU (empty)
(NESN=0, SN=1, MD=0, Length=0)
Classic and LE Tabs shown if both Classic and LE packets are available

Figure 4.40 - Classic and LE tabs

If the **Classic** tab is selected, you will see Classic protocols. If you select the **LE** tab, you will see LE Protocols. If there is only Classic or only LE, the Classic and LE tabs will not appear.

Also along the top of the dialog are a series of protocol tabs. The tabs will vary depending on the protocols.

Clicking on a tab displays the messaging between the master and slave for that protocol. For example, if you select **RFCOMM**, you will see the messaging between the **RFCOMM{M}** Master, and the **RFCOMM{S}** Slave.

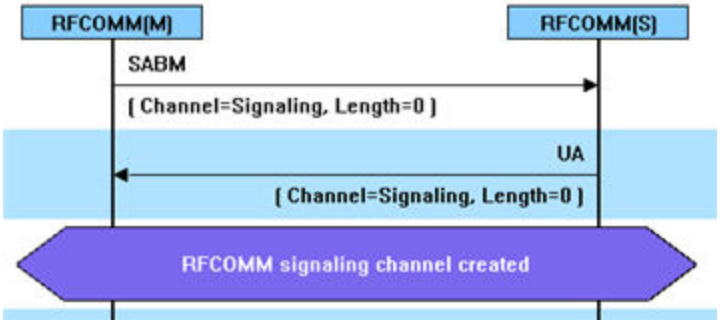

The Non-Message Summary tab displays all the non-message items in the data.

The **Ctrl Summary** tab displays the signaling packets for all layers in one window in the order in which they are received.

The information in the colored boxes displays general information about the messaging. The same is true for each one of the protocols.

If you want to see the all the messaging in one dialog, you select the **All Layers** tab.

When you move the mouse over the message description you see an expanded tool tip.

If you position the cursor outside of the message box, the tool tip will only display for a few seconds.

If, however, you position the cursor within the tool tip box, the message will remain until you move the cursor out of the box.

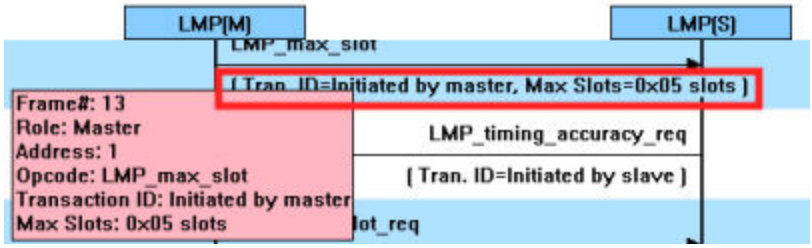

Additionally, If you right click on a message description, you will see the select Show all Layers button.

When you select **Show all Layers**, the chart will display all the messaging layers.

The **Frame#** and **Time** of the packets are displayed on the left side of the chart.

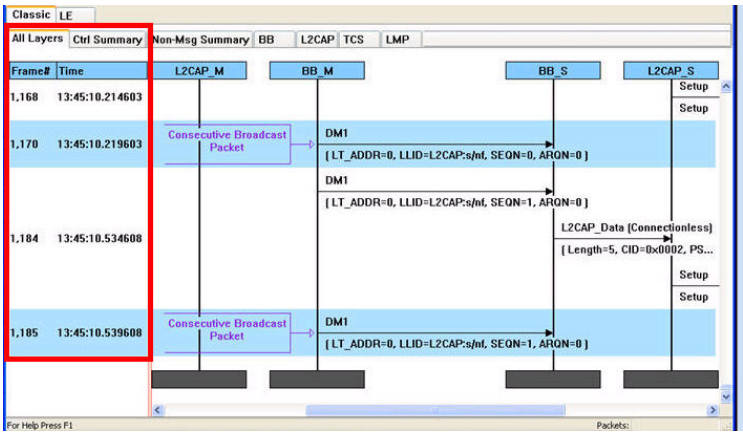

Figure 4.41 - Frame# and Time Display, inside red box.

If you click on the description of the message interaction, the corresponding information is highlighted in Frame Display.

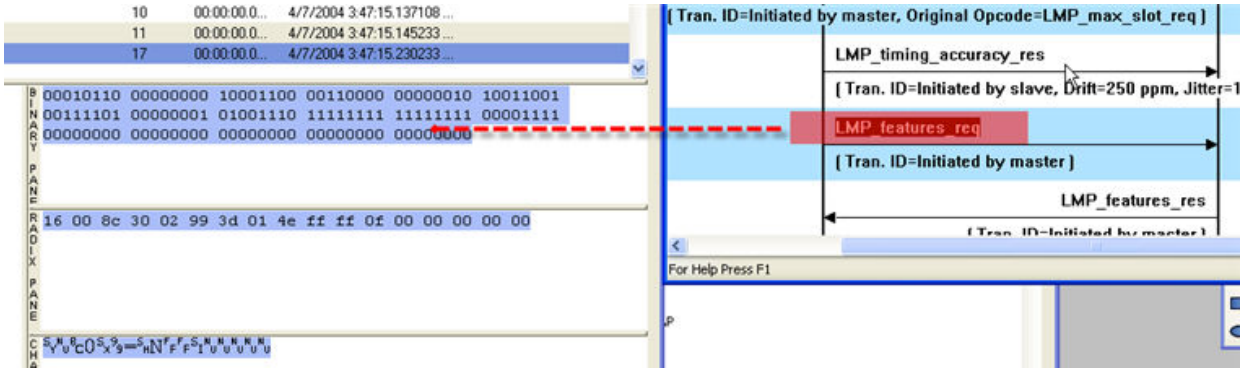

Figure 4.42 - MSC Synchronization with Frame Display

How do I navigate in the dialog?

You can use the navigation arrows at the bottom and the right side of the dialog to move vertically and horizontally. You can also click and hold while moving the pointer within dialog that brings up a directional arrow that you can use to move left/right and up/down.

Ctrl Summary tab

When you select the **Ctrl Summary tab** you will see a summary of the control and signaling frames in the order that they are received/transmitted from and to devices.

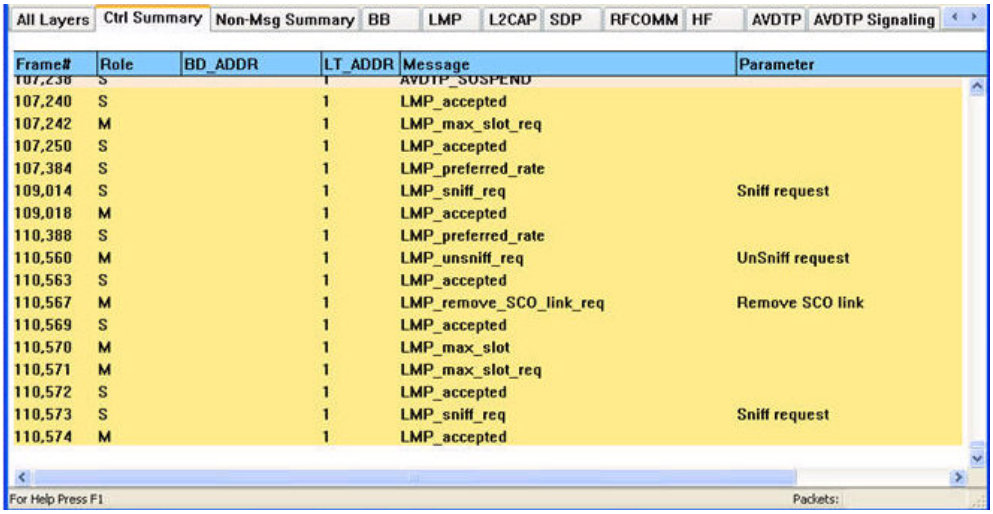

Frame#	Role	BD_ADDR	LT_ADDR	Message	Parameter
107,240	S		1	LMP_accepted	
107,242	M		1	LMP_max_slot_req	
107,250	S		1	LMP_accepted	
107,384	S		1	LMP_preferred_rate	
109,014	S		1	LMP_sniff_req	Sniff request
109,018	M		1	LMP_accepted	
110,388	S		1	LMP_preferred_rate	
110,560	M		1	LMP_unsniff_req	UnSniff request
110,563	S		1	LMP_accepted	
110,567	M		1	LMP_remove_SCO_link_req	Remove SCO link
110,569	S		1	LMP_accepted	
110,570	M		1	LMP_max_slot	
110,571	M		1	LMP_max_slot_req	
110,572	S		1	LMP_accepted	
110,573	S		1	LMP_sniff_req	Sniff request
110,574	M		1	LMP_accepted	

Figure 4.43 - Control and Signaling Frames Summay

The frame numbered is shown, whether the message comes from the Master or Slave, the message Address, the message itself, and the timestamp.

Additionally, the control/signaling packets for each layer are shown in a different background color.

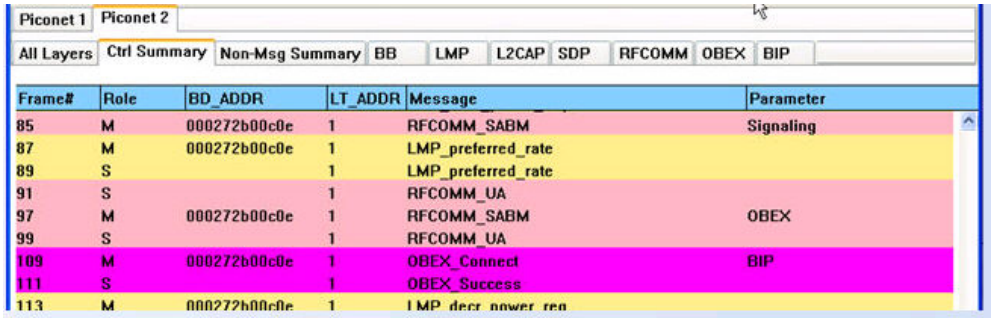

Figure 4.44 - Packet Layers Shown in Different Colors

If you right click within the **Ctrl Summary**, you can select **Show in MSC**.

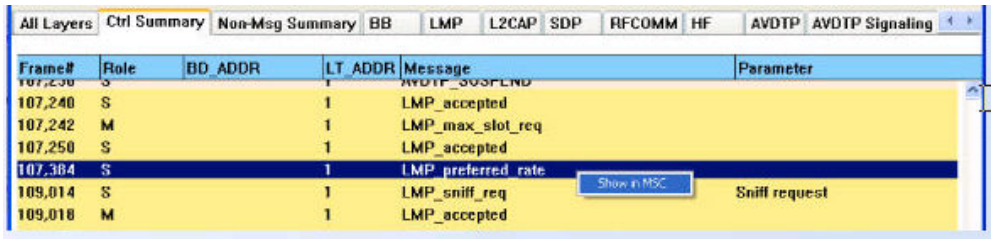

Figure 4.45 - Right-Click in Ctrl Summary to Display Show in MSC

The window then displays the same information, but in the normal MSC view.

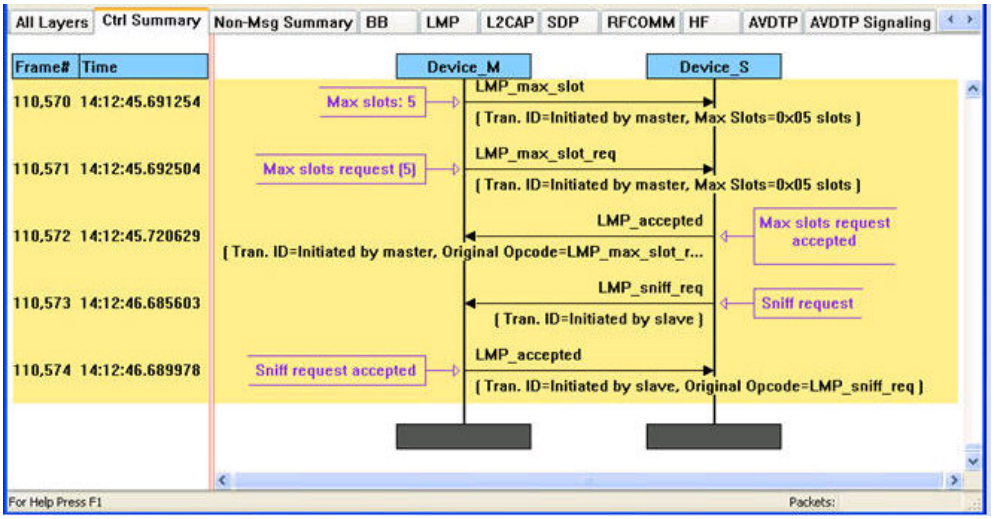

Figure 4.46 - MSC View of Selected Packet from Ctrl Summary

You can return to the text version by using a right click and selecting **Show in Text.**

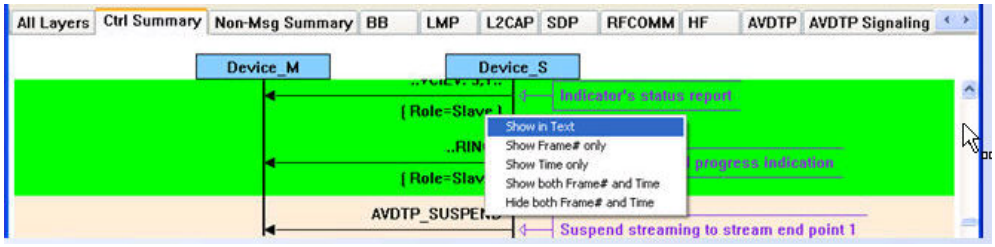

Figure 4.47 - Return to Text View Using Right-Click Menu

You can also choose to show:

- Frame # only
- Time only
- Show both Frame# and Time
- Hide both Frame# and Time

4.4.3.1 Message Sequence Chart - Search

The Message Sequence Chart has a Search function that makes it easy to find a specific type message within the layers.

When you select the 1) **Search** icon or 2) use **F3** key, the **Select layer and message** dialog appears.

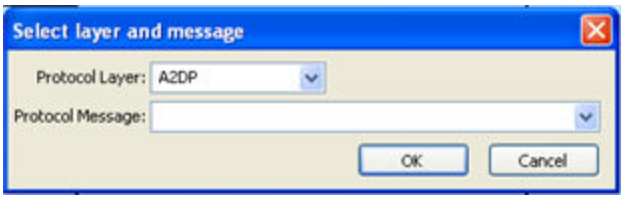

From this dialog you can search for specific protocol messages or search for the first error frame.

1. On the MSC dialog select one of the protocol tabs at the top.

Note: If you select **All Layers** in Step 1, the Protocol Layers drop-down list is active. If you select any of the other single protocols, the Protocol Layers drop-down is grayed out.

2. Or Open the Search dialog using the Search icon or the **F3** key.
3. Select a specific Protocol Message from the drop-down list.
4. Once you select the Protocol Message, click **OK**

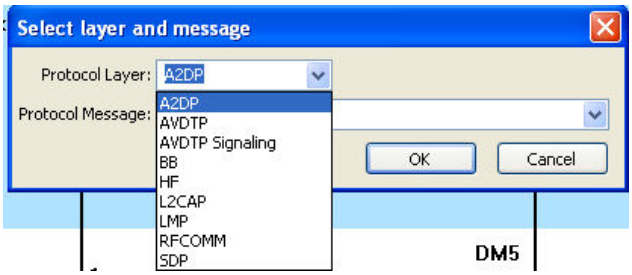

The Search dialog disappears and the first search result is highlight in the Message Sequence Chart.

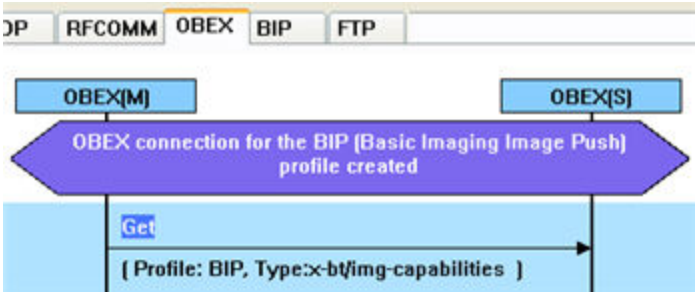

Figure 4.48 - Highlighted First Search Result

If there is no instance of the search value, you see this following dialog.

Once you have set the search value, you can 1) use the **Search Previous** and **Search Next** buttons or 2) **F2** and **F4** to move to the next or previous frame in the chart.

4.4.3.2 Message Sequence Chart - Go To Frame

The **Message Sequence Chart** has a **Go To Frame** function that makes it easy to find a specific frame within the layers.

In addition to Search, you can also locate specific frames by clicking on the **Go To Frame** toolbar icon.

1. Click **Go To Frame** in the toolbar.
2. Enter a frame number in the **Enter frame No.:** text box.
3. Click **OK**.

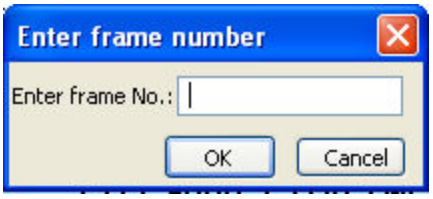

The Go To Frame dialog disappears and the selected frame is highlighted in the chart.

Once you have identified the frame in Go To, you can 1) use the Search Previous and Search Next buttons or 2) **F2** and **F4** keys to move to the next or previous frame in the chart.

4.4.3.3 Message Sequence Chart - First Error Frame

When you select **Go to first error frame** from the toolbar , the **Select layer** dialog appears.

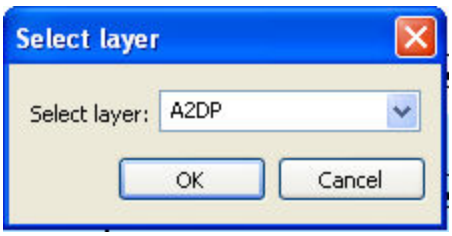

You have to select a layer from the drop down list to choose what layer you want to search for the error.

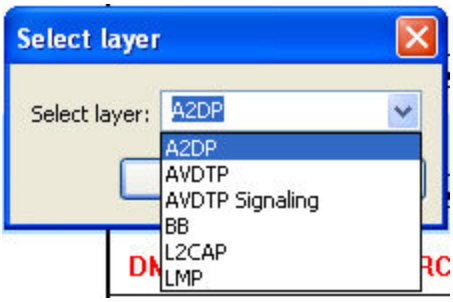

Once you select a layer, then **OK**, the first error for that layer will be displayed.

If no error is found, a dialog will announce that event.

4.4.3.4 Message Sequence Chart - Printing

There are three standard MSC print buttons. **Print Preview**, **Print**, and **Cancel Printing**.

Print Preview

1. When you select **Print Preview** , the **Print Setup** dialog appears.
2. You next need to select your printer from the drop-down list, set printer properties, and format the print output..
3. Then you select **OK**.

After you select **OK**, the **Message Sequence Chart Print Preview** dialog appears.

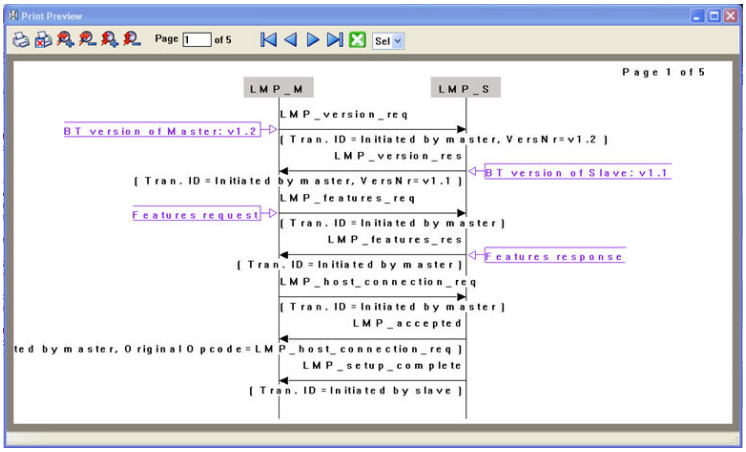

Figure 4.49 - Message Sequence Chart Print Preview

The information in the dialog will vary depending on the layer that is selected in the Message Sequence Chart, the properties of the printer you select, and the amount of data in the layer (which will correspond to the number of pages displayed).

You control what you see and when to print using the toolbar at the top of the dialog.

Figure 4.50 - Print Preview Toolbar

Table 4.11 - Print Preview Icons

Icon	Name	Description
	Print	Prints all the pages to the printer you select in Print Setup dialog. When you select Print, you will output the data that is currently being displayed.
	Cancel Printing	Cancels the current printing.
	Zoom In Horizontally	Expands the data horizontally so it can be easier to read.
	Zoom Out Horizontally	Squeezes the data together so that more fits on one page.
	Zoom In Vertically	Expands the data vertically so it can be easier to read.
	Zoom Out Vertically	Squeezes the data so that more fits on one page.

Table 4.11 - Print Preview Icons (Continued)

Icon	Name	Description
	Current Page	The current page text box displays the page number this is currently shown in the dialog. You can enter a number in the text box, then press Enter, and the dialog will display the data for that page.
	Page navigation	If the data requires multiple pages, the navigation buttons will take you to: • The first page • The previous page • The next page • The last page
	Close Print Preview	Closes the dialog and returns to the Message Sequence Chart
	Select Font Size	Allows selection of the print font size from the drop-down control.

4.5 Packet Error Rate Statistics

The **Packet Error Rate** (PER) Stats view provides a dynamic graphical representation of the Packet Error Rate for each channel. The dialog displays a graph for each Classic Bluetooth® channel numbered 0 through 78 and for each *Bluetooth* low energy channel numbered 0 through 39.

Packet Error Rate Stats assist in detecting bad communication connections. When a high percentage of re-transmits, and/or header/payload errors occur, careful analysis of the statistics indicate whether the two devices under test are experiencing trouble communicating, or the packet sniffer is having difficulty listening.

Generally, if the statistics display either a large number of re-transmits with few errors or an equal number of errors and re-transmits, then the two devices are not communicating clearly. However, if the statistics display a large number of errors and a small number of re-transmits, then the packet sniffer is not receiving the transmissions clearly.

You can access this window in Classic Bluetooth® by selecting the **Classic *Bluetooth* Packet Error Rates Statistics** icon from the **Control** window or **Frame Display**. You can also open the window from the View menu on the same windows.

Classic *Bluetooth* Packet Error Rate

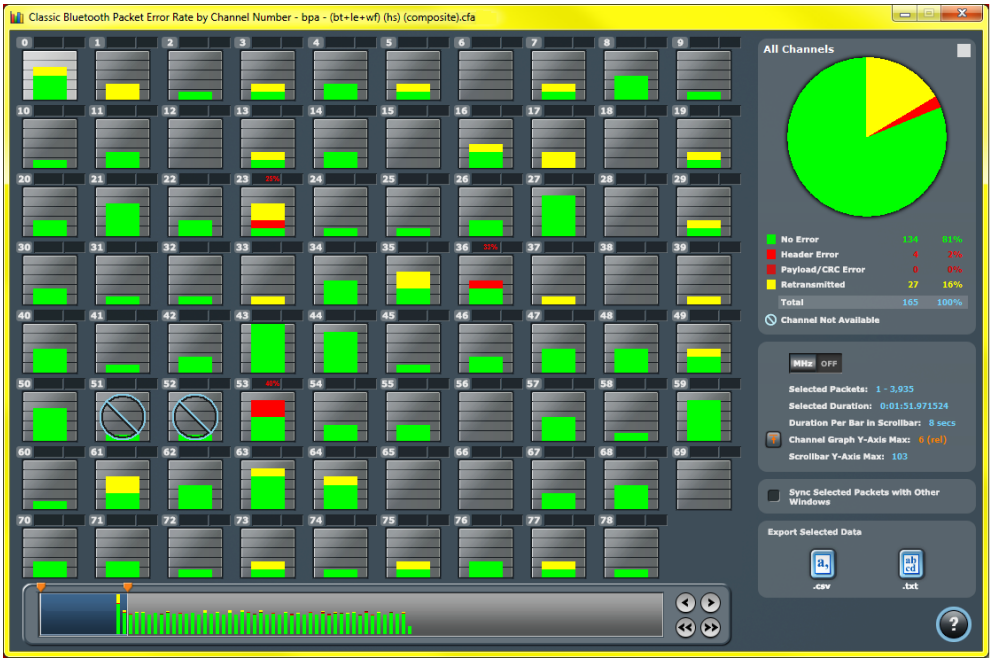
Classic Bluetooth Packet Error Rate by Channel Number - bpa - (bt+le+wf) (hs) (composite).cfa
All Channels
No Error 134 81%
Header Error 4 2%
Payload/CRC Error 0 0%
Retransmitted 27 16%
Total 165 100%
Channel Not Available
MHz OFF
Selected Packets: 1 - 3,935
Selected Duration: 0:01:51.971524
Duration Per Bar in Scrollbar: 8 secs
Channel Graph Y-Axis Max: 0 (rel)
Scrollbar Y-Axis Max: 103
Sync Selected Packets with Other Windows
Export Selected Data
.csv
.txt

Figure 4.51 - Classic *Bluetooth* PER Stats Window

4.5.1 Packet Error Rate - Channels

The main portion of the PER Stats dialog displays the 79 individual channels, 0-78, for Classic Bluetooth® .

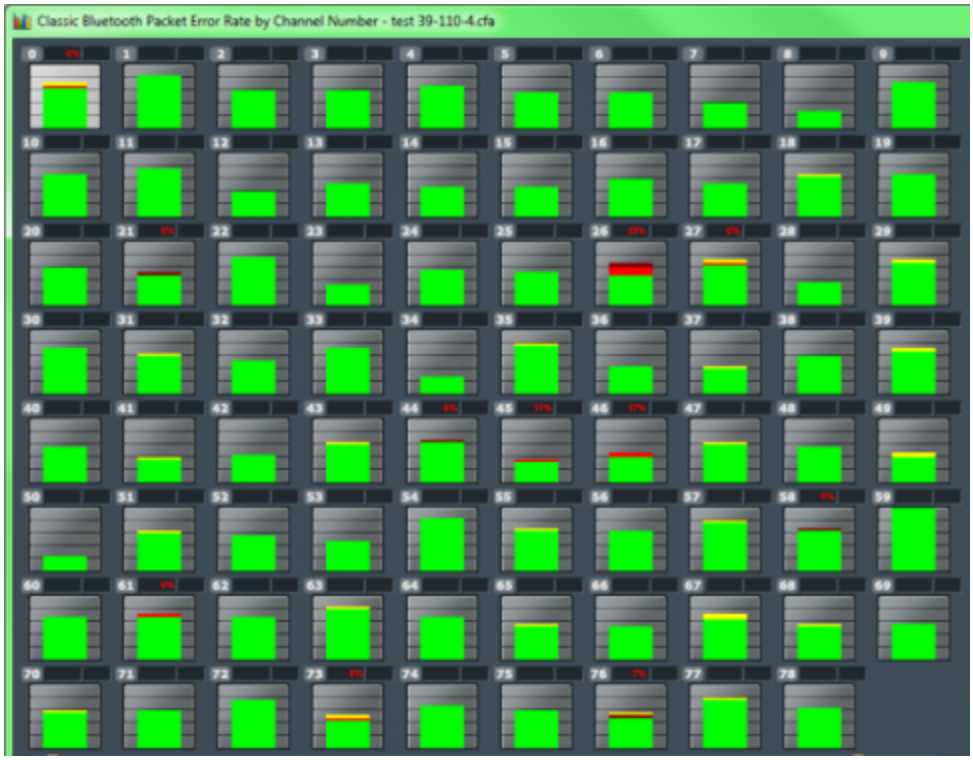

Figure 4.52 - Classic *Bluetooth* Packet Error Rate Channels

- **For Classic *Bluetooth*:** Each channel contains a bar that displays the number of packets with no errors in green, packets with Header Errors in red, packets with Payload or CRC errors in dark red, and Retransmitted packets in yellow.
- The red number at the top of the channel shows the percentage of Header Error and Payload/CRC Errors in relationship to the total number of packets in the channel.
- The light blue number at the top of each channel shows the megahertz (MHz) for the channel if the option is chosen in the Additional Statistics section.
- When you select a channel, detailed information for that channel is displayed in the expanded chart on the upper right.
- The channels change dynamically as the Viewport is moved or new data appears within the Viewport.
- The **Channel Not Available** symbol is displayed if the channel is not available in the most recent channel map that is in or before the last selected packet, even if that channel map comes before the first selected packet. *Bluetooth* Adaptive Frequency Hopping processes will block channels determined to be unreliable. These channels are not available because the Bluetooth devices have decided not to use them.

- "s" changes the size of the entire dialog.
- "c" changes the contrast of the dialog

- The **Reset** button is only available in live mode. The button will appear in the lower right-hand corner of the Channels section. Clicking on the **Reset** button will clear all prior data from PER Stats.

4.5.2 Packet Error Rate - Pie Chart and Expanded Chart

The **Expanded PER Stats Chart** (in the upper right) displays detailed information about the channel selected from the main channel dialog.

Expanded Chart

Pie Chart

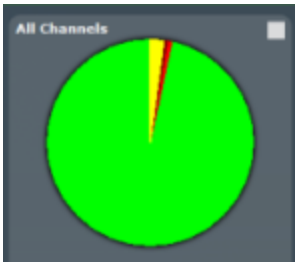

- When PER Stats is first opened, Channel 0 is displayed in the expanded chart.
- The top orange number on the Y-Axis displays the maximum number of packets in Snap Mode. If Snap Mode is turned off, the number will display in light blue.
- The number of the selected channel is displayed in the upper-left corner of the expanded chart.
- The combined value of Header and Payload/CRC errors for the channel is displayed in red as a percentage to the right of the channel number.
- The megahertz (MHz) value is displayed in light blue text if the MHz option is selected in the Additional Statistics section.
- The number of packets with no errors is displayed in light green in the bar chart.
- **For Classic Bluetooth®** : The number of packets that have header errors is displayed in red in the bar chart.
- **For Classic *Bluetooth***: The number of payload errors is displayed in dark red in the bar chart.
- **For Classic *Bluetooth***: The number of re-transmits is displayed in yellow in the bar chart.
- All the values, except MHz, change dynamically when multiple time periods are selected in the Scroll Bar.

- When you select the in the upper-right corner, the bar chart is replaced by a pie chart. The pie chart applies to all channels, not a selected channel. To return to the bar chart, click on the channel again or click on the in the upper right hand corner.

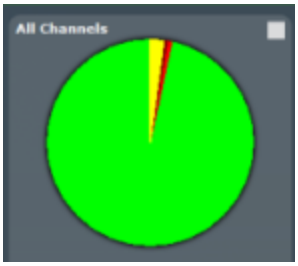

4.5.3 Packet Error Rate - Legend

The **Legend** displays color coded information about the channel selected.

Classic Bluetooth®

For Classic *Bluetooth*

- The number of Packets with **No Errors** and percentage of packets with **No Errors** in relationship to total packets for the channel is displayed in green.
- The number of Packets with **Header Errors** and percentage of packets with **Header Errors** in relationship to total packets for the channel is displayed in red.
- The number of Packets with **Payload/CRC Errors** and percentage of packets with **Payload/CRC Errors** in relationship to total packets for the channel is displayed in dark red.
- The number of **Retransmitted** Packets and percentage of **Retransmitted** packets in relationship to total packets for the channel is displayed in yellow.
- **Total** packets and **Total** percentage is displayed in light blue.

For a description of the **Channel Not Available** symbol, see PER Stats Channel.

4.5.4 Packet Error Rate - Additional Statistics

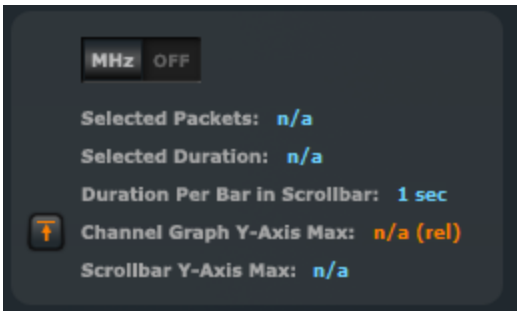
MHz OFF
Selected Packets: n/a
Selected Duration: n/a
Duration Per Bar in Scrollbar: 1 sec
Channel Graph Y-Axis Max: n/a (rel)
Scrollbar Y-Axis Max: n/a

This Additional Statistics section of PER Stats displays information about selected packets, duration, and Y-Axis max, and it also has two controls.

- Selecting **MHz On**  displays the megahertz value for each channel in the main channels chart and also in the expanded chart.
- Selecting **MHz Off**  removes the megahertz value.
- **Selected Packets** displays the packet range selected in the Scroll Bar. This includes inapplicable Inapplicable packets include Wi-Fi packets, Sniffer Debug packets, any packets that are not relevant to PER Stats. Inapplicable packets do not appear as part of the Additional Statistics. packets.
- **Selected Duration** identifies the total amount of time in the selected packet range displayed in the Scroll Bar.
- **Duration Per Bar in Scrollbar:** identifies the amount of time represented by each bar in the Scroll Bar.
- The **Channel Graph Y-Axis Max** can display two different values. When the **Snap Arrow** is orange , the values for channels in the main chart are shown in relative terms in **Snap Mode**. This means that one channel (or channels) with the greatest value is "snapped" to the top of the chart. In the graphic below left, Channel 33 is snapped to the top of the chart.
  The channel(s) with the greatest value become a full-scale reference display for the other channels that have been relatively scaled. Channel comparisons become easier. With Snap On you can select multiple time values in the Scroll Bar. When the **Snap Arrow** is white (Snap Mode turned off), the values for channels in the main chart are shown in absolute values where the max value of each channel graph is the same regardless of the position of the Viewport. Channel 33, which is snapped to the top of the chart in Snap Mode (shown above left), appears like the right image when Snap Mode is turned off.

- **Scrollbar Y-Axis Max** displays the maximum Y-Axis value in the Scroll Bar.

4.5.5 Packet Error Rate - Sync Selected Packets With Other Windows

By default, and unlike other windows, PER Stats is not synchronized with other windows such as Frame Display in that selecting a frame range in one does not highlight the same frame range in the other. This ensures that Frame Display isn't constantly re-synchronizing during live capture while the view-port is maximized in PER Stats. If PER Stats synchronization is desired, it can be enabled by checking the **Sync Selected Packets with Other Windows** check box.

4.5.6 Packet Error Rate - Export

The Export section of PER Stats allows you to export data to a .csv or .txt file.

1. To use the Export, select a range of data using the Viewport.
2. Select .csv or .txt from **Export Selected Data**, depending on what type of data file you want. The **Save As** dialog appears.

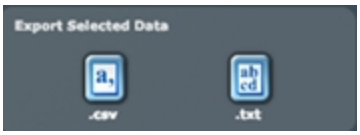

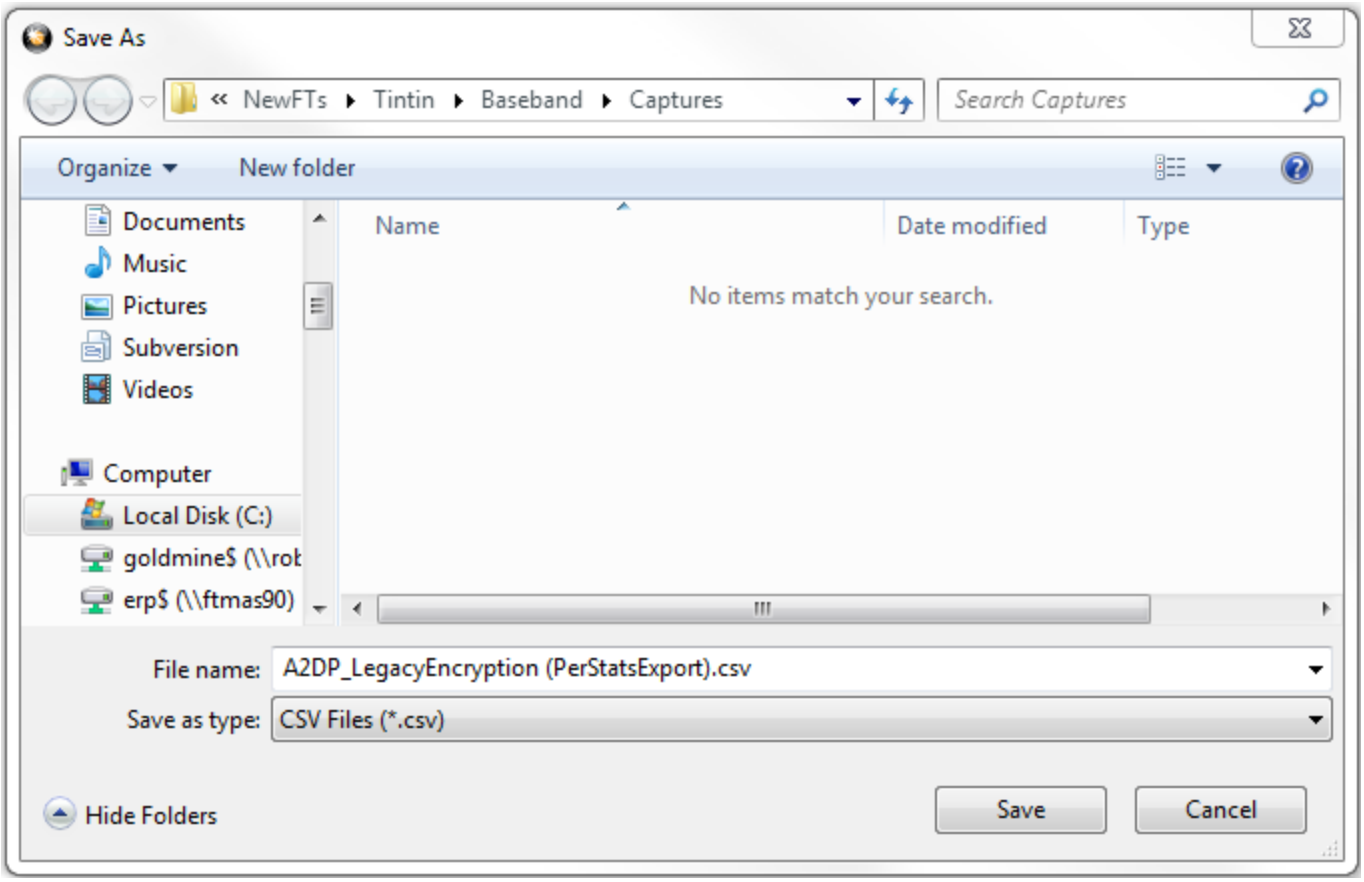

Figure 4.53 - Save As dialog in PER Stats Export

3. Select a location where you want to save the file in "Save in:".
4. Enter a file name in "File name:".
5. Select "Save".

The file will be saved to that location.

4.5.7 Packet Error Rate - Scroll Bar

The PER Stats **Scroll Bar** displays stats for all packets, divided into equal time intervals.



Figure 4.54 - PER Stats Scroll Bar

- Captured data begins to appear on the left and fills the width of the bar, left to right.
- The vertical bars in the **Scroll Bar** each indicate a fixed duration. When data first appears in the **Scroll Bar** as it is being captured, each bar equals one second. When the data fills the bar, reaching the right side limit, the last bar moves back to the center of the **Scroll Bar**. The bars stay the same size, but doubles in duration (for example, the first time the **Scroll Bar** fills, the bars return to the middle, but now each bar represent two seconds of time instead of one). Each time the bars cycle to the middle, the time they represent doubles. When the bars move and the **Viewport** (see below) is not maximized, the **Viewport** moves with the bars so that the same packet range is indicated. When the **Viewport** is maximized it stays maximized regardless of what the bars do. This ensures that the display can be made to reflect all packets at all times by maximizing the .
- The **Viewport** is used to select single or multiple vertical bars 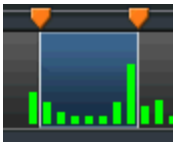 .
- You can drag the sides of the **Viewport** or the slider buttons to select multiple bars, representing a greater time range.
- You can click and drag the **Viewport** within the **Scroll Bar**.
- When you select a packet range in **Frame Display** that includes only some of the frames in PER Stats, the **Viewport** snaps up against the side of the bar with the unselected frames .
- When you select a packet range in Frame Display that includes all of the frames in PER Stats, the Viewport displays a space between the Viewport sides and the bar .
- Double clicking anywhere inside the **Scroll Bar** selects the entire **Scroll Bar**. Double clicking again toggles back to the previous size of the **Viewport**.
- Selecting Ctrl+A is the same as double-clicking.
- Clicking on a vertical bar left justifies the **Viewport** to that bar.
- Shift-clicking on a bar extends the nearest **Viewport** side to include that bar.
- The Home key moves the **Viewport** to the left edge.
- The End key moves the **Viewport** to the right edge.
- Pressing the left arrow button , the left arrow key, or the up arrow key moves the **Viewport** to the left, one vertical bar at a time.
- Pressing the right arrow button . the right arrow key, or the down arrow key moves the **Viewport** to the right, one vertical bar at a time.

- Pressing the double left arrow button or the PgUp key moves the **Viewport** to the left by the current width of the **Viewport**. Holding down the Shift key will prevent the **Viewport** from moving if there is not enough room to move by its full width.
- Pressing the double right arrow button or the PgDn key moves the **Viewport** to the right by the current width of the **Viewport**. Holding down the Shift key will prevent the **Viewport** from moving if there is not enough room to move by its full width.
- Holding the Shift key down and the right or left arrows moves the right side of the **Viewport**.
- Holding the Ctrl key down and the right or left arrows moves the left side of the **Viewport**.
- The Scroll bar includes inapplicable packets (sniffer debug, WiFi, etc) so that the packet range selected in Frame Display can be shown. Inapplicable packets are not, however, included in the statistics reports.
- If the **Viewport** is adjusted within PER Stats, as opposed to selecting a packet range in Frame Display, it uses only whole bars on both sides.
- Statistics are retained for all packets regardless of whether any of those packets have wrapped out. You can select the **Reset** button 

, which is located above the right portion of the **Scroll Bar**, to discard all stats for packets received up to that point.
- The **Reset** button is only available when you are capturing data.

4.5.8 Packet Error Rate - Excluded Packets

ID packets and packets that are missing channel numbers (such as HCI and BTSnoop) will not display data. ID packets are excluded because they can not have errors or indicate retransmission and therefore dilute the percentages for other packet types. Packets without channel numbers are excluded because the graphs are channel-specific. Before packets are captured, the Scroll Bar in Classic *Bluetooth* PER Stats contains the message "ID packets and packets without a channel number (such as HCI) are excluded", and the Scroll Bar in *Bluetooth* low energy PER Stats contains the message "Packets without a channel number (such as HCI) are excluded".

Figure 4.55 - Example: Excluded Packets Message in Scroll Bar (Classic *Bluetooth*)

4.6 Data/Audio Extraction

You use Data/Audio Extraction to pull out data from various decoded Bluetooth® protocols. Once you have extracted the data, you can save them into different file types, such as text files, graphic files, email files, .mp3 files, and more. Then you can examine the specific files information individually.

1. You access this dialog by selecting Extract Data/Audio from the View menu or by clicking on the icon from the toolbar .

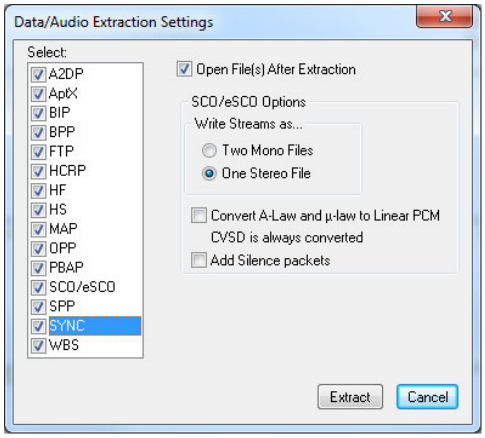

Figure 4.12 Data/Audio Extraction Settings dialog

2. Choose a checkbox(es) on the left side of the dialog to identify from which profile(s) you want to extract data.

   It's important to note that if there is no data for the profile(s) you select, no extracted file is created.

3. If you want the file(s) to open automatically after they are extracted, select the **Open File(s) After Extraction** checkbox.

   Note: This does not work for SCO/eSCO.

4. Click on a radio button to write the streams as **Two Mono Files** or as **One Stereo File**.

   Note: This option is for SCO/eSCO only.

5. Select the checkbox if you want to convert **A-Law and μ-law to Linear PCM.**
   CVSD are always converted to Linear PCM. It's probably a good idea to convert to Linear PCM since more media players accept this format.

   Note: This option is for SCO/eSCO only.

6. Select the **Add Silence packets** to insert the silence packets (dummy packets) for the reserved empty slots into the extracted file. If this option is not selected, the audio packets are extracted without inserting the silence packets for the reserved empty slots.

   Note: This option is for SCO/eSCO only.

7. Select **Extract.**

   A **Save As** dialog appears.

   The application will assign a file name and file type for each profile you select in Step 1 above. The file type varies depending on the original profile. A separate file for each profile will be created, but only for those profiles with available data.

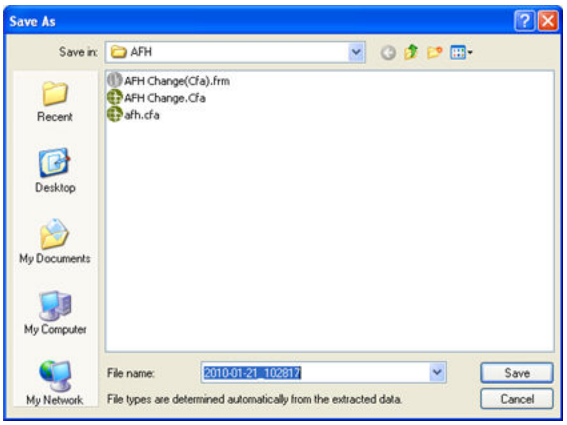

8. Select a location for the file.

9. Click **Save**.

   The **Data Extraction Status** and **Audio Extraction Status** dialogs appear. When the process is complete the dialogs display what files have been created and where they are located.

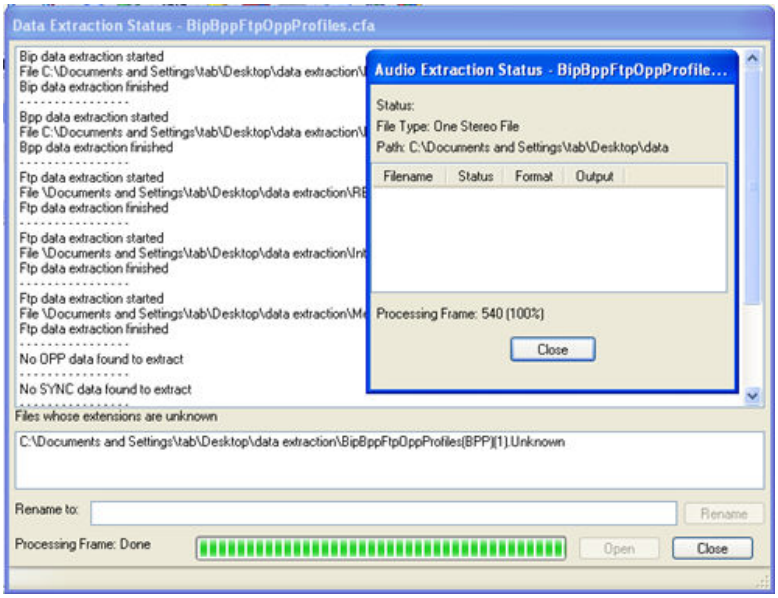

Figure 4.13 Data and Audio Extraction Status

   If you selected **Open Files(s) After Extraction**, the files open automatically.

10. If you did not select this option, you can open a file by simply double-clicking on the name.

Also, if a file type is unknown, you can select the file and it appears in the **Rename to**: text box.

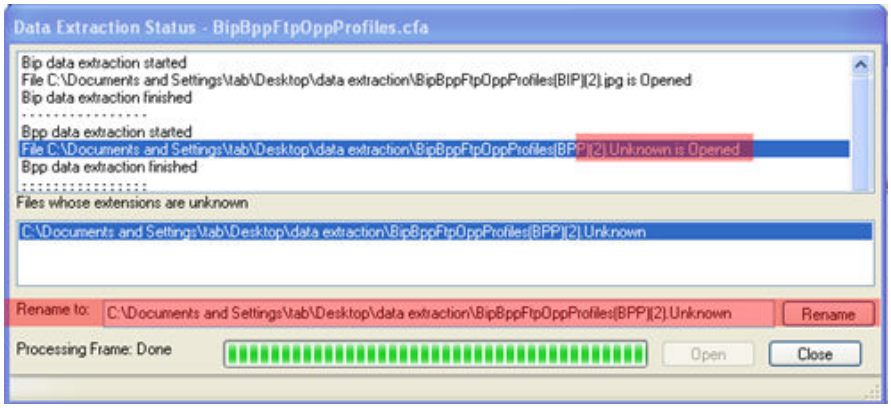

Figure 4.14 Rename To in the bottom section of Data Extraction Status

Then you can rename the file, adding a file type to attempt to open the file.

When you are finished, select **Close** to close the dialogs.

Chapter 5 Navigating and Searching the Data

The following sections describe how to navigate through the data and how to find specific data or packet conditions of interest to the user.

5.1 Find

Capturing and decoding data within the ComProbe analyzer produces a wealth of information for analysis. This mass of information by itself, however, is just that, a mass of information. There has to be ways to manage the information. ComProbe software provides a number of different methods for making the data more accessible. One of these methods is **Find**.

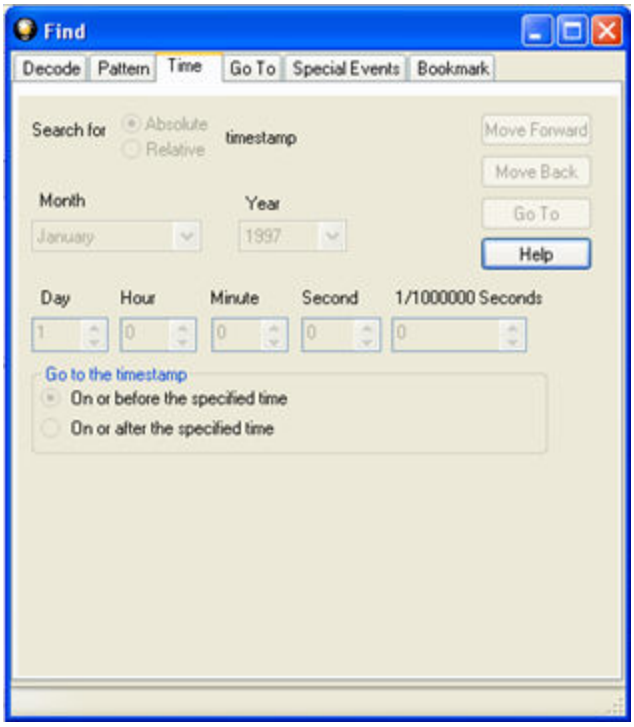

Figure 5.1 - Find Dialog

Find, as the name suggests, is a comprehensive search function that allows users to search for strings or patterns in the data or in the frame decode. You can search for errors, control signal changes, bookmarks, special events, time, and more. Once the information is located, you can easily move to every instance of the Find results.

5.1.1 Searching within Decodes

Searching within decodes lets you to do a string search on the data in the **Decode Pane** of the **Frame Display** window.

To access the search within decodes function:

1. Open a capture file to search.
2. Open the **Event Display** or **Frame Display** window.
3. Click on the **Find** icon or choose **Find** from the **Edit** menu.
4. Click on the **Decode** tab of the **Find** dialog.

Note: The tabs displayed on the Find dialog depend on the product you are running and the content of the capture file you are viewing.

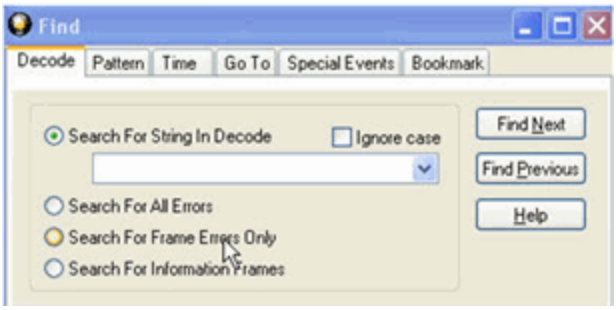

Figure 5.2 - Find Decode Tab Search for String

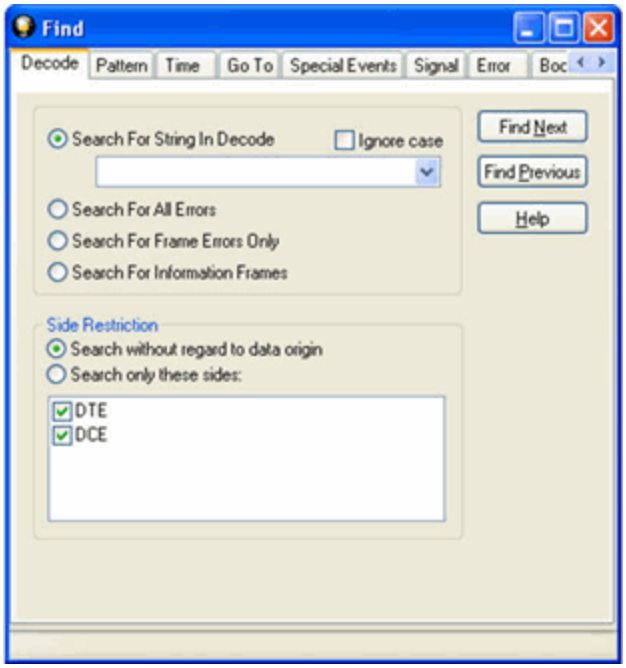

Figure 5.3 - Find Decode Tab Side Restriction

There are several options for error searching on the **Decoder** tab.

- **Search For String in Decoder** allows you to enter a string in the text box. You can use characters, hex or binary digits, wildcards or a combination of any of the formats when entering your string. Every time you type in a search string, the analyzer saves the search. The next time you open **Find**, the drop-down list will contain your search parameters.
- **Search for All Errors** finds frame errors as well as frames with byte-level errors (such as parity or CRC errors).
- **Search for Frame Errors Only** finds frame specific errors, such as frame check errors.
- **Search for Information Frame** only searches information frames.

1. Enter the search string.
2. Check **Ignore Case** to do a case-insensitive search.
3. When you have specified the time interval you want to use, click on the **Find Next** or **Find Previous** buttons to start the search from the current event.

The result of the search is displayed in the **Decode** pane in **Frame Display.**

Side Restrictions - **Side Restriction** means that the analyzer looks for a pattern coming wholly from the DTE or DCE side. If you choose to search without regard for data origin, the analyzer looks for a pattern coming from one or both sides. For example, if you choose to search for the pattern ABC and you choose to search without regard for data origin, the analyzer finds all three instances of ABC shown here.

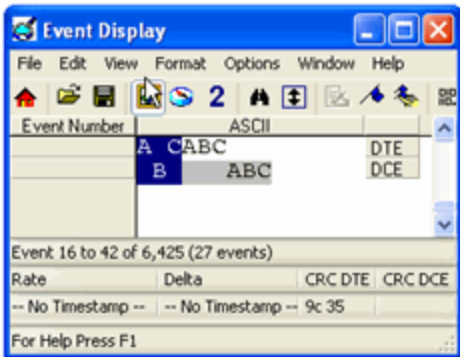

The first pattern, with the A and the C coming from the DTE device and the B coming from the DCE is a good example of how using a side restriction differs from searching without regard to data origin. While searching without regard for data origin finds all three patterns, searching using a side restriction never finds the first pattern, because it does not come wholly from one side or the other.

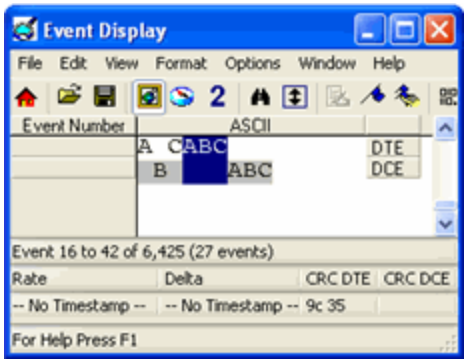

If you choose to search for the pattern ABC, and you restrict the search to just the DTE side, the analyzer finds the following pattern:

In this example, the analyzer finds only the second pattern (highlighted above) because we restricted the search to just the DTE side. The first pattern doesn't qualify because it is split between the DTE and DCE sides, and the third pattern, though whole, comes from just the DCE side.

If we choose both the DTE and the DCE sides in the above example, then the analyzer finds the second pattern followed by the third pattern, but not the first pattern. This is because each side has one instance in which the whole pattern can be found. The analyzer completely searches the DTE side first, followed by the DCE side.

Note: Side Restriction is available for pattern and error searching.

1. Select one of the two options.
2. Select **DTE**, **DCE**, or both.
3. When you made your selections, click on the **Find Next** or **Find Previous** buttons to start the search from the current event.

The result of the search is displayed in the **Decode** pane in **Frame Display.**

5.1.2 Searching by Pattern

Search by Pattern lets you perform a traditional string search. You can combine any of the formats when entering your string, and your search can include wildcards.

To access the search by pattern function:

1. Open a capture file to search.
2. Open the **Event Display** or **Frame Display** window.

3. Click on the **Find** icon or choose **Find** from the **Edit** menu.

4. Click on the **Pattern** tab of the **Find** dialog.

Note: The tabs displayed on the Find dialog depend on the product you are running and the content of the capture file you are viewing.

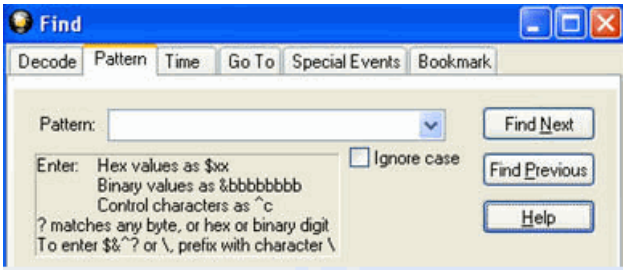

Figure 5.4 - Find Pattern Tab

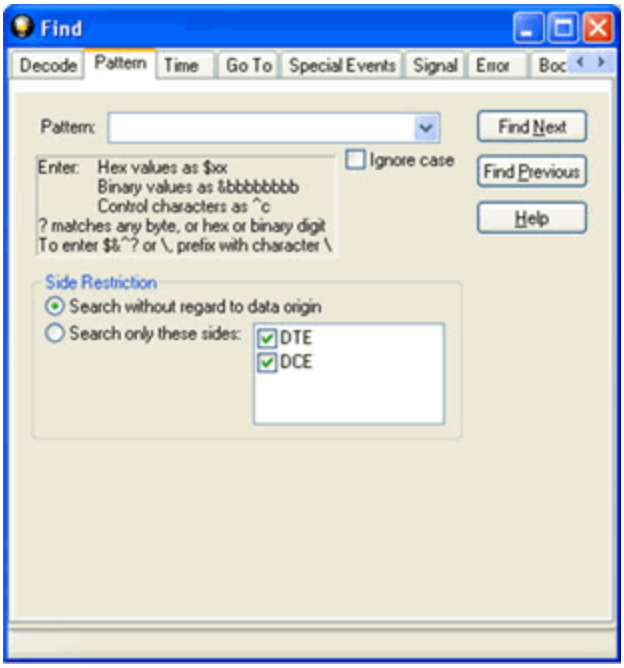

Figure 5.5 - Find Pattern Tab Side Restrictions

Pattern allows you to enter a string in the text box. You can use characters, hex or binary digits, control characters, wildcards or a combination of any of the formats when entering your string. Every time you type in a search string, the ComProbe analyzer saves the search. The next time you open **Find**, the drop-down list will contain your search parameters.

1. Enter the search pattern.

2. Check **Ignore Case** to do a case-insensitive search.

3. When you have specified the pattern you want to use, click on the **Find Next** or **Find Previous** buttons to start the search from the current event.

The result of the search is displayed in the in Frame Display and Event Display.

Refer to Searching by Decode on page 132 for information on **Side Restrictions**

5.1.3 Searching by Time

Searching with **Time** allows you search on timestamps on the data in **Frame Display** and **Event Display** window.

To access the search by time function:

1. Open a capture file to search.
2. Open the **Event Display** or **Frame Display** window.
3. Click on the **Find** icon or choose **Find** from the **Edit** menu.
4. Click on the **Time** tab of the **Find** dialog.

Note: The tabs displayed on the Find dialog depend on the product you are running and the content of the capture file you are viewing.

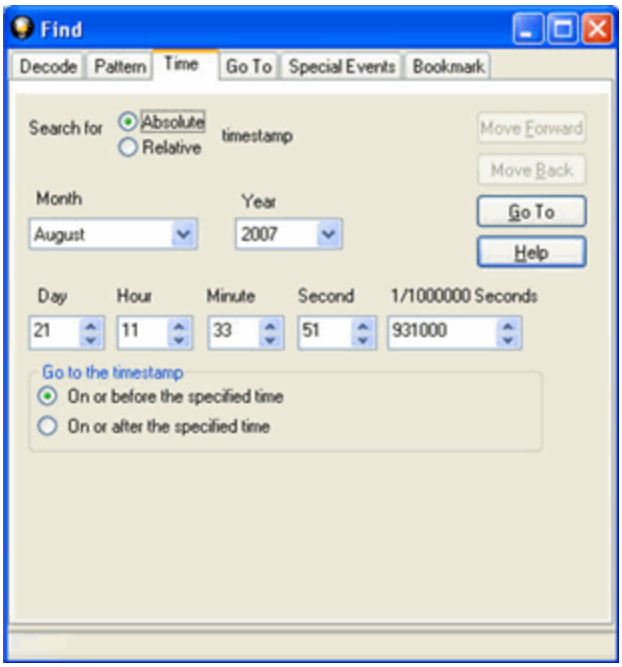

Figure 5.6 - Find by Time tab

The analyzer can search by time in several different ways.

Search for Absolute/Relative timestamp.

- Absolute - An absolute timestamp search means that the analyzer searches for an event at the exact date and time specified. If no event is found at that time, the analyzer goes to the nearest event either before or after the selected time, based on the "Go to the timestamp" selection.
- Relative - A relative search means that the analyzer begins searching from whatever event you are currently on, and search for the next event a specific amount of time away.

1. Select **Absolute** or **Relative**
2. Select the date and time using the drop-down lists for **Month**, **Year**, **Day**, **Hour**, **Minute**, **Second**, 1/**10000000**.

Note: Month and Year are not available if you select Relative.

3. When you have specified the time interval you want to use, click on the **Go To**, **Move Forward** or **Move Backward** buttons to start the search from the current event.

Note: When you select **Absolute** as **Search for**, **Go To** is available. When you select **Relative** as **Search for**, **Move Forward** or **Move Backward**is available.

Go to the timestamp: On or before/ On or after

The analyzer searches for an event that matches the time specified. If no event is found at the time specified, the analyzer goes to the nearest event either before or after the specified time. Choose whether to have the analyzer go to the nearest event before the specified time or after the specified time by clicking the appropriate radio button in the **Go to the timestamp** box.

If you are searching forward in the buffer, you usually want to choose the **On or After** option. If you choose the **On or Before** option, it may be that the analyzer finishes the search and not move from the current byte, if that byte happens to be the closest match.

When you select **Absolute** as **Search for**, the radio buttons are **On or before the specified time** or **On or after the specified time**. When you select **Relative** as **Search for**, the radio buttons are **On or before the specified time relative to the first selected item** or **On or after the specified time relative to the last selected item.**

1. Select **On or before the specified time** or **On or after the specified time**.
2. When you have specified the time interval you want to use, click on the **Go To**, **Move Forward** or **Move Backward** buttons to start the search from the current event.

   When you select **Absolute** as **Search for**, **Go To** is available. When you select **Relative** as **Search for**, **Move Forward** or **Move Backward**is available.

There are a couple of other concepts to understand in respect to searching with timestamps.

- The analyzer skips some special events that do not have timestamps, such as frame markers. Data events that do not have timestamps because timestamping was turned off either before or during capture are also skipped.

- Timestamping can be turned on and off while data is being captured. As a result, the capture buffer may have some data with a timestamp, and some data without. When doing a search by timestamp, the analyzer ignores all data without a timestamp.
- The raw timestamp value is the number of 100-nanosecond intervals since the beginning of January 1, 1601. This is standard Windows time.

5.1.4 Using Go To

Searching with Go To allows you to go to a particular frame or event, or to move through the data X number of events or frames at a time. You can move either forward or backwards through the data.

To access the Go To function:

1. Open a capture file to search.
2. Open the **Event Display** or **Frame Display** window.
3. Click on the **Find** icon or choose **Find** from the **Edit** menu.
4. Click on the **Go To** tab of the **Find** dialog.
5. The system displays the **Find** dialog with the **Go To** tab selected.

Note: The tabs displayed on the Find dialog depend on the product you are running and the content of the capture file you are viewing.

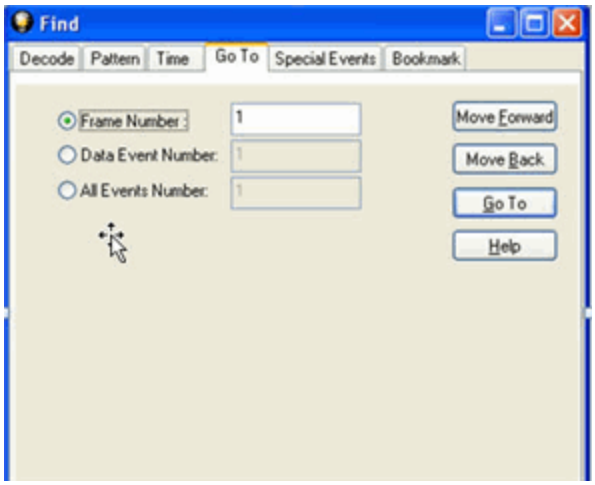

Figure 5.7 - Find Go To tab

To go to a particular frame :

1. Select the **Frame Number** radio button
2. Type the frame number in the box.
3. Click the **Go To** button.

4. To move forward or backward a set number of frames, type in the number of frames you want to move
5. Then click the **Move Forward** or **Move Back** button.

To go to a particular event :

1. Select the **Data Event Number** or **All Events Number** radio button.
2. Type the number of the event in the box.
3. Click the **Go To** button.
4. To move forward or backwards through the data, type in the number of events that you want to move each time.
5. Then click on the **Move Forward** or **Move Backward** button.
6. For example, to move forward 10 events, type the number 10 in the box, and then click on **Move Forward**. Each time you click on **Move Forward,** Frontline moves forward 10 events.

See Event Numbering for why the **Data Event Number** and **All Events Number** may be different. As a general rule, if you have the **Show All Events** icon depressed on the **Event Display** window or **Frame Display Event** pane, choose **All Events Number**. If the **Show All Events** button is up, choose **Data Event Number**.

5.1.5 Searching for Special Events

Frontline inserts or marks events other than data bytes in the data stream. For example, the analyzer inserts start-of-frame and end-of-frame markers into framed data, marking where each frame begins and ends. If a hardware error occurs, the analyzer shows this using a special event marker. You can use Find to locate single or multiple special events.

To access the search for special events function:

1. Open a capture file to search.
2. Open the Event Display or Frame Display window.
3. Click on the **Find** icon or choose **Find** from the **Edit** menu.
4. Click on the **Special Events** tab of the Find dialog.

Note: The tabs displayed on the Find dialog depend on the product you are running and the content of the capture file you are viewing.

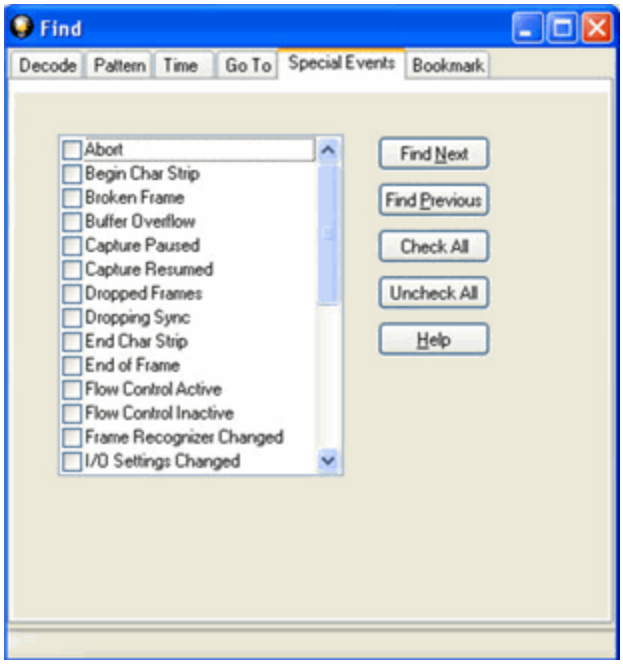

Figure 5.8 - Find Special Events tab

5. Check the event or events you want to look for in the list of special events. Use **Check All** or **Uncheck All** buttons to make your selections more efficient.
6. Click Find Next and Find Previous to move to the next instance of the event.

Not all special events are relevant to all types of data. For example, control signal changes are relevant only to serial data and not to Ethernet data.

For a list of all special events and their meanings, see List of all Event Symbols on page 57.

5.1.6 Searching by Signal

Searching with Signal allows you to search for changes in control signal states for one or more control signals. You can also search for a specific state involving one or more control signals, with the option to ignore those control signals whose states you don't care about.

The analyzer takes the current selected byte as its initial condition when running searches that rely on finding events where control signals changed.

To access the search by time function:

1. Open a capture file to search.
2. Open the **Event Display** or **Frame Display** window.
3. Click on the **Find** icon or choose **Find** from the **Edit** menu.
4. Click on the **Signal** tab of the **Find** dialog.

Note: The tabs displayed on the Find dialog depend on the product you are running and the content of the capture file you are viewing.

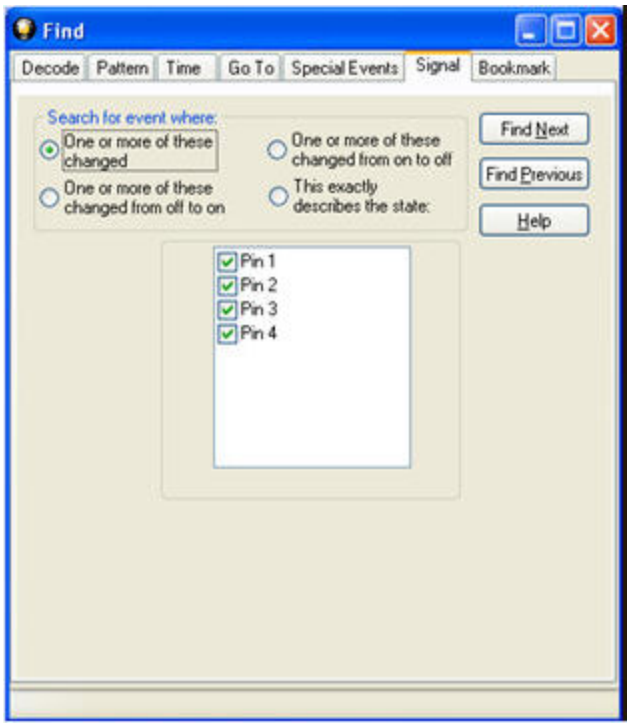

Figure 5.9 - Find Signal tab.

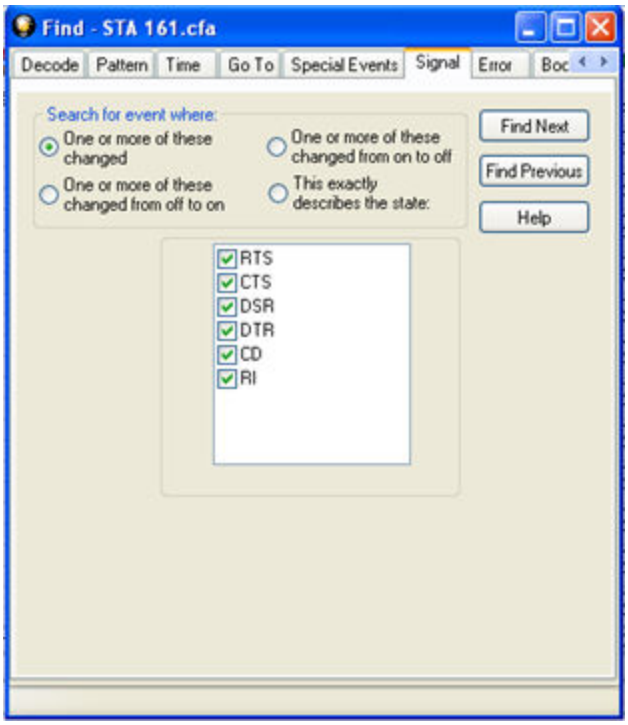

Figure 5.10 - Find Signal Tab

You will choose one qualifier—**Searching for event where**, then choose one or more control signals

Control Signals

The section with the check boxes allows you to specify which control signals the analyzer should pay attention to when doing the search. The analyzer pays attention to any control signal with a check mark.

- Click on a box to place a check mark next to a control signal
- Click again to uncheck the box
- By default, the analyzer searches all control signals, which means all boxes start out checked.

For example, if you are only interested in finding changes in **RTS** and **CTS**, you would check those two boxes and uncheck all the other boxes. This tells the analyzer to look only at the **RTS** and **CTS** lines when running the search. The other signals are ignored.

The control signals types include:

- USB - Pin 1
- USB - Pin 2
- USB - Pin 3
- USB - Pin 4

or

- RS232 - Request to Send (RTS)
- RS232 - Clear to Send (CTS)
- RS232 - Data Set Ready (DSR)
- RS232 - Data Terminal Ready (DTR)
- RS232 - Carrier Detect (CD)
- RS232 - Ring Indicator (RI).

Click here to learn more about the Breakout Box and Pins 1 - 4.

Searching for event where:

- The first three options are all fairly similar, and are described together. These options are searching for an event where:
    - One or more control signals changed
    - One or more control signals changed from off to on
    - One or more control signals changed from on to off
- Searching for an event where one or more signals changed means that the analyzer looks at every control signal that you checked, and see if any one of those signals changed state at any time.

- If you want to look at just one control signal:
  - Check the box for the signal.
  - Uncheck all the other boxes.
  - Choose to search for an event where one or more signals changed.
  - The analyzer notes the state of the selected signal at the point in the buffer where the cursor is, search the buffer, and stop when it finds an event where RTS changed state.
  - If the end of the buffer is reached before an event is found, the analyzer tells you that no matches were found.

- Searching for events where control signals changed state from off to on, or vice versa, is most useful if the signals are usually in one state, and you want to search for occasions where they changed state.

  For example:

  - If DTR is supposed to be on all the time but you suspect that DTR is being dropped
  - Tell the analyzer to look only at DTR by checking the DTR box and unchecking the others
  - Do a search for where one or more control signals changed from on to off.
  - The analyzer would search the DTR signal and stop at the first event where DTR dropped from on to off.

- Searching for an Exact State

  To search for an exact state means that the analyzer finds events that match exactly the state of the control signals that you specify.

  - First, choose to search for an event where your choices exactly describe the state.
  - This changes the normal check boxes to a series of radio buttons labeled On, Off and Don't Care for each control signal.
  - Choose which state you want each control signal to be in.
  - Choose Don't Care to have the analyzer ignore the state of a control signal.
  - When you click Find Next, the analyzer searches for an event that exactly matches the conditions selected, beginning from the currently selected event.
  - If the end of the buffer is reached before a match is found, the analyzer asks you if you want to continue searching from the beginning.
  - If you want to be sure to search the entire buffer, place your cursor on the first event in the buffer.
  - Select one of the four radio buttons to choose the condition that must be met in the search
  - Select one or more of the checkboxes for Pin 1, 2, 3, or 4.
  - Or, **Select one or more of the** checkboxes for Request to Send (**RTS**), Clear to Send (**CTS**), Data Set Ready (**DSR**), Data Terminal Ready (**DTR**), Carrier Detect (**CD**), and Ring Indicator (**RI**).
  - Click **Find Next** to locate the next occurrence of the search criteria or **Find Previous** to locate an earlier occurrence of the search criteria.

5.1.7 Searching for Data Errors

The analyzer can search for several types of data errors. Searching for data error sallows you to choose which errors you want to search for and whether to search the DTE or DCE data or both. Bytes with errors are shown in red in the **Event Display** window, making it easy to find errors visually when looking through the data.

To access the search by time function:

1. Open a capture file to search.
2. Open the **Event Display** or **Frame Display** window.
3. Click on the **Find** icon or choose **Find** from the **Edit** menu.
4. Click on the **Errors** tab of the **Find** dialog.

Note: The tabs displayed on the Find dialog depend on the product you are running and the content of the capture file you are viewing.

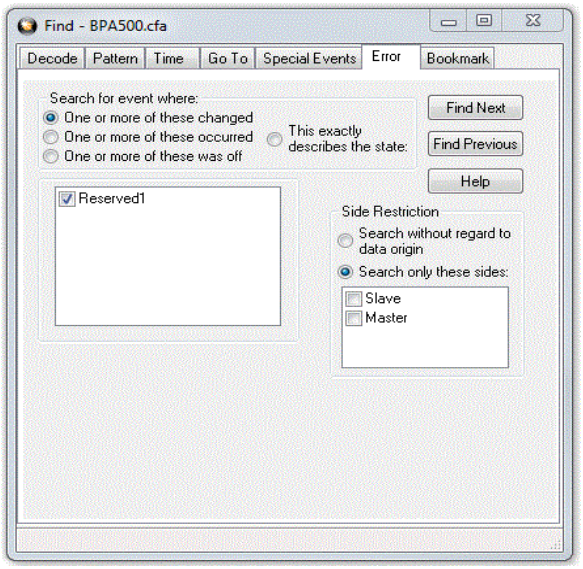

Figure 5.11 - Find Error tab.

Searching for event where

The first three options are all fairly similar, and are described together. These options are searching for an event where:

- one or more error conditions changed
- one or more error conditions occurred
- one or more error conditions were off (i.e. no errors occurred)

Selecting Which Errors to Search

The section with the check boxes allows you to choose which errors the analyzer should look for. Click on a box to check or un-check it.

If you want to search only for overrun errors

- check the box if shown
- un-check the other boxes.

To search for all types of errors

- check all boxes

The most common search is looking for a few scattered errors in otherwise clean data.

To do this type of search:

- choose to **Search for an event where** one or more error conditions occurred
- choose which errors to look for
- By default, the analyzer looks for all types of errors.

In contrast, searching for an event where one or more error conditions were off means that the analyzer looks for an event where the errors were not present.

For example, if you have data that is full of framing errors, and you know that somewhere in your 20 megabyte capture file the framing got straightened out, you could choose to search for an event where one or more error conditions were off, and choose to search only for framing. The analyzer searches the file, and finds the point at which framing errors stopped occurring.

Searching for an event where the error conditions changed means that the analyzer searches the data and stop at every point where the error condition changed from on to off, or off to on.

For example, if you have data where sometimes the framing is wrong and sometimes right, you would choose to search framing errors where the error condition changed. This first takes you to the point where the framing errors stopped occurring. When you click **Find Next,** the analyzer stops at the point when the errors began occurring again. Clicking **Find Previous** will search backwards from the current postion.

The analyzer takes the current selected byte as its initial condition when running searches that rely on finding events where error conditions changed. The analyzer searches until it finds an event where error conditions changed or it reaches the end of the buffer, at which point the analyzer tells you that there are no more events found in the buffer. If you are searching for an exact match, the analyzer asks you if you want to continue searching from the beginning of the buffer.

Searching for Exact Error Conditions

To search for an exact state means that the analyzer finds events that exactly match the error conditions that you specify.

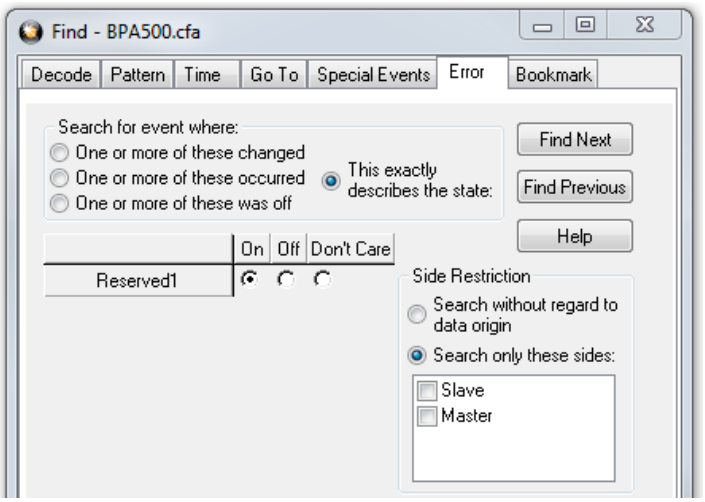

- Select the **This exactly describes the state** radio button.
- This changes the normal check boxes to a series of radio buttons labeled **On**, **Off** and **Don't Care** for each error.
  - **On** means that the error occurred
  - **Off** means that the error did not occur
  - **Don't Care** means that the analyzer ignores that error condition.
- Select the appropriate state for each type of error.

Example:

If you need to find an event where just an overrun error occurred, but not any other type of error, you would choose overrun error to be On, and set all other errors to Off. This causes the analyzer to look for an event where only an overrun error occurred.

If you want to look for events where overrun errors occurred, and other errors may have also occurred but it really doesn't matter if they did or not, choose overrun to be On, and set the others to Don't Care. The analyzer ignores any other type of error, and find events where overrun errors occurred.

To find the next error, click the Find Next button. To find an error that occurred earlier in the buffer to where you are, click the Find Previous button.

5.1.8 Find - Bookmarks

Searching with **Bookmarks** allows you search on specific bookmarks on the data in **Frame Display** and **Event Display** window. Bookmarks are notes/reminders of interest that you attach to the data so they can be accessed later.

To access the search for bookmarks

1. Open a capture file to search.
2. Open the **Event Display** or **Frame Display** window.
3. Click on the **Find** icon or choose **Find** from the **Edit** menu.
4. Click on the **Bookmarks** tab of the **Find** dialog.

Note: The tabs displayed on the Find dialog depend on the product you are running and the content of the capture file you are viewing.

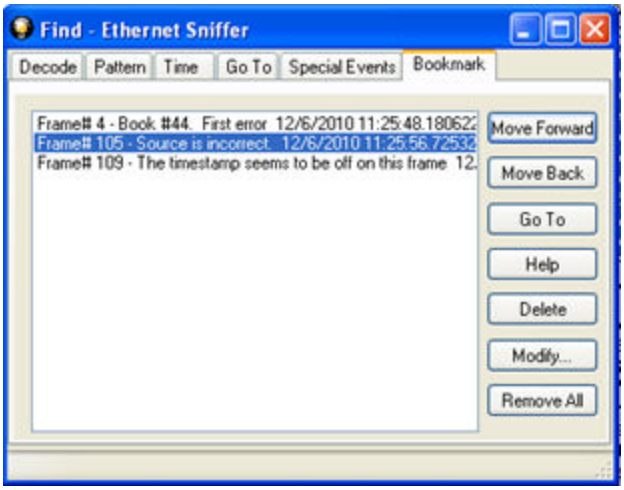

Figure 5.12 - Find Bookmark tab.

There are several ways to locate bookmarks.

- Select the bookmark you want to move to and click the **Go To** button.
- Simply double-click on the bookmark.
- Click the **Move Forward** and **Move Back** buttons to move through the frames to the bookmarks shown in the window. When the bookmark is found it is highlighted in the window.

There are three ways to modify bookmarks:

1. Click on **Delete** to remove the selected bookmark.
2. Click on **Modify...** to change the selected Bookmark name.
3. **Remove All** will delete all bookmarks in the window.

The **Find** window **Bookmark** tab will also appear when using functions other than **Find** such as when clicking on the Display All Bookmarks icon.

5.1.9 Changing Where the Search Lands

When doing a search in the analyzer, the byte or bytes matching the search criteria are highlighted in the **Event Display**. The first selected byte appears on the third line of the display.

```
[CVEventDisplay]
SelectionOffset=2
```

To change the line on which the first selected byte appears:

1. Open fts.ini (located in the C:\User\Public\Public Documents\Frontline Test Equipment\)
2. Go to the [CVEventDisplay] section
3. Change the value for SelectionOffset.
4. If you want the selection to land on the top line of the display, change the SelectionOffset to 0 (zero).

5.1.10 Subtleties of Timestamp Searching

Timestamping can be turned on and off while data is being captured. As a result, the capture buffer may have some data with a timestamp, and some data without. When doing a search by timestamp, the analyzer ignores all data without a timestamp.

Note: The raw timestamp value is the number of 100-nanosecond intervals since the beginning of January 1, 1601. This is standard Windows time.

5.2 Bookmarks

Bookmarks are electronic sticky notes that you attach to frames of interest so they can be easily found later. In **Frame Display** bookmarked frames appear with a magenta triangle icon next to them.

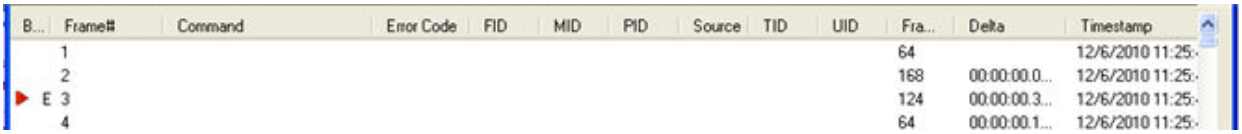

Figure 5.13 - Bookmarked Frame (3) in the Frame Display



In the **Event Display** bookmarks appear as a dashed line around the start of frame marker.

Bookmarks are easy to create and maintain, and are a very valuable tool for data analysis. When you create or modify a bookmark, you have up to 84 characters to explain a problem, leave yourself a reminder, leave someone else a reminder, etc. Once you create a bookmark it will be saved with the rest of the data in the .cfa file. When you open a .cfa file, the bookmarks are available to you.

Once you have created a bookmark, you can use the Find function or other navigation methods to locate and move among them.

5.2.1 Adding, Modifying or Deleting a Bookmark

You can add, modify, or delete a bookmarks from **Frame Display** and **Event Display**

Add:

1. Select the frame or event you want to bookmark.
2. There are three ways to access the **Add Bookmark** dialog.
    a. Select **Add or Modify Bookmark** from the **Bookmarks** menu on the **Frame Display** and **Event Display**,
    b. Select the **Add or Modify Bookmark** icon on one of the toolbars, or
    c. Right-click on the frame/event and choosing **Add Bookmark...**.
3. In the dialog box, add a comment (up to 84 characters) in the text box to identify the bookmark.
4. Click **OK**.

Once you create a bookmark it will be saved with the rest of the data in the .cfa file. When you open a .cfa file, the bookmarks are available to you.

Modify

1. Select the frame or event with the bookmark to be edited.
2. There are three ways to access the **Add/Modfy Bookmark** dialog.
    a. Select **Add or Modify Bookmark** from the **Bookmarks** menu on the **Frame Display** and **Event Display**'
    b. Select the **Add or Modify Bookmark** icon on one of the toolbars, or
    c. Right-click on the frame/event and choosing **Modify Bookmark...** on the selection.
3. Change the comment in the dialog box
4. Click **OK**. The edited bookmark will be saved as a part of the .cfa file.
5. You can also select **Display All Bookmarks** from the **Frame Display** and **Event Display** toolbar or the **Bookmarks** menu. the **Find** window will open on the **Bookmark** tab. Select the bookmark you want to modify and click the **Modify...** button. Change the comment in the dialog box, and click **OK**.

Delete

1. Select the frame or event with the bookmark to be deleted.
2. There are three ways to access the **Add/Modfy Bookmark** dialog.
    a. Select **Add or Modify Bookmark** from the **Bookmarks** menu on the **Frame Display** and **Event Display**,
    b. Select the **Add or Modify Bookmark** icon on one of the toolbars, or
    c. Right-click on the frame/event and choosing **Modify Bookmark...** on the selection.
3. Click on the **Delete** button. The bookmark will be deleted.
4. You can also select **Display All Bookmarks** from the **Frame Display** and **Event Display** toolbar or the **Bookmarks** menu. the **Find** window will open on the **Bookmark** tab. Select the bookmark you want to delete and click the **Delete** button.

5.2.2 Displaying All and Moving Between Bookmarks

There are three ways to move between bookmarks.

1. Press the F2 key to move to the next frame or event with a bookmark.
2. Select Go to Next Bookmark from the Bookmarks menu.
3. Click the Display All Bookmarks icon . Select the bookmark you want to move to and click the Go To button, or simply double-click on the bookmark. Click the Move Forward and Move Back buttons to cycle through the bookmarks.

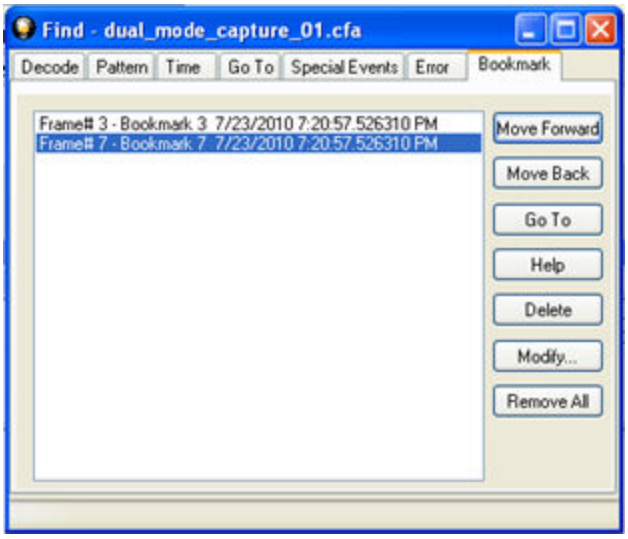

Figure 5.14 - Find Window Bookmark tab Used to Move Around With Bookmarks

To delete a bookmark, select it and click the **Delete** button.

To modify a bookmark, select it and click the **Modify** button.

Click **Remove All** to delete all the bookmarks.

Chapter 6 Saving and Importing Data

6.1 Saving Your Data

You can save all or part of the data that you have captured. You can also load a previously saved capture file, and save a portion of that file to another file. This feature is useful if someone else needs to see only a portion of the data in your capture file.

On the **Control** window toolbar you can set up to capture a single file. Click here to see those settings.

There are two ways to save portions or all of the data collected during a data capture. Click here to see how to capture data to disk.

6.1.1 Saving the Entire Capture File

This option is only available when you select **Single File** from the **Capture Mode** on **System Settings.** Click here to learn more about selecting Save options from System Settings.

1. If you are capturing data, click on the **Stop Capture** icon to stop data capture. You cannot save data to file while it is being captured.
2. Open the **Event Display** or **Frame Display** window.
3. Click the **Save** icon, or select **Save** from the **File** menu.

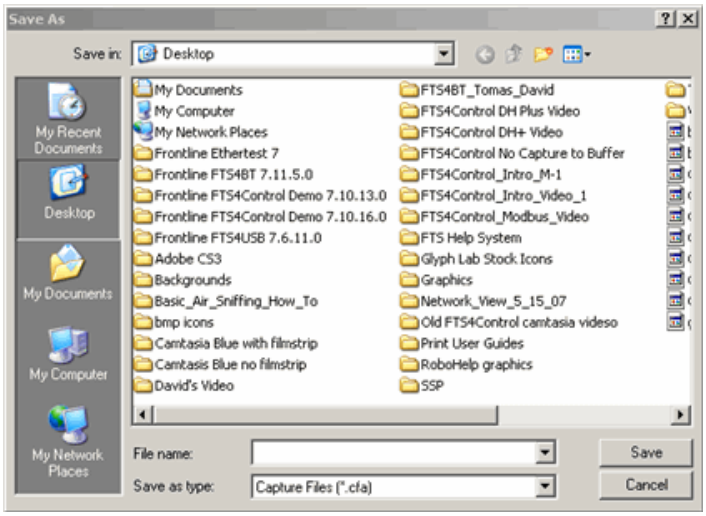

Figure 6.1 - Windows Save dialog

4. Type a file name in the **File name** box at the bottom of the screen.
5. Browse to select a specific directory. Otherwise your file is saved in the default capture file directory.
6. When you are finished, click **OK**.

6.1.2 Saving the Entire Capture File with Save Selection

1. If you are capturing data, click on the **Stop** icon to stop data capture. You cannot save data to file while it is being captured.
2. Open the **Event Display** or **Frame Display** window.
3. Right click in the data
4. Select **Save Selection** or **Save As** from the right click menu.
5. Click on the radio button labeled **Entire File**.
6. Choose to save **Events** or **Frames** . Choosing to save **Events** saves the entire contents of the capture file. Choosing to save **Frames** does not save all events in the capture file.
7. Type a file name in the **As** box at the bottom of the screen. Click the **Browse** icon to browse to a specific directory. Otherwise your file is saved in the default capture file directory.
8. When you are finished, click **OK**.

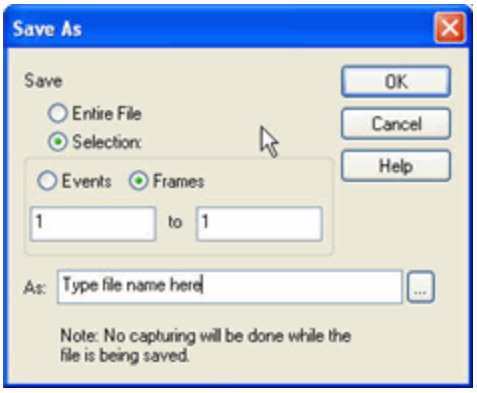

6.1.3 Saving a Portion of a Capture File

1. If you are capturing data, click on the **Stop** icon to pause data capture. You cannot save data to a file while it is being captured.
2. Open the **Event Display** or **Frame Display** window, depending on whether you want to specify a range in bytes or in frames.
3. Select the portion of the data that you want to save. Click and drag to select data, or click on the first item, move to the last item and Shift+Click to select the entire range, or use the Shift key with the keyboard arrows or the navigation icons in the **Frame Display** toolbar. If the range you want to save is too large to select, note the numbers of the first and last item in the range.
4. Right click in the data
5. Select **Save Selection** or **Save As** from the right click menu
6. Click on the radio button labeled **Selection**. If you selected a range, make sure the starting and ending numbers are correct. To specify a range, type the numbers of the first and last items in the range in the boxes.
7. Select either **Events** or **Frames** to indicate whether the numbers are event or frame numbers.
8. Type a file name in the **As** box at the bottom of the screen. Click the **Browse** icon to browse to a specific directory. Otherwise your file is saved in the default capture file directory.
9. Click **OK** when you are finished.

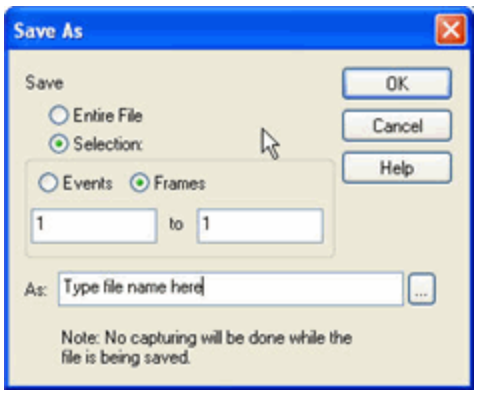

6.2 Adding Comments to a Capture File

The **Notes** feature allows you to add comments to a CFA file. These comments can be used for many purposes. For example, you can list the setup used to create the capture file, record why the file is useful to keep, or include notes to another person detailing which frames to look at and why. (Bookmarks are another useful way to record information about individual frames.)

To open the **Notes** window :

1. Click the **Show Notes** icon . This icon is present on the toolbars of the **Frame Display** , as well as the **Event Display** . **Notes** can be selected from the **Edit** menu on one of these windows.

2. Type your comments in the large edit box on the **Notes** window. The **Cut**, **Copy**, **Paste** features are supported from **Edit** menu and the toolbar when text is selected. Undo and Redo features are all supported from **Edit** menu and the toolbar at the current cursor location.
3. Click the thumbtack icon to keep the **Notes** window on top of any other windows.
4. When you're done adding comments, close the window.
5. When you close the capture file, you are asked to confirm the changes to the capture file. See Confirming Capture File (CFA) Changes for more information.

6.3 Confirm Capture File (CFA) Changes

This dialog appears when you close a capture file after changing the Notes, the protocol stack, or bookmarks. The dialog lists information that was added or changed and allows you to select which information to save, and whether to save it to the current file or to a new one.

Changes made to the file appear in a list in the left pane. You can click on each item to see details in the right pane about what was changed for each item. You simply check the boxes next to the changes you want to keep. Once you decide what changes to keep, select one of the following:

- **Save To This File** – Saves the changes you have made to the current capture file.
- **Save As** – Saves the changes to a new file.
- **Cancel the Close Operation** – Closes the file and returns you back to the display. No changes are saved.
- **Discard Changes** – Closes the file without saving any of the changes made to the notes, bookmarks, or protocol stack.

6.4 Loading and Importing a Capture File

6.4.1 Loading a Capture File

From the Control Window:

1. Go to the **File** menu.
2. Choose a file from the recently used file list.
3. If the file is not in the **File** menu list, select **Open Capture File** from the **File** menu or simply click on the **Open** icon on the toolbar.
4. Capture files have a .cfa extension. Browse if necessary to find your capture file.
5. Click on your file, and then click **Open**.

6.4.2 Importing Capture Files

1. From the **Control** window , go to the **File** menu and select Open Capture File or click on the Open icon on the toolbar.
2. Left of the **File name** text box, select from the drop-down list **Supported File Types** box to All Importable File Types or **All Supported File Types (*.cfa, *.log, *.txt, *.csv, *.cap)**. Select the file and click **Open**.

The analyzer automatically converts the file to the analyzer's format while keeping the original file in its original format. You can save the file in the analyzer's format, close the file without saving it in the analyzer's format, or have the analyzer automatically save the file in the analyzer's format (see the System Settings to set this option). All of these options keep your original file untouched.

When you first open the file, the analyzer brings up the Protocol Stack window and ask you what protocol decodes, if any, you want to use. You must choose a protocol decode at this point for the analyzer to decode the data in the file. If you open a file without using any decodes, and decide later that you want to apply a decode, choose Reframe from the File menu on the Control window.

6.5 Printing

6.5.1 Printing from the Frame Display/HTML Export

The **Frame Display Print** dialog and the **Frame Display HTML Export** are very similar. This topic discusses both dialogs.

Frame Display Print

The **Frame Display Print** feature provides the user with the option to print the capture buffer or the current selection. The maximum file size, however, that can be exported is 1000 frames.

When **Print Preview** is selected, the output displays in a browser print preview window, where the user can select from the standard print options. The output file format is in html, and uses the Microsoft Web Browser Control print options for background colors and images.

Print Background Colors Using Internet Explorer

1. Open the Tools menu on the browser menu bar
2. Select “Internet Options…” menu entry.
3. Click Advanced tab.
4. Check “Print background colors and images” under the Printing section
5. Click the Apply button, then click OK

Configure the Print File Range in the Frame Display Print Dialog

Selecting more than one frame in the Frame Display window defaults the radio button in the Frame Display Print dialog to Selection and allows the user to choose the All radio button. When only one frame is selected, the All radio button in the Frame Display Print dialog is selected.

How to Print Frame Display Data

1. Select **Print** or **Print Preview** from the **File** menu on the **Frame Display** window to display the **Frame Display Print** dialog. Select **Print** if you just want to print your data to your default printer. Select **Print Preview** if you want access to printer options.

2. Choose to include the **Summary** pane (check the box) in the print output. The **Summary** pane appears at the beginning of the printed output in tabular format. If you select **All layers** in the **Detail Section**, the **Data Bytes** option becomes available.

3. In the **Detail Section**, choose to exclude—**No decode section**—the decode from the **Detail** pane in the **Frame Display**, or include **All Layers** or **Selected Layers Only.** If you choose to include selected layers, then select (click on and highlight) the layers from the list box.

4. Click on selected layers in the list to de-select, or click the **Reset Selected Layers** button to de-select all selected layers.

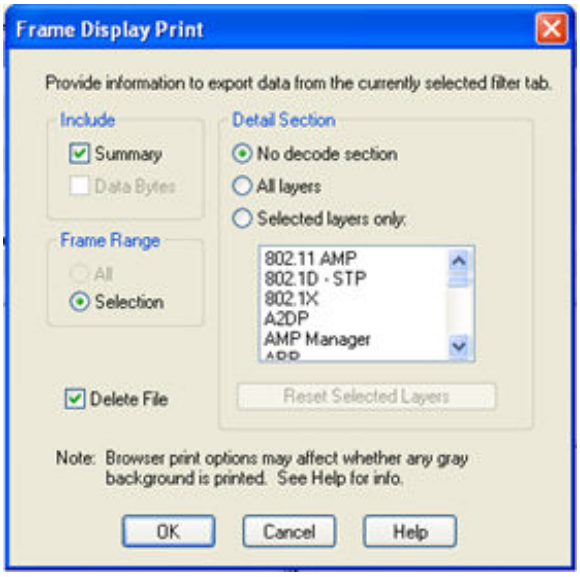

Figure 6.2 - Frame Display Print Dialog

5. Select the range of frames to include **All** or **Selection** in the **Frame Range** section of the **Frame Display Print** dialog.

   Choosing **All** prints up to 1000 frames from the buffer.

   Choosing **Selection** prints only the frames you select in the Frame Display window.

6. Selecting the **Delete File** deletes the temporary html file that was used during printing

7. Click the **OK** button.

Frame Display Print Preview

The **Frame Display Print Preview** feature provides the user with the option to export the capture buffer to an .html file. The maximum file size, however, that can be exported is 1000 frames.

If you chose **Print Preview**, the system displays your data in a browser print preview display with options for printing such as page orientation and paper size. You can also use your Printer Preferences dialog to make some of these selections. When printing your data, the analyzer creates an html file and prints the path to the file at the bottom of the page. This file can be opened in your browser, however, it may appear different than the printed version.

1. Select **Print Preview** from the **File** menu on the **Frame Display** window to display the **Frame Display Print Preview**.

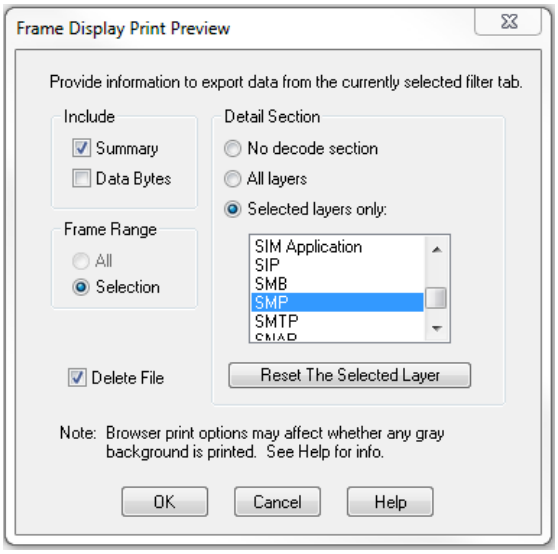

Figure 6.3 - Frame Display Print Preview Dialog

2. From this point the procedure is the same as steps 2 through 5 in "How to Print Frame Display Data" above.
3. Click the **OK** button, and after a brief wait a browser window will appear.

6.5.2 Printing from the Event Display

The Event Display Print feature provides the user with the option to print either the entire capture buffer or the current selection. When Print Preview is selected, the output displays in a browser print preview window where the user can select from the standard print options. The output file format is in html, and uses the Microsoft Web Browser Control print options for background colors and images (see below).

Print Background Colors Using Internet Explorer

1. Open the Tools menu on the browser menu bar
2. Select “Internet Options…” menu entry.
3. Click Advanced tab.
4. Check “Print background colors and images” under the Printing section
5. Click the Apply button, then click OK

The **Event Display Print** feature uses the current format of the **Event Display** as specified by the user.

See About Event Display for an explanation on formatting the **Event Display** prior to initiating the print feature.

Configure the Print File Range in the Event Display Print dialog

Selecting more than one event in the **Event Display** window defaults the radio button in the **Event Display Print** dialog to **Selection** and allows the user to choose the **All** radio button. When only one event is selected , the **All** radio button in the **Event Display Print** dialog is selected.

How to Print Event Display Data to a Browser

1. Select **Print** or **Print Preview** from the **File** menu on the **Event Display** window to display the **Event Display Print** dialog. Select **Print** if you just want to print your data to your default printer. Select **Print Preview** if you want preview the print in your browser.
2. Select the range of events to include from either **All** or **Selection** in the **Event Range** section . Choosing **All** prints all of the events in the capture file or buffer. Choosing **Selection** prints only the selected events in the Event Display window.

Note: In order to prevent a Print crash, you cannot select **All** if there are more than 100,000 events in the capture buffer.

Note: See "Configure the Print File Range in the Event Display Print Dialog" above for an explanation of these selections

Figure 6.4 - Event Display Print Dialog

3. Click the OK button.

If you chose **Print Preview**, the system displays your data in a browser print preview display with options for printing such as page orientation and paper size. You can also use your Printer Preferences dialog to make some of these selections. When printing your data, the analyzer creates an html file and prints the path to the file at the bottom of the page. This file can be opened in your browser, however, it may appear different than the printed version.

6.6 Exporting

6.6.1 Frame Display Export

You can dump the contents of the **Summary** pane on the **Frame Display** into a Comma Separated File (.csv).

To access this feature:

1. Right click on the **Summary** pane or open the **Frame Display File** menu.
2. Select the **Export…** menu item.
3. Select a storage location and enter a **File name**.
4. Select **Save**.

6.6.2 Exporting a File with Event Display Export

With the **Event Display Export** dialog you can export the contents of the **Event Display** dialog as a test (.txt), CSV (.csv.), HTML (.htm), or Binary File (.bin). You also have the option of exporting the entire capture buffer or just the current selection of the Event Display dialog.

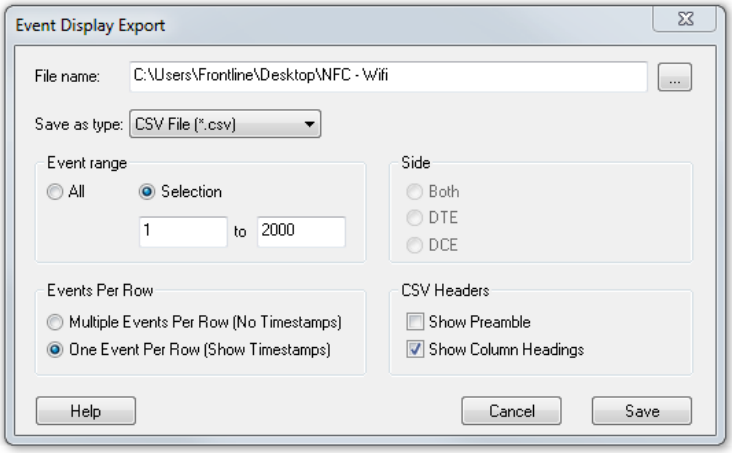

Figure 6.5 - Event Display Export Example: .csv file.

How to Export Event Display Data to a File

1. Select **Export Events** from the **File** menu on the **Event Display** window to display the **Event Display Export** dialog.
2. Enter a file path and name, or click the browser button to display the Windows **Save As** dialog and navigate to the desired storage location.
3. Select a file type from the **Save as type:** drop-down List Menu on the Event Display Export dialog. Select from among the following file formats:

   Text File (*.txt)

   CSV File (*.csv)

   HTML File (*.html)

   Binary File (*.bin)
4. Select the range of events to include in the file from either **All** or **Selection** in the **Event Range** section of the **Event Display Export** dialog.

- Selecting more than one event in the Event Display window defaults the radio button in the Event Display Export dialog to Selection and allows the user to choose the All radio button.
- When only one event is selected (something must be selected), the All radio button in the Event Display Export dialog is selected by default.

5. Next you need to select the Side variable for serial communications.
   - is used to determine whether you want to export data from , or both.
   - Choose Host, Function\Control or Both to determine how you want to export the data.
5. Choose Host, Function\Control or Both to determine how you want to export the data.
6. Choose whether you want to display multiple events or single events per row.

   Events Per Row: You can choose to display **Multiple Events Per Row**, but this method contains no timestamps. If you select **One Event Per Row**, you can display timestamps. multiple events or single events per row.

   Note: The raw timestamp value is the number of 100-nanosecond intervals since the beginning of January 1, 1601. This is standard Windows time.

   .

   The timestamp data types displayed in columns for One Event Per Row.

   Timestamp

   Delta

   Event Number

   Byte Number

   Frame Number

   Type

   Hex

   Dec

   Oct

   Bin

   Side

   ASCII | 7-bit ASCII | EBCDIC | Baudot

   RTS

   CTS

   DSR

   DTR

CD

RI

UART Overrun

Parity Error

Framing Error

7. If you select .csv as the file type, choose whether you want to hide/display **Preambles** or **Column Headings** in the exported file
8. Click **Save**. The Event Display Export file is saved to the locations you specified in **File name**.

	A	B	C	D	E	F	G	H	I	J	K
1	Timestamp	Delta	Event Number	Byte Number	Frame Number	Type	Hex	Dec	Oct	Bin	ASCII
632	11/30/2012 12:20:02.895166 PM	0:00:00.00	631	626	3	Data	0	0	0	0	.
633	11/30/2012 12:20:02.895166 PM	0:00:00.00	632	627	3	Data	0	0	0	0	.
634	11/30/2012 12:20:02.895166 PM	0:00:00.00	633	628	3	Data	0	0	0	0	.
635	11/30/2012 12:20:02.895166 PM	0:00:00.00	634	629	3	Data	98	152	230	10011000	.
636	11/30/2012 12:20:02.895166 PM	0:00:00.00	635	630	3	Data	70	112	160	1110000	p
637	11/30/2012 12:20:02.895166 PM	0:00:00.00	636	631	3	Data	94	148	224	10010100	.
638	11/30/2012 12:20:02.895166 PM	0:00:00.00	637	632	3	Data	22	34	42	100010	"
639	11/30/2012 12:20:02.895166 PM	0:00:00.00	638	633	3	Data	21	33	41	100001	!
640	11/30/2012 12:20:02.895166 PM	0:00:00.00	639	634	3	Data	1c	28	34	11100	.
641	11/30/2012 12:20:02.895166 PM	0:00:00.00	640	635	3	Data	80	128	200	10000000	.
642	11/30/2012 12:20:02.895166 PM	0:00:00.00	641	636	3	Data	80	128	200	10000000	.
643	11/30/2012 12:20:02.895166 PM	0:00:00.00	642	637	3	Data	80	128	200	10000000	.
644	11/30/2012 12:20:02.895166 PM	0:00:00.00	643	638	3	Data	80	128	200	10000000	.

Figure 6.6 - Example: .csv Event Display Export, Excel spreadsheet

6.6.2.1 Export Filter Out

You can filter out data you don't want or need in your text file.

(This option is available only for serial data.) In the **Filter Out** box, choose which side to filter out: the DTE data, the DCE data or neither side (don't filter any data.) For example, if you choose the radio button for DTE data, the DTE data would be filtered out of your export file and the file would contain only the DCE data.

You can also filter out Special Events (which is everything that is not a data byte, such as control signal changes and Set I/O events), Non-printable characters or both. If you choose to filter out Special Events, your export file would contain only the data bytes. Filtering out the non-printable characters means that your export file would contain only special events and data bytes classified as printable. In ASCII, printable characters are those with hex values between $20 and $7e.

6.6.2.2 Exporting Baudot

When exporting Baudot, you need to be able to determine the state of the shift character. In a text export, the state of the shift bit can be determined by the data in the Character field. When letters is active, the character field shows letters and vice versa.

Chapter 7 General Information

7.1 System Settings and Progam Options

7.1.1 System Settings

Open the **System Settings** window by choosing **System Settings** from the **Options** menu on the **Control** window. To enable a setting, click in the box next to the setting to place a checkmark in the box. To disable a setting, click in the box to remove the checkmark. When viewing a capture file, settings related to data capture are grayed out.

Single File

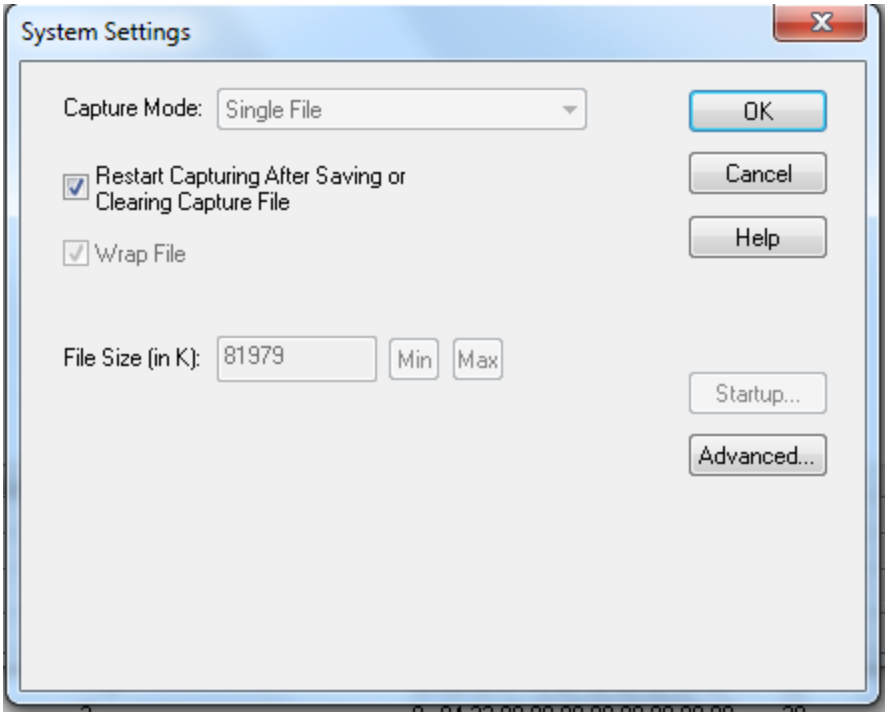

Figure 7.1 - System Settings Single File Mode

This option allows the analyzer to capture data to a file. Each time you capture the file you must provide a file name. The size of each file cannot larger than the number given in File Size (in K). The name of each file is the name you give it in the Name box followed by the date and time. The date and time are when the series was opened.

- **Restart Capturing After Saving or Clearing Capture File**

  If the Automatically Restart feature is enabled, the analyzer restarts capture to the file immediately after the file is closed.

- **Wrap File**

  When enabled, the analyzer wraps the file when it becomes full. The oldest events are moved out of the file to make room for new events. Any events moved out of the file are lost. When disabled, the analyzer stops capture when the file becomes full. Either reset the file or close your capture file to continue.

- **File Size**: The size of the file will depend of the available hard disk space.

  1. Click the **Min** button to see/set the minimum acceptable value for the file size.

  2. Click the **Max** button to see/set the maximum acceptable value for the file size.

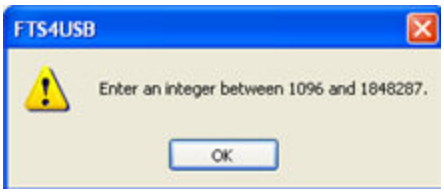

You can accept these values, or you can enter a unique file size. But if you try to close the dialog after entering a value greater than the maximum or less than the minimum, you will see the following dialog.

- **Start up**

  Opens the Program Start up Options window. **Start up** options let you choose whether to start data capture immediately on opening the analyzer.

- **Advanced**

  Opens the Advanced System Options window. The Advanced Settings should only be changed on advice of technical support.

7.1.1.1 System Settings - Disabled/Enabled Options

Some of the **System Settings** options are disabled depending upon the status of the data capture session.

- As the default, all the options on the **System Settings** dialog are enabled.
- Once the user begins to capture data by selecting the Start Capture button, some of the options on the System Settings dialog are disabled until the user stops data capture and either saves or erases the captured data.
- The user can go into the **Startup** options and **Advanced** system options on the **System Settings** dialog and make changes to the settings at any time.

7.1.1.2 Advanced System Options

These parameters affect fundamental aspects of the software, and it is unlikely that you ever have to change them. If you do change them and need to return them to their original values, the default value is listed in parentheses to the right of the value box.

Most technical support problems are not related to these parameters, and as changing them could have serious consequences for the performance of the analyzer, we strongly recommend contacting technical support before changing any of these parameters.

To access the Advanced System Options:

1. Go to the Control window.
2. Choose **System Settings** from the **Options** menu.
3. On the **System Settings** window, click the **Advanced** button.

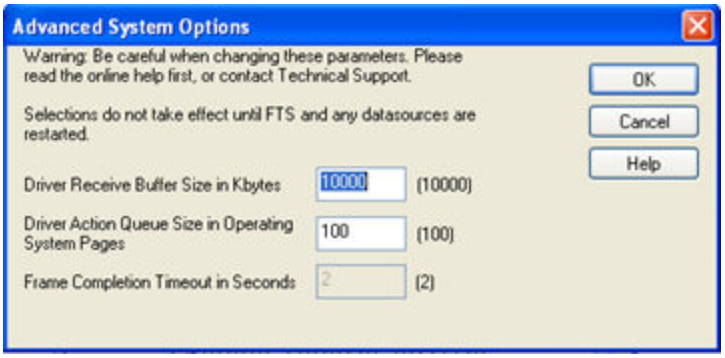
Advanced System Options
Warning: Be careful when changing these parameters. Please read the online help first, or contact Technical Support.
Selections do not take effect until FTS and any datasources are restarted.
OK
Cancel
Help
Driver Receive Buffer Size in Kbytes
10000
(10000)
Driver Action Queue Size in Operating System Pages
100
(100)
Frame Completion Timeout in Seconds
2
(2)

Figure 7.2 - Advanced System Options dialog

- **Driver Receive Buffer Size in Kbytes** - This is the size of the buffer used by the driver to store incoming data. This value is expressed in Kbytes.
- **Driver Action Queue Size In Operating System Pages** - This is the size of the buffer used by the driver to store data to be transmitted. This value is expressed in operating system pages.
- **Frame Completion Timeout in Seconds** - This is the number of seconds that the analyzer waits to receive data on a side while in the midst of receiving a frame on that side.

  If no data comes in on that side for longer than the specified number of seconds, an "aborted frame" event is added to the Event Display and the analyzer resumes decoding incoming data. This can occur when capturing interwoven data (DTE and DCE) and one side stops transmitting in the middle of a frame.

  The range for this value is from 0 to 999,999 seconds. Setting it to zero disables the timeout feature.

Note: This option is currently disabled.

7.1.1.3 Selecting Start Up Options

To open this window:

1. Choose **System Settings** from the **Options** menu on the Control window.
2. On the System Settings window, click the **Start Up** button.
3. Choose one of the options to determine if the analyzer starts data capture immediately on starting up or not.

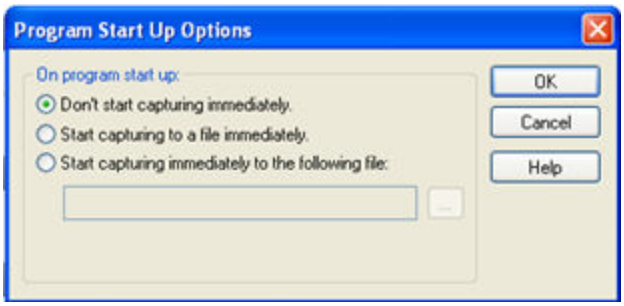

Figure 7.3 - Start Up Options dialog

- **Don't start capturing immediately** - This is the default setting. The analyzer begins monitoring data but does not begin capturing data until clicking the **Start Capture** icon on the **Control**, **Event Display** or **Frame Display** windows.
- **Start capturing to a file immediately** - When the analyzer starts up, it immediately opens a capture file and begins data capture to it. This is the equivalent of clicking the**Start Capture** icon. The file is given a name based on the settings for capturing to a file or series of files in the **System Settings** window.
- **Start capturing immediately to the following file:** - Enter a file name in the box below this option. When the analyzer starts up, it immediately begins data capture to that file. If the file already exists, the data in it is overwritten.

7.1.2 Changing Default File Locations

The analyzer saves user files in specific locations by default. Capture files are placed in the My Capture Files directory and configurations are put in My Configurations. These locations are set at installation.

Follow the steps below to change the default locations.

1. Choose **Directories** from the **Options** menu on the **Control** window to open the **File Locations** window.

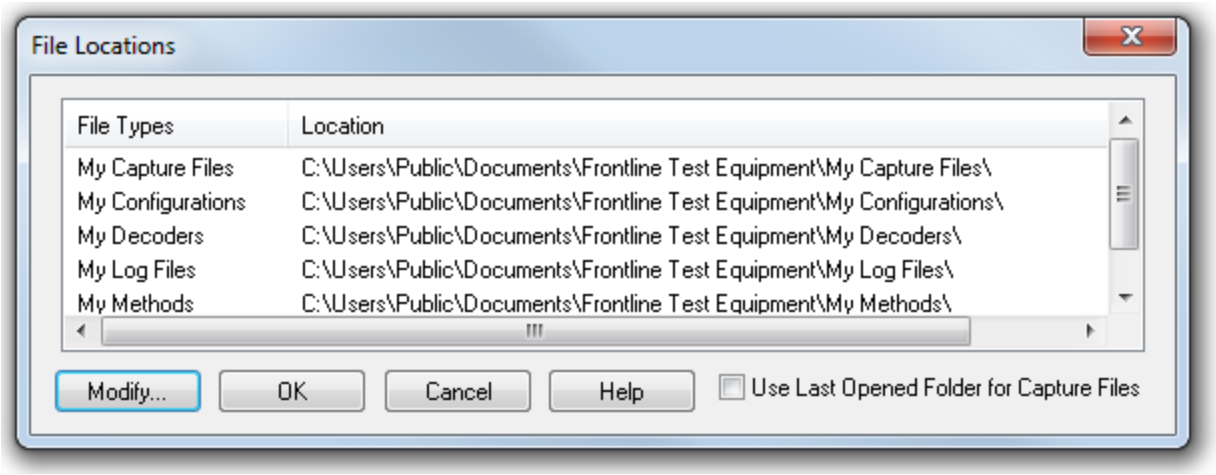

Figure 7.4 - File Locations dialog

2. Select the default location you wish to change.
3. Click **Modify**.
4. Browse to a new location.

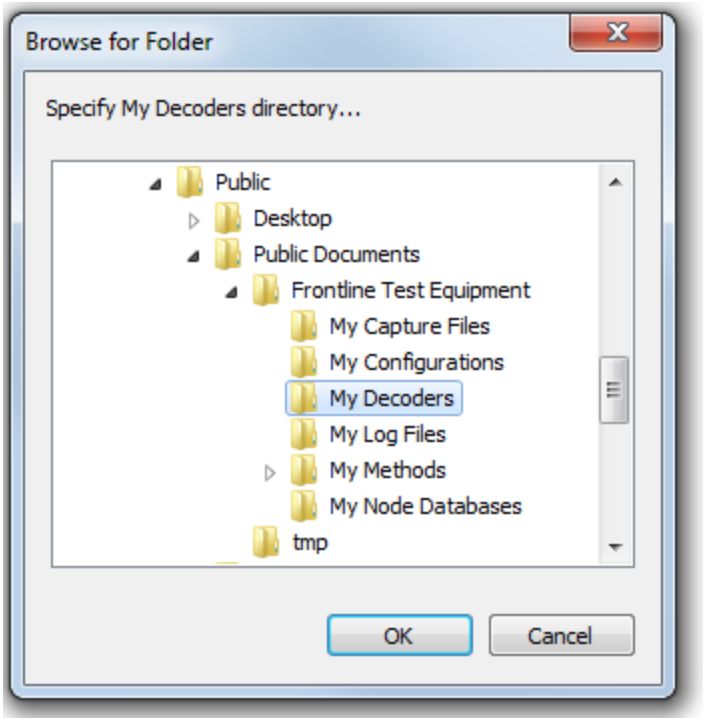

Figure 7.5 - File Locations Browse dialog

5. Click **OK**.
6. Click **OK** when finished.

If a user sets the My Decoders directory such that it is up-directory from an installation path, multiple instances of a personality entry may be detected, which causes a failure when trying to launch Frontline. For example, if an Frontline product is installed at C:\Users\Public\Public Documents\Frontline Test Equipment\My Decoders\ then "My Decoders" cannot be set to any of the following:

- C:\ My Decoders\
- C:\Users\ My Decoders\
- C:\Users\\Public\My Decoders\
- C:\Users\Public\Public Documents\My Decoders\
- or to any directory that already exists in the path C:\Users\Public\Public Documents\Frontline Test Equipment\My Decoders\

Default Capture File Folder Checkbox

If the **Use Last Opened Folder for Capture Files** checkbox is checked, then the system automatically changes the default location for saving capture files each time you open a file from or save a file to a new location. For example, let's say the default location for saving capture files is Drive A > Folder A. Now you select the **Use Last Opened Folder for Capture Files** checkbox. The next time, however, you open a capture file from a different location, Folder B > Removable Flash Drive for example. Now when you save the capture file, it will be saved to Folder B > Removable Flash Drive. Also, all subsequent files will be saved to that location. This remains true until you open a file from or save a file to a different location.

There is one caveat to this scenario, however. Let's say you have selected **Use Last Opened Folder for Capture Files** and opened a file from a location other than the default directory. All subsequent capture files will be saved to that location. Suppose, however, the next time you want to save a capture file, the new file location is not available because the directory structure has changed: a folder has been moved, a drive has been reassigned, a flash drive has been disconnected, etc. In the case of a "lost" directory structure, subsequent capture files will be saved to the default location. **ComProbe software will always try to save a file to the folder where the last file was opened from or saved to, if Use Last Opened Folder for Capture Files is checked.** If, however, the location is not accessible, files are saved to the default directory that is set at installation.

If the checkbox is unchecked, then the system always defaults to the directory listed in the File Locations dialog.

7.1.3 Side Names

The **Side Names** dialog is used to change the names of objects and events that appear in various displays. **The Side Names** dialog will change depending on the sniffing technology in use at the time the software was loaded.

Changes to the Names are used throughout the program.

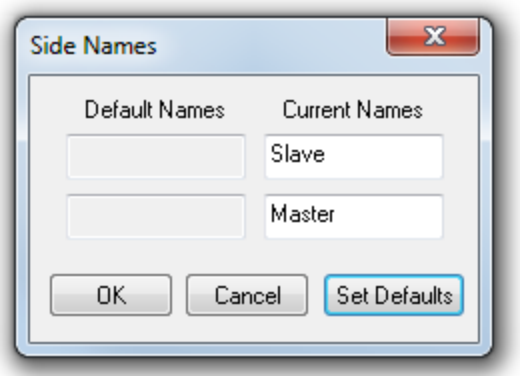

Figure 7.6 - Example: Side Names Where "Slave" and "Master" are current

1. To open the Side Names dialog, choose **Side Names...** from the **Options** menu on the **Control** window.
2. To change a name, click on the name given in the **Current Names** column, and then click again to modify the name (a slow double-click).
3. Select **OK** to initiate the changes. The changes that have been made will not fully take effect for any views already open. Closing and reopening the views will cause the name change to take effect.
4. To restore the default values, click the **Set Defaults** button.

7.1.4 Timestamping

Timestamping is the process of precise recording in time of packet arrival. Timestamps is an optional parameter in the Frame Display and Event Display that can assist in troubleshooting a network link.

7.1.4.1 Timestamping Options

The Timestamping Options window allows you to enable or disable timestamping, and change the resolution of the timestamps for both capture and display purposes.

To open this window:

Choose **Set Timestamp Format...** from the **Options** menu on the Frame Display and Event Display window or click on the **Timestamping Option** icon in the **Event Display** toolbar. The Timestamping Options window will open.

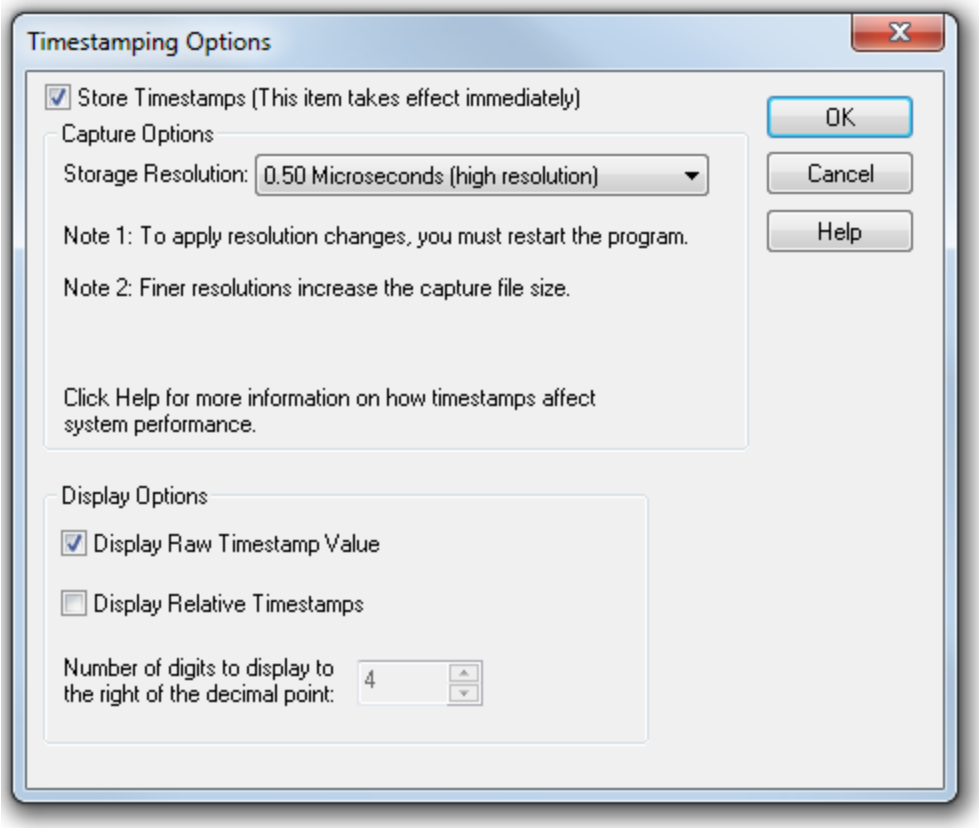
Timestamping Options
Store Timestamps (This item takes effect immediately)
Capture Options
Storage Resolution: 0.50 Microseconds (high resolution)
Note 1: To apply resolution changes, you must restart the program.
Note 2: Finer resolutions increase the capture file size.
Click Help for more information on how timestamps affect system performance.
Display Options
Display Raw Timestamp Value
Display Relative Timestamps
Number of digits to display to the right of the decimal point: 4
OK
Cancel
Help

Figure 7.1 Timestamping Options dialog

7.1.4.2 Enabling/Disabling Timestamp

To enable timestamping click to make a check appear in the check box **Store Timestamps (This time takes effect immediately)**. Removing the check will disable timestamping.

7.1.4.3 Changing the Timestamp Resolution

This option affects the resolution of the timestamp stored in the capture file. The default timestamp is 10 milliseconds. This value is determined by the operating system and is the smallest "normal" resolutions possible.

Note: The raw timestamp value is the number of 100-nanosecond intervals since the beginning of January 1, 1601. This is standard Windows time.

It is also possible to use "high resolution" timestamping. High resolution timestamp values are marked by an asterisk as high resolution in the drop down list. To change timestamping resolutions:

1. Go to the **Capture Options** section of the window.
2. Change the resolution listed in the **Storage Resolution** box.

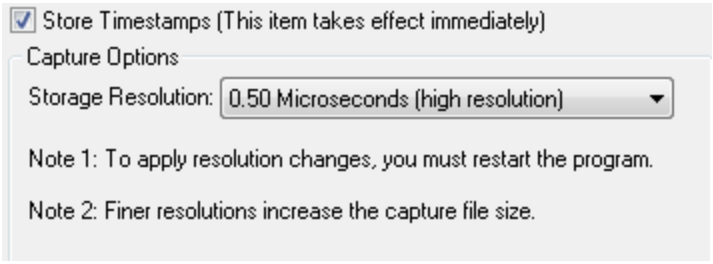
Store Timestamps (This item takes effect immediately)
Capture Options
Storage Resolution: 0.50 Microseconds (high resolution)
Note 1: To apply resolution changes, you must restart the program.
Note 2: Finer resolutions increase the capture file size.

Note: If you change the resolution, you need to exit the analyzer and restart in order for the change to take effect.

7.1.4.3.1 Performance Issues with High Resolution Timestamp

There are two things to be aware of when using high resolution timestamps. The first is that high resolution timestamps take up more space in the capture file because more bits are required to store the timestamp. Also, more timestamps need to be stored than at normal resolutions. The second issue is that using high resolution timestamping may affect performance on slower machines

For example, if 10 bytes of data are captured in 10 milliseconds at a rate of 1 byte per millisecond, and the timestamp resolution is 10 milliseconds, then only one timestamp needs to be stored for the 10 bytes of data. If the resolution is 1 millisecond, then 10 timestamps need to be stored, one for each byte of data. If you have two capture files, both of the same size, but one was captured using normal resolution timestamping and the other using high resolution, the normal resolution file has more data events in it, because less room is used to store timestamps.

You can increase the size of your capture file in the System Settings.

7.1.4.4 Switching Between Relative and Absolute Time

With Timestamping you can choose to employ Relative Time or Absolute time.

1. Choose **System Settings** from the **Options** menu on the **Control** window, and click the **Timestamping Options** button, or click the click the **Timestamping Options** icon from the **Event Display** window.
2. Go to the **Display Options** section at the bottom of the window and find the **Display Relative Timestamps** checkbox.
3. Check the box to switch the display to relative timestamps. Remove the check to return to absolute timestamps.

Note: The options in this section affect only how the timestamps are displayed on the screen, not how the timestamps are recorded in the capture file.

- **Display Raw Timestamp Value** shows the timestamp as the total time in hundred nanoseconds from a specific point in time.
- **Display Relative Timestamps** shows the timestamp as the amount of time that has passed since the first byte was captured. It works just like a stop watch in that the timestamp for the first byte is 0:00:00.0000 and all subsequent timestamps increment from there. The timestamp is recorded as the actual time, so you can flip back and forth between relative and actual time as needed.
- Selecting both values displays the total time in nanoseconds from the start of the capture as opposed to a specific point in time.
- Selecting neither value displays the actual chronological time.

When you select **Display Relative Timestamp** you can set the number of digits to display using the up or down arrows on the numeric list.

7.1.4.5 Displaying Fractions of a Second

1. Choose **System Settings** from the **Options** menu on the **Control** window, and click the **Timestamping Options** button, or click the click the **Timestamping Options** icon from the **Event Display** window.
2. Go to the **Display Options** section at the bottom of the window, and find the **Number of Digits to Display** box.
3. Click on the arrows to change the number. You can display between 0 and 6 digits to the right of the decimal point.

7.2 Technical Information

7.2.1 Performance Notes

As a software-based product, the speed of your computer's processor affects the analyzer's performance. Buffer overflow errors are an indicator that the analyzer is unable to keep up with the data. The information below describes what happens to the data as it arrives, what the error means, and how various aspects of the analyzer affect performance. Also included are suggestions on how to improve performance.

The analyzer's driver takes data from the driver and counts each byte as they are put into the driver's buffer. The analyzer's driver tells the user interface that data is ready to be processed. The analyzer takes the data from the driver's buffer and puts the data into the capture buffer.

Driver Buffer Overflows occur when the user interface does not retrieve frames from the driver quickly enough. Buffer overflows are indicated in the **Event Display** window by a plus sign within a circle. Clicking on the buffer overflow symbol displays how many frames have been lost.

There are several things that you can do to try and solve this problem.

- Use capture filters to filter out data you don't need to see. Capture filters reduce the amount of data processed by the analyzer. (Ethernet Only)
- Close all other programs that are doing work while the analyzer is running. Refrain from doing searches in the **Event Display** window or other processor intensive activities while the analyzer is capturing data.
- Timestamping takes up processor time, primarily not in timestamping the data, but in writing the timestamp to the file. Try turning off timestamping from the Timestamping Options window.
- For **Driver Buffer Overflows**, change the size of the driver buffer. This value is changed from the **Advanced System Settings**. Go to the **Control** window and choose **System Settings** from the **Options** menu. Click on the **Advanced** button. Find the value D**river Receive Buffer Size in Operating System Pages**. Take the number listed there and double it.
- The analyzer's number one priority is capturing data; updating windows is secondary. However, updating windows still takes a certain amount of processor time, and may cause the analyzer to lose data while the window is being updated. Some windows require more processing time than others because the information being displayed in them is constantly changing. Refrain from displaying data live in the **Event Display** and **Frame Display** windows. The analyzer can capture data with no windows other than the **Control** window open.

- If you are still experiencing buffer overflows after trying all of the above options, then you need to use a faster PC.

7.2.2 BTSnoop File Format

Overview

The BTSnoop file format is suitable for storing Bluetooth® HCI traffic. It closely resembles the snoop format, as documented in RFC 1761.

File Format

The snoop packet capture file is an array of octets structured as follows:

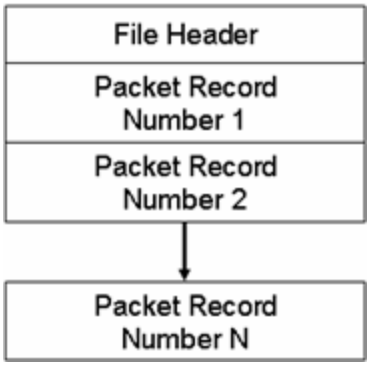

The File Header is a fixed-length field containing general information about the packet file and the format of the packet records it contains. One or more variable-length Packet Record fields follow the File Header field. Each Packet Record field holds the data of one captured packet.

File Header

The structure of the File Header is as follows:

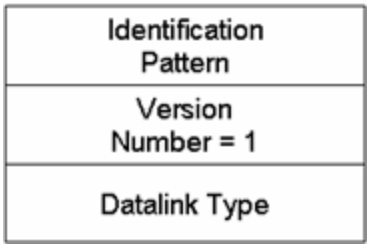

Identification Pattern:

A 64-bit (8 octet) pattern used to identify the file as a snoop packet capture file. The Identification Pattern consists of the 8 hexadecimal octets:

62 74 73 6E 6F 6F 70 00

This is the ASCII string "btsnoop" followed by one null octets.

Version Number:

A 32-bit (4 octet) unsigned integer value representing the version of the packet capture file being used. This document describes version number 1.

Datalink Type:

A 32-bit (4 octet) field identifying the type of datalink header used in the packet records that follow. The datalink type codes are listed in the table below. Values 0 - 1000 are reserved, to maximize compatibility with the RFC1761 snoop version 2 format.

Table 7.2 - Datalink Codes

Datalink Type	Code
Reserved	0 - 1000
Un-encapsulated HCI (H1)	1001
HCI UART (H4)	1002
HCI BSCP	1003
HCI Serial (H5)	1004
Unassigned	1005 - 4294967295

Packet Record Format

Each packet record holds a partial or complete copy of one packet as well as some descriptive information about that packet. The packet may be truncated in order to limit the amount of data to be stored in the packet file.

Each packet record holds 24 octets of descriptive information about the packet, followed by the packet data, which is variable-length, and an optional pad field. The descriptive information is structured as six 32-bit (4-octet) integer values.

The structure of the packet record is as follows:

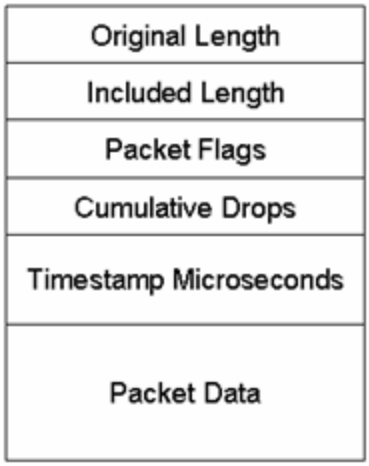

Original Length

A 32-bit unsigned integer representing the length in octets of the captured packet as received via a network.

Included Length

A 32-bit unsigned integer representing the length of the Packet Data field. This is the number of octets of the captured packet that are included in this packet record. If the received packet was truncated, the Included Length field is less than the Original Length field.

Packet Flags

Flags specific to this packet. Currently the following flags are defined:

Table 7.3 - Packet Flag Description

Bit No.	Definition
0	Direction flag 0 = Sent, 1 = Received
1	Command flag 0 = Data, 1 = Command/Event
2 - 31	Reserved

Bit 0 is the least significant bit of the 32-bit word.

Direction is relative to host / DTE. i.e. for Bluetooth controllers, Send is Host->Controller, Receive is Controller->Host.

Note: Some Datalink Types already encode some or all of this information within the Packet Data. With these Datalink Types, these flags should be treated as informational only, and the value in the Packet Data should take precedence.

Cumulative Drops

A 32-bit unsigned integer representing the number of packets that were lost by the system that created the packet file between the first packet record in the file and this one. Packets may be lost because of insufficient resources in the capturing system, or for other reasons.

Note: some implementations lack the ability to count dropped packets. Those implementations may set the cumulative drops value to zero.

Timestamp Microseconds

A 64-bit signed integer representing the time of packet arrival, in microseconds since midnight, January 1st, 0 AD nominal Gregorian.

In order to avoid leap-day ambiguity in calculations, note that an equivalent epoch may be used of midnight, January 1st 2000 AD, which is represented in this field as 0x00E03AB44A676000.

Packet Data

Variable-length field holding the packet that was captured, beginning with its datalink header. The Datalink Type field of the file header can be used to determine how to decode the datalink header. The length of the Packet Data field is given in the Included Length field.

Note that the length of this field in not necessarily rounded to any particular multi-octet boundary, as might otherwise be suggested by the diagram.

Data Format

All integer values are stored in "big-endian" order, with the high-order bits first.

7.2.3 Progress Bars

The analyzer uses progress bars to indicate the progress of a number of different processes. Some progress bars (such as the filtering progress bar) remain visible, while others are hidden.

The title on the progress bar indicates the process underway.

7.2.4 Event Numbering

This section provides information about how events are numbered when they are first captured and how this affects the display windows in the analyzer. The information in this section applies to frame numbering as well.

When the analyzer captures an event, it gives the event a number. If the event is a data byte event, it receives a byte number in addition to an event number. There are usually more events than bytes, with the result is that a byte might be listed as Event 10 of 16 when viewing all events, and Byte 8 of 11 when viewing only the data bytes.

The numbers assigned to events that are wrapped out of the buffer are not reassigned. In other words, when event number 1 is wrapped out of the buffer, event number 2 is not renumbered to event 1. This means that the first event in the buffer may be listed as event 11520 of 16334, because events 1-11519 have been wrapped out of the buffer. Since row numbers refer to the event numbers, they work the same way. In the above example, the first row would be listed as 2d00 (which is hex for 11520.)

The advantage of not renumbering events is that you can save a portion of a capture file, send it to a colleague, and tell your colleague to look at a particular event. Since the events are not renumbered, your colleague's file use the same event numbers that your file does.

7.2.5 Useful Character Tables

7.2.5.1 ASCII Codes

hex	x0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	NUL	SOH	STX	ETX	EOT	ENQ	ACK	BEL	BS	HT	LF	VT	FF	CR	SO	SI
1x	DLE	DC1	DC2	DC3	DC4	NAK	SYN	ETB	CAN	EM	SUB	ESC	FS	GS	RS	US
2x	SP	!	"	#	$	%	&	'	(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	r	s	t	u	v	w	x	y	z	{	|	}	~	DEL

7.2.5.2 Baudot Codes

DEC	HEX	LETTERS	FIGURES
0	00	BLANK (NUL)	BLANK (NUL)
1	01	E	3
2	02	LF	LF
3	03	A	-
4	04	SP	SP
5	05	S	BEL
6	06	I	8
7	07	U	7
8	08	CR	CR
9	09	D	$
10	0A	R	4
11	0B	J	'
12	0C	N	,
13	0D	F	!
14	0E	C	:
15	0F	K	(
16	10	T	5
17	11	Z	"
18	12	L	)
19	13	W	2
20	14	H	#
21	15	Y	6
22	16	P	0
23	17	Q	1
24	18	O	9
25	19	B	?
26	1A	G	&
27	1B	FIGURES	FIGURES
28	1C	M	.
29	1D	X	/
30	1E	V	;
31	1F	LETTERS	LETTERS

7.2.5.3 EBCDIC Codes

hex	x0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	NUL	SOH	STX	ETX	PF	HT	LC	DEL			SMM	VT	FF	CR	SO	SI
1x	DLE	DC1	DC2	TM	RES	NL	BS	IL	CAN	EM	CC	CU1	IFS	IGS	IRS	IUS
2x	DS	SOS	FS		BYP	LF	ETB	ESC			SM	CU2		ENQ	ACK	BEL
3x			SYN		PN	RS	UC	EOT				CU3	DC4	NAK		SUB
4x	SP											.	<	(	+	
5x	&										!	$	*	)	;	^
6x	-	/									|	,	%	_	>	?
7x										`	:	#	@	'	=	"
8x		a	b	c	d	e	f	g	h	i						
9x		j	k	l	m	n	o	p	q	r						
Ax		~	s	t	u	v	w	x	y	z				[		
Bx														]		
Cx	{	A	B	C	D	E	F	G	H	I						
Dx	}	J	K	L	M	N	O	P	Q	R						
Ex	\		S	T	U	V	W	X	Y	Z						
Fx	0	1	2	3	4	5	6	7	8	9						

7.2.5.4 Communication Control Characters

Listed below in alphabetical order are the expanded text meanings for common ANSI communication control characters, and two-character system abbreviation for each one. Some abbreviations have forward slash

characters between the two letters. This is to differentiate the abbreviations for a control character from a hex number. For example, the abbreviation for Form Feed is listed as F/F, to differentiate it from the hex number FF.

Table 7.4 - Communications Control Characters

Abbreviation	Control Character	Text
AK	ACK	Acknowledge
BL	BEL	Bell
BS	BS	Backspace
CN	CAN	Cancel
CR	CR	Carriage Return
D/1-4	DC1-4	Device Control 1-4
D/E	DEL	Delete
DL	DLE	Data Link Escape
EM	EM	End of Medium
EQ	ENQ	Enquiry
ET	EOT	End of Transmission
E/C	ESC	Escape
E/B	ETB	End of Transmission Block
EX	ETX	End of Text
F/F	FF	Form Feed
FS	FS	File Separator
GS	GS	Group Separator
HT	HT	Horizontal Tabulation
LF	LF	Line Feed
NK	NAK	Negative Acknowledge
NU	NUL	Null
RS	RS	Record Separator
SI	SI	Shift In
SO	SO	Shift Out
SH	SOH	Start of Heading
SX	STX	Start of Text
SB	SUB	Substitute
SY	SYN	Synchronous Idle

Table 7.4 - Communications Control Characters(continued)

Abbreviation	Control Character	Text
US	US	Unit Separator
VT	VT	Vertical Tabulation

7.2.6 The Frontline Serial Driver

ComProbe software uses custom versions of the standard Windows serial drivers in order to capture data. These drivers are usually installed during the routine product installation. However, if you need to install the serial driver after ComProbe software has already been installed, please refer to the instructions available in the Setup folder installed under Start | Programs | [Product Name and version #] | Setup | How to Install the FTS Serial Driver.

7.2.7 DecoderScript Overview

The main purpose of this manual is to describe DecoderScript™, the language used in writing decoders. DecoderScript allows you to create new decoders or modify existing decoders to expand the functionality of your ComProbe protocol analyzer. DecoderScript displays protocol data, checks the values of fields, validates checksums, converts and combines field values for convenient presentation. Decoders can also be augmented with custom C++-coded functions, called "methods", to extend data formatting, validation, transformations, and so on.

A decoder defines field-by-field how a protocol message can be taken apart and displayed. The core of each "decoder" is a program that defines how the protocol data is broken up into fields and displayed in the Frame Display window of the analyzer software.

This manual provides instruction on how to create and use custom decoders. When reading the manual for the first time, we encourage you to read the chapters in sequence. The chapters are organized in such a way to introduce you to DecoderScript writing step- by- step.

Screenshots of the ComProbe protocol analyzer have been included in the manual to illustrate what you see on your own screen as you develop decoders. But you should be aware for various reasons, the examples may be slightly different from the ones that you create. The differences could be the result of configuration differences or because you are running a newer version of the program. Do not worry if an icon seems to be missing, a font is different, or even if the entire color scheme appears to have changed. The examples are still valid.

Examples of decoders, methods, and frame recognizers are included in this manual. You can cut and paste from these examples to create your own decoders.

A quick note here: Usually the pasted code appears the same as the original in your editor. Some editors, however, change the appearance of the text when it is pasted (something to do with whether it is ASCII or Unicode text). If you find that the pasted text does not appear the same as the original, you can transfer the code into a simple text editor like Notepad, save it as an ANSI (ASCII) file, then use it in your decoder.

These files are installed in the FTE directory of the system Common Files directory. The readme file in the root directory of the protocol analyzer installation contains a complete list of included files. Most files are located in My Decoders and My Methods.

We will be updating our web site with new and updated utilities, etc, on a regular basis and we urge decoder writers to check there occasionally.

7.2.8 *Bluetooth* low energy ATT Decoder Handle Mapping

Low energy device attributes contain a 16-bit address called the attribute handle. Each handle is associated with an attribute Universally Unique Identifier (UUID) that is 128-bits long. In the attribute database, the handle is unique while the UUID is not unique.

The ComProbe software detects and stores the relationships (mappings) between handle and UUID during the GATT discovery process. But sometimes, there is no GATT discovery process because

- The discovery has previously taken place and both devices stored the mappings and the discovery will not repeat at every subsequent connection.
- The developer owns both devices in the conversation and chose to ignore discovery because the mappings are known.
- The devices are in development and the code to perform the mappings has not been written yet.

The solution to this problem is to

1. define the mappings in a file and
2. then pre-loading the mapping using the ComProbe software.

Creating handle-UUID mapping file

Create a file named "ATT_Handle_UUID_Preload.ini' in the root directory of "C:\Users\Public\Public Documents\Frontline Test Equipment\My Decoders\", but the file can be located anywhere.

Assume that you want to create a GATT service starting at handle 1.

Create a section in the ini file called

```
[Service Base Handles]
A=1
```

"A" will be your first service. Make the base handle equal to the handle of your service. You can use all upper and lower case letters so you can have up to 52 service handles.

Next add the following section.

```
[Advertiser Handles]
; Generic Access Profile (GAP)
A0 = 1800
A1 = 2803
A2 = 2a00
A3 = 2803
A4 = 2a01
A5 = 2803
A6 = 2a04
```

A few tings of note:

- In the code above, lines begging with a semi-colon are comments.
- If you want to change the base handle of the GAP service, change the "1" to some other number.
- If you want to comment out the entire service, comment out the base handle. If no "A" is defined, the software will ignore "A1", "A2" and so on.

7.3 Contacting Technical Support

Technical support is available in several ways. The online help system provides answers to many user related questions. Frontline's website has documentation on common problems, as well as software upgrades and utilities to use with our products.

On the Web: http://fte.com/support/supportrequest.aspx

Email: tech_support@fte.com

If you need to talk to a technical support representative about your FTS4BT product, support is available between 9 am and 5 pm, U.S. Eastern Time zone, Monday through Friday. Technical support is not available on U.S. national holidays.

Phone: +1 (434) 984-4500

Fax: +1 (434) 984-4505

Instructional Videos

Frontline provides a series of videos to assist the user and may answer your questions. These videos can be accessed at fte.com/support/videos.aspx. On this web page use the **Video Filters** sidebar to select instructional videos for your product.

Appendicies

Appendix A: Application Notes **184**

Appendix A: Application Notes

A.1 Bluetooth Virtual Sniffing 186

A.1 Bluetooth Virtual Sniffing

A.1.1 Introduction

The ComProbe software Virtual sniffing function simplifiesBluetooth® development and is easy to use. Frontline's Virtual sniffing with Live Import provides the developer with an open interface from any application to ComProbe software so that data can be analyzed and processed independent of sniffing hardware. Virtual sniffing can also add value to other *Bluetooth* development tools such as *Bluetooth* stack SDKs (Software Development Kits) and *Bluetooth* chip development kits.

This white paper discusses:

- Why HCI sniffing and Virtual sniffing are useful.
- *Bluetooth* sniffing history.
- What is Virtual sniffing?
- Why Virtual sniffing is convenient and reliable.
- How Virtual sniffing works.
- Virtual sniffing and Bluetooth stack vendors.
- Case studies: Virtual sniffing and Bluetooth mobile phone makers.
- Virtual sniffing and you. • Where to go for more information.

A.1.2 Why HCI Sniffing and Virtual Sniffing are Useful

Because the *Bluetooth* protocol stack is very complex, a *Bluetooth* protocol analyzer is an important part of all *Bluetooth* development environments. The typical *Bluetooth* protocol analyzer "taps" a *Bluetooth* link by capturing data over the air. For many *Bluetooth* developers sniffing the link between a *Bluetooth* Host CPU and a *Bluetooth* Host Controller—also known as HCI-sniffing—is much more useful than air sniffing.

HCI-sniffing provides direct visibility into the commands being sent to a *Bluetooth* chip and the responses to those commands. With air sniffing a software engineer working on the host side of a Bluetooth chip has to infer and often guess at what their software is doing. With HCI-sniffing, the software engineer can see exactly what is going on. HCI-sniffing often results in faster and easier debugging than air sniffing.

ComProbe software's Virtual sniffing feature is a simple and easy way to perform HCI-sniffing. Virtual sniffing is not limited to just HCI-sniffing, but it is the most common use and this white paper will focus on the HCI-sniffing application of Virtual sniffing.

It is also important to understand that ComProbe software is a multi-mode product. ComProbe software does support traditional air sniffing. It also supports serial HCI sniffing (for the H4 (HCI UART), H5 (3-wire UART) , and BCSP (BlueCore Serial Protocol) protocols), USB HCI (H2) sniffing, SDIO sniffing, and Virtual sniffing. So with ComProbe software nothing is sacrificed—the product is simply more functional than other Bluetooth protocol analyzers.

A.1.3 *Bluetooth* Sniffing History

Frontline has a strong appreciation for the importance of HCI sniffing because of the way we got involved with *Bluetooth*. Because of our company history, we are uniquely qualified to offer a multi-mode analyzer that provides many ways to sniff and supports a wide variety of protocols. This brief *Bluetooth* sniffing history should help you understand our approach to *Bluetooth* protocol analysis.

In the early days of *Bluetooth*, there were no commercially available *Bluetooth* protocol analyzers, so developers built their own debug tools and/or used protocol analyzers that weren't built for *Bluetooth*. Many developers built homegrown HCI analyzers—basically hex dumps and crude traces—because they recognized the need for visibility into the HCI interface and because it was too difficult to build air sniffers. Several companies developed air sniffers because they saw a market need and because they realized that they could charge a high price (USD $25,000 and higher).

Two *Bluetooth* chip companies, Silicon Wave and Broadcom were using Frontline's Serialtest® serial analyzer to capture serial HCI traffic and then they would manually decode the HCI byte stream. This manual decoding was far too much work and so, independently, Silicon Wave and Broadcom each requested that Frontline produce a serial HCI *Bluetooth* analyzer that would have all the features of Serialtest. In response to these requests Frontline developed SerialBlue®—the world's first commercially available serial HCI analyzer.

The response to SerialBlue was very positive. When we asked our *Bluetooth* customers what they wanted next we quickly learned that there was a need for an affordable air sniffer that provided the same quality as SerialBlue. We also learned that the ultimate *Bluetooth* analyzer would be one that sniff air and sniff HCI simultaneously.

As work was progressing on our combination air sniffer and HCI sniffer the functional requirements for *Bluetooth* analyzers were changing. It was no longer good enough just to decode the core *Bluetooth* protocols (LMP, HCI, L2CAP, RFCOMM, and OBEX). Applications were beginning to be built on top of *Bluetooth* and therefore application level protocol decoding was becoming a requirement. For example, people were starting to browse the Internet using *Bluetooth*-enabled phones and PDAs therefore a good *Bluetooth* analyzer would need to support TCP/IP, HTTP, hands-free, A2DP, etc.

For Frontline to support for these higher levels protocols was no problem since they were already in use in other Frontline analyzer products. People have been using Frontline Serialtest serial analyzers and Ethertest™ Ethernet analyzer to troubleshoot TCP/IP and Internet problems for many years.

As we continued to work closely with the *Bluetooth* community we also came across one other requirement: sniffing itself had to be made easier. We took a two-pronged approach to this problem. We simplified air sniffing (and we continue to work on simplifying the process of air sniffing) and we invented Virtual sniffing.

A.1.4 Virtual Sniffing—What is it?

Historically, protocol analyzers have physically tapped the circuit being sniffed. For example, an Ethernet circuit is tapped by plugging into the network. A serial connection is sniffed by passively bridging the serial link. A *Bluetooth* air sniffer taps the piconet by synchronizing its clock to the clock of the piconet Master.

Not only is there a physical tap in traditional sniffing, but the sniffer must have some knowledge of the physical characteristics of the link being sniffed. For example, a *Bluetooth* air sniffer must know the BD_ADDR of at least one piconet member to allow it perform clock synchronization. A serial sniffer must know the bit rate of the tapped circuit or be physically connected to the clock line of the circuit.

With Virtual sniffing the protocol analyzer itself does not actually tap the link and the protocol analyzer does not require any knowledge of the physical characteristics of the link.

In computer jargon, “virtual” means “not real”. Virtual memory is memory that doesn’t actually exist. Virtual reality is something that looks and feels real, but isn’t real. So we use the term Virtual sniffing, because there is sniffing taking place, but not in the traditional physical sense.

A.1.5 The Convenience and Reliability of Virtual Sniffing

Virtual sniffing is the most convenient and reliable form of sniffing and should be used in preference to all other forms of sniffing whenever practical. Virtual sniffing is convenient because it requires no setup to use except for a very small amount of software engineering (typically between one and four hours) that is done once and then never again. Once support for Virtual sniffing has been built into application or into a development environment none of the traditional sniffing setup work need be done.

This means:

- NO piconet synchronization.
- NO serial connection to tap.
- NO USB connection to tap.

Virtual sniffing is reliable because there is nothing that can fail. With Virtual sniffing all data is always captured.

A.1.6 How Virtual Sniffing Works

ComProbe software Virtual sniffing works using a feature called Live Import. Any application can feed data into ComProbe software using Live Import. A simple API provides four basic functions and a few other more advanced functions. The four basic Live Import functions are:

- Open a connection to ComProbe software.
- Close a connection to ComProbe software.
- Send an entire packet to ComProbe software.
- Send a single byte to ComProbe software.

All applications that send data to ComProbe software via Live Import use the first two functions. Usually only one of the two Send functions is used by a particular application. When ComProbe software receives data from the application via Live Import, the data is treated just as if it had been captured on a Frontline ComProbe sniffer. The entire protocol stack is fully decoded.

With Virtual sniffing the data can literally be coming from anywhere. ComProbe software does not care if the data being analyzed is being captured on the machine where ComProbe software is running or if the data is being captured remotely and passed into ComProbe software over an Internet connection.

A.1.7 Virtual Sniffing and *Bluetooth* Stack Vendors

As the complexity of the *Bluetooth* protocol stack increases *Bluetooth* stack vendors are realizing that their customers require the use of a powerful *Bluetooth* protocol analyzer. Even if the stack vendor’s stack is bug free,

there are interoperability issues that must be dealt with.

The homegrown hex dumps and trace tools from the early days of *Bluetooth* just are not good enough anymore. And building a good protocol analyzer is not easy. So stack vendors are partnering with Frontline. This permits the stack vendors to concentrate of improving their stack.

The typical *Bluetooth* stack vendor provides a Windows-based SDK. The stack vendor interfaces their SDK to ComProbe software by adding a very small amount of code to the SDK, somewhere in the transport area, right about in the same place that HCI data is sent to the Host Controller.

If ComProbe software is installed on the PC and the Virtual sniffer is running then the data will be captured and decoded by ComProbe software, in real-time. If ComProbe software is not installed or the Virtual sniffer is not running then no harm is done. Virtual sniffing is totally passive and has no impact on the behavior of the SDK.

One Frontline stack vendor partner feels so strongly about ComProbe software that not only have they built Virtual sniffing support in their SDK, but they have made ComProbe software an integral part of their product offering. They are actively encouraging all customers on a worldwide basis to adopt ComProbe software as their protocol analysis solution.

A.1.8 Case Studies: Virtual Sniffing and *Bluetooth* Mobile Phone Makers

Case Study # 1

A *Bluetooth* mobile phone maker had been using a homemade HCI trace tool to debug the link between the Host CPU in the phone the *Bluetooth* chip. They also were using an air sniffer. They replaced their entire sniffing setup by moving to ComProbe software.

In the original test setup the Host CPU in the phone would send debug messages and HCI data over a serial link. A program running on a PC logged the output from the Host CPU. To implement the new system using Virtual sniffing, a small change was made to the PC logging program and it now sends the data to ComProbe software using the Live Import API. The HCI traffic is fully decoded and the debug messages are decoded as well.

The decoder for the debug messages was written using ComProbe software's DecoderScript feature. DecoderScript allows ComProbe software user to write custom decodes and to modify decodes supplied with ComProbe software. DecoderScript is supplied as a standard part of ComProbe software. In this case, the customer also created a custom decoder for HCI Vendor Extensions.

The air sniffer that was formerly used has been replaced by the standard ComProbe software air sniffer.

Case Study # 2

A second *Bluetooth* mobile phone maker plans to use Virtual sniffing in conjunction with a Linux-based custom test platform they have developed. Currently they capture serial HCI traffic on their Linux system and use a set of homegrown utilities to decode the captured data.

They plan to send the captured serial HCI traffic out of the Linux system using TCP/IP over Ethernet. Over on the PC running ComProbe software they will use a simple TCP/IP listening program to bring the data into the PC and this program will hand the data off to ComProbe software using the Live Import API.

A.1.9 Virtual Sniffing and You

If you are a *Bluetooth* stack vendor, a *Bluetooth* chip maker, or a maker of any other products where integrating your product with ComProbe software's Virtual sniffing is of interest please contact Frontline to discuss your requirements. There are numerous approaches that we can use to structure a partnership program with you. We believe that a partnership with Frontline is an easy and cost-effective way for you to add value to your product offering.

If you are end customer and you want to take advantage of Virtual sniffing, all you need to do is buy any Frontline *Bluetooth* product. Virtually sniffing comes standard with product.

Author: Eric Kaplan

Publish Date: May 2003

Revised: December 2013

Index

A

A2DP Decoder Parameters 27

Aborted Frame 165

About Display Filters 78

About L2CAP Decoder Parameters 32

Absolute Time 171

Adaptive Frequency Hopping

PER Stats 120

Add a New or Save an Existing Template 26

Adding a New Predefined Stack 47

Adding Comments To A Capture File 153

Advanced I/O Settings 21

Advanced System Options 164

Air Data Source Dialog 16

Apply Capture Filters 21, 81

Apply Display Filters 78-79, 81, 83

ASCII 56

character set 176

viewing data in 56

ASCII Codes 176

ASCII Pane 75

Auto-Sizing Column Widths 73

Automatically Request Missing Decoding Information 49

Automatically Restart 162

Automatically Restart Capturing After 'Clear Capture Buffer' 162

Automatically Save Imported Capture Files 162

Autotraversal 47, 49

AVDTP 27, 29-30

AVDTP Override Decode Information 30

Average Throughput Indicators

Average Throughput - Selected 104

Average_Throughput_Indicators 103

B

Baudot 56, 161

Baudot Codes 176

Begin Sync Character Strip 58

Binary 55, 135

Binary Pane 76

BL 178

Bluetooth Timeline 93

Bluetooth® ComProbe 14

Bookmarks 148-149

Boolean 81, 86

BPA 500 - Capture Data 42

Broken Frame 57

BS 178

BT Snoop File Format 173

BT Timeline Legend 108

Btsnoop 173

Buffer 152, 162

Buffer Overflow 162

Buffer/File Options 162

Byte 53, 55, 76, 176

Searching 138

byte export 69

C

Calculating Data Rates and Delta Times 53

Capture Buffer 152, 162, 164

Capture Buffer Size 162

Capture File 40, 152-155, 162, 164
auto-save imported files 162
capture to a series of files 162
capture to one file 162
changing default location of 166
changing max size of 162, 164
framing captured data 48
loading 154
reframing 48
removing framing markers 48
saving 152-153
starting capture to file 40
Capture Filters 21
Capturing 40
Data to Disk 40
CFA file 153-154
Changing Default File Locations 166
Character 135, 177
Character Pane 75
Character Set 56, 176-177
Choosing a Data Capture Method 4
Clear Capture Buffer 162
CN 178
Color of Data Bytes 77
Colors 77
Comma Separated File 158
Compound Display Filters 81
Confirm CFA Changes 154
Context For Decoding 49
Control Characters 177
Control Signals 57, 168
Control Window 13, 162
Configuration Information 9
Conversation Filters 83
CPAS - Capture Data 42
CPAS Control Window Toolbar 8
CR 178
CRC 53
CSV Files 158
Custom Protocol Stack 45, 47
Custom Stack 46-47
Customizing Fields in the Summary Pane 73

D

D/1 178
D/2 177
D/3 177
D/4 177
D/E 178
Data 53, 151-152
Capturing 40
Data Byte Color Denotation 77
Data Errors 144
Data Extraction 127
Data Rates 53
Decimal 55
Decode Pane 74
decoder 179
Decoder Parameters 23
DecoderScript 179
Decodes 23, 45, 50, 59, 65, 74, 132
Default File Locations 166
Delete a Template 26

Deleting Display Filters 83
Delta Times 53
Device Discovery Access Code 21
Direction 83
Directories 166
Disabling 162
Discontinuities 107
Display Filters 78, 84-86
Display Options 172
DL 178
Dots 74
Driver 179
Duplicate View 51, 53, 68-69

E

E/B 178
E/C 178
Easy Protocol Filtering 93
EBCDIC 56
EBCDIC Codes 177
EIR 44
EM 177
Encryption 19
EQ 178
Errors 144, 168
ET 177
Event Display 50, 68, 159
Event Display Export 159
Event Display Toolbar 51
Event Numbering 176
Event Pane 76
Event Symbols 57
EX 177
Exclude 81
Exclude Radio Buttons 81
Expand All/Collapse All 74
Expand Decode Pane 69
Export
Export Baudot 161
Export Events 159
Export Filter Out 161
Export Payload Throughput Over Time 106
Extended Inquiry Response 44

F

F/F 177
FCSs 53
Field Width 73
File 151-154, 162
File Locations 166
File Series 162
File Types Supported 154
Filtering 92
Filters 78-79, 81, 83-86, 93
Find 132, 135-136, 138-139, 144
Find - Bookmarks 146
Find Introduction 131
Font Size 58
Frame Display 59, 62, 65-66, 68-69, 73-77
Frame Display - Change Text Highlight Color 77
Frame Display - Find 66
Frame Display Status Bar 65
Frame Display Toolbar 62
Frame Display Window 60

Frame Recognizer Change 57
Frame Slicing Settings 22
Frame Symbols 74
Frame Information on the Control Window 9
Freeze 54
FS 178
FTS Serial Driver 179
FTS4BT USB Datasource Dialog 15

G

Go To 138
Green Dots in Summary Pane 74
GS 177

H

Hardware Settings 14
Hex 55
Hexadecimal 75
Hiding Display Filters 83
Hiding Protocol Layers 65
High Resolution Timestamping 171
HT 178

I

I/O Settings 17
I/O Settings Change 57
Icons in Data on Event Display 57
Importable File Types 155
Importing Capture Files 154
INCLUDE 81
Include/Exclude 81

K

Keyboard 15
Keys 20

L

L2CAP 32
L2CAP Override Decode Information 33
Layer Colors 77
LF 178
Link Key 19, 42
LSB 20, 44
Live Update 54
Logical Byte Display 66
Logical Bytes 66
Long Break 57
Low Power 58

M

Main Window 7
Message Sequence Chart 109
Message Sequence Chart - Find and Go To 114
Message Sequence Chart - Go To 115
Microsoft® Keyboard 15
Minimizing 13
Missing Bluetooth Clock 108
Missing Decode Information 29, 35
Mixed Channel/Sides 56
Mixed Sides Mode 56
Modem Lead Names 168
Modify Display Filters 85-86
Multiple Event Displays 53
Multiple Frame Displays 69

N

NK 178
Node Filters 83
Nonprintables 161

Notes 153
NU 177
Number Set 55
Numbers 176

O

Object Throughput Stats File 106
Octal 55
One_Second_Throughput_Indicators 104
Open 53
  Open Capture File 154
Options 162, 164-165, 169
Other Term
  Subterm 12
Override Decode Information 30, 33, 36
Overriding Frame Information 49
Overrun Errors 145

P

Packet Error Rate (PER Stats) 118
  Packet Error Rate 118
  PER Stats Scroll Bar 124
Packet Timeline 98, 107
Packet Timeline Menu Bar 99
Packet_Depiction 94
Packet_Navigation_and_Selection 98
Packet_Timeline_Introduction 93
Packet_Timeline_Visual_Elements 101
Panes 69
Pattern 134
Pause 40
Performance Notes 172
Printing 157
Printing from the Frame Display 155
Progress Bars 175
Protocol
  Protocol Layer Colors 77
  Protocol Layer Filtering 92
Protocol Stack 46-47, 49

Q

Quick Filtering 92

R

Radix 55, 75
Reframe 48
Reframing 48
Relative Time 136, 171
Remove
  Bookmarks 148-149
  Columns 73
  Custom Stack 46
  Filters 83-84
  Framing Markers 48
Reset Panes 69
Resolution 170
Resumed 57
Resynchronization Options 21
Revealing Protocol Layers 65
RFCOMM 34-36
RFCOMM Missing Decode Information 35
RFCOMM Override Decode Information 36
RS 177

S

Save 80, 151-153
Save As 151

Saving 152-153
Display Filter 79
Imported Capture Files 162
Saving the Capture File using File > Save or the Save icon 151
scatternet 22
Search 132, 134, 136, 138-139, 144, 147-149
binary value 134
bookmarks 149
character string 134
errors 144
event number 139
frame number 138
hex pattern 134
pattern 134
special event 139
timestamp 136
wildcards 134
Seed Value 53
Serial Driver 179
Short Break 58
Side Names 168
Sides 168
Sorting Frames 66
Special Events 139
Start 57
Start Up Options 165
Summary 71
Summary Pane 71, 73-74
Sync Dropped 58
Sync Found 58
Sync Hunt Entered 58
Sync Lost 58
Synchronization 17-18, 21, 68
Synchronization Mode 18
System Settings 162, 164

T

Technical Support 181
Test Device Began Responding 58
Test Device Stopped Responding 58
Throughput Displays
Throughput_Displays 103
Throughput Graph 105
Timestamp 148, 170-171
Timestamping 148, 169, 171
Timestamping Disabled 58
Timestamping Enabled 58
Timestamping Options 162, 169
Timestamping Resolution 170
Timestamps 169, 171
Transferring Packets 40
Truncated Frame 58

U

Underrun Error 58
Unframe 48
Unframe Function 48
Unframing 48
Unknown Event 58
Using more than one additional ComProbe when sniffing an FTS4BT Link 22

V

vendor specific decoder 179
Viewing Data Events 54

W

Wrap Buffer/File 162

Z

Zooming

Zooming 103